

ALLEN&HEATH

Parts identification sheet


XONE:4D

How to order parts

Parts must be ordered from our distributor in your territory. A list of international distributors can be viewed at <http://www.allen-heath.com/UK/distributors.asp>

UK parts must be ordered through an appointed A&H dealer or service centre. A list of UK service centres can be viewed at http://www.allen-heath.com/UK/service_centres.asp

EXTERIOR PART

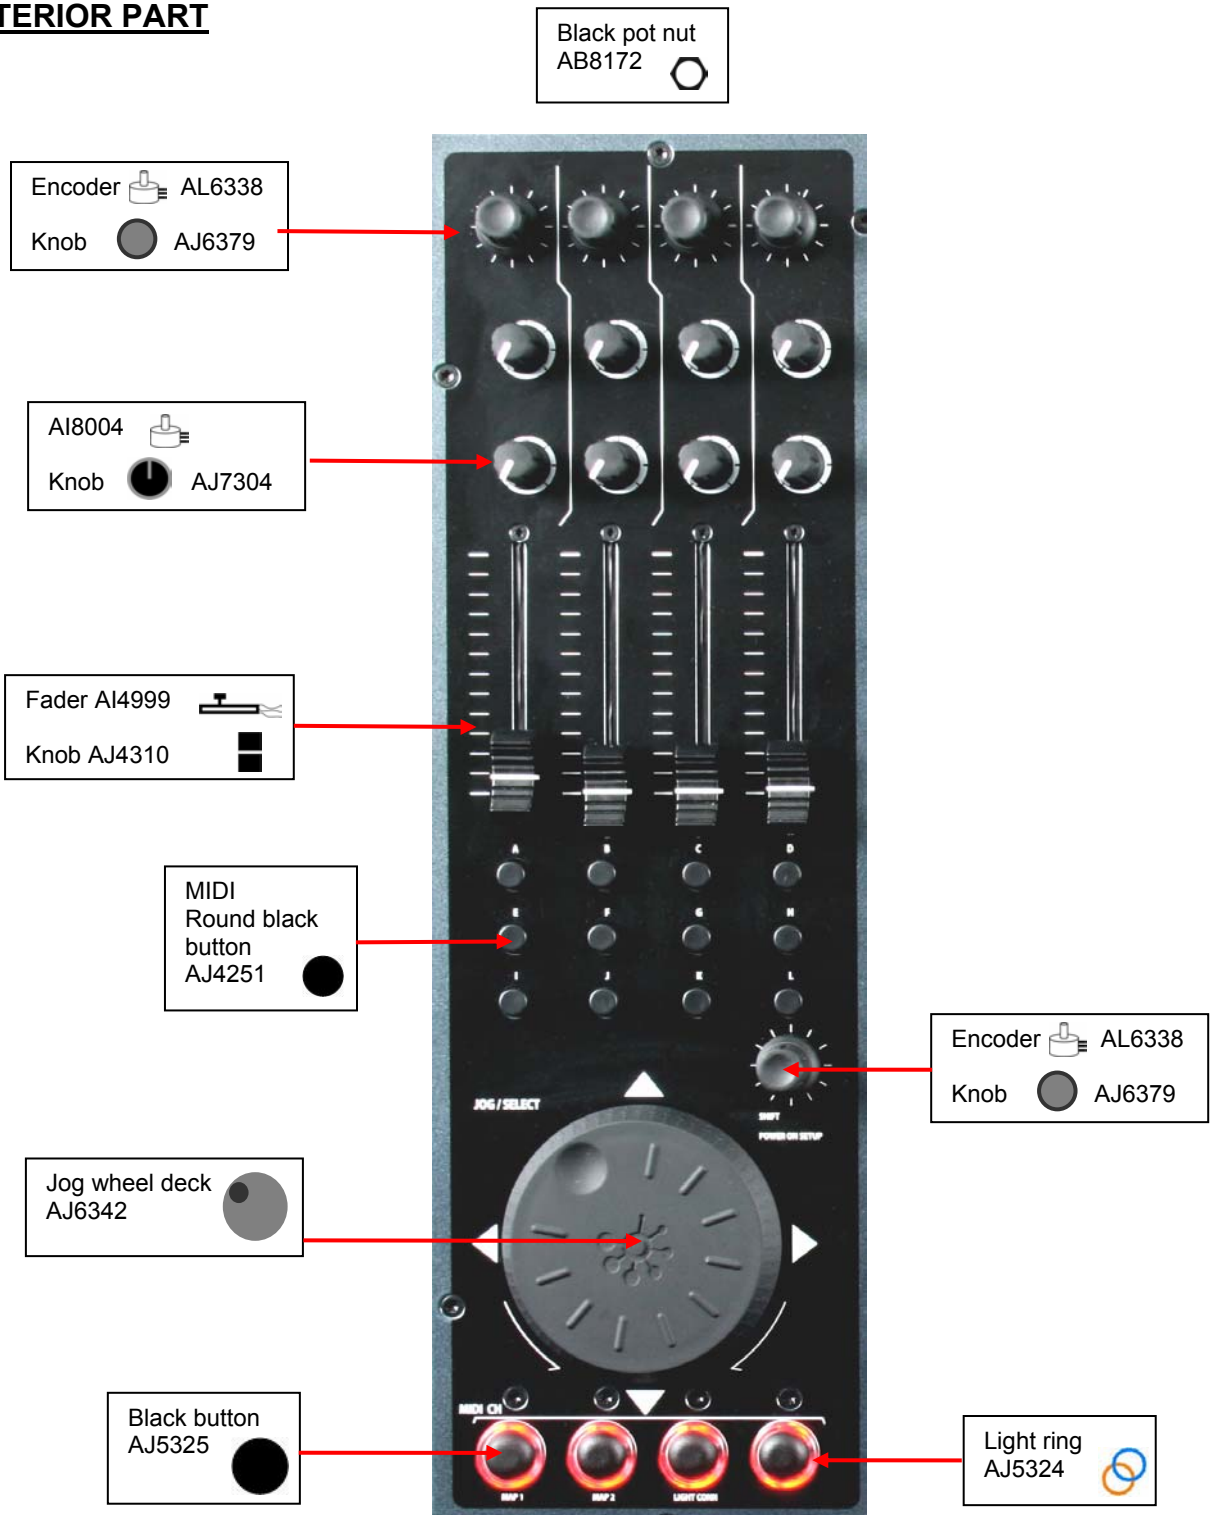



BPM display
AA6757

FX RTN AI8007
Knob AJ7304

LFO Depth AI8003
Knob AJ7304

Xfade ON button
AJ6904

Xfader contour AI8007
Knob AJ7304

Black button
AJ5325

FREQ AI8004
Knob AJ7305

Rec to FX2
AJ3438

Mix AI8007
Knob AJ7304

Booth AI8007
Knob AJ7304

FX1, FX2 Round black button
AJ4251

Cue / Add mix AI8007
Knob AJ7304

Level AI8007
Knob AJ7304

RES AI8007
Knob AJ7305

Light ring
AJ5324






FX1 & 2  AI8007
 Knob  AJ7304



PH, LN, SC
 Round black
 button
 AJ4251 

 

HF, MF, LF  AI8007
 Knob  AJ7305







Pre black
 button
 AJ7286 

FX, CH,
 Pre button
 AJ5388 



Level  AI8006
 Knob  AJ7304


Up fader 003-860 
 Knob AJ5320 

X- fader 003-579 
 Knob AJ5320 

 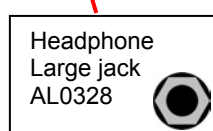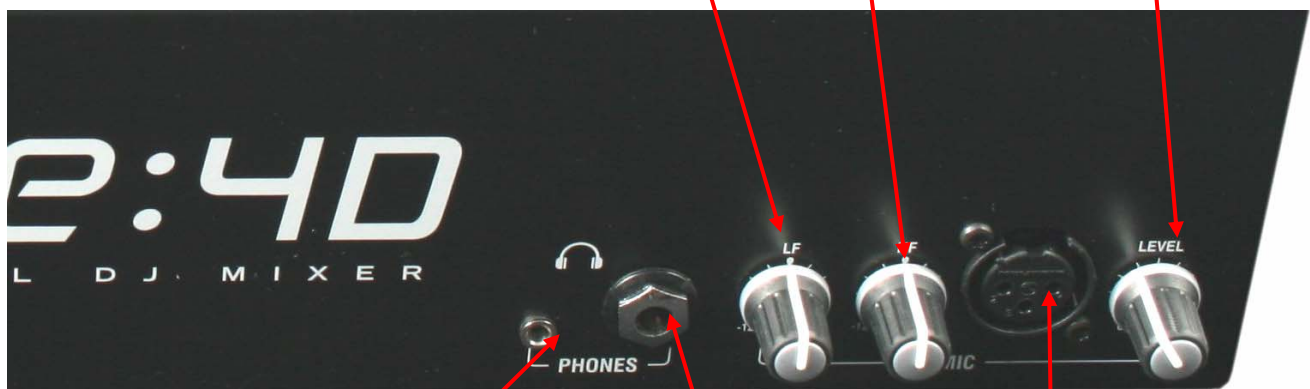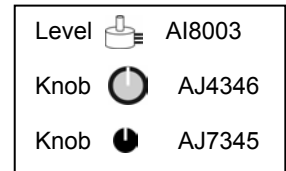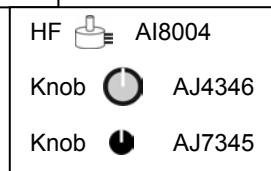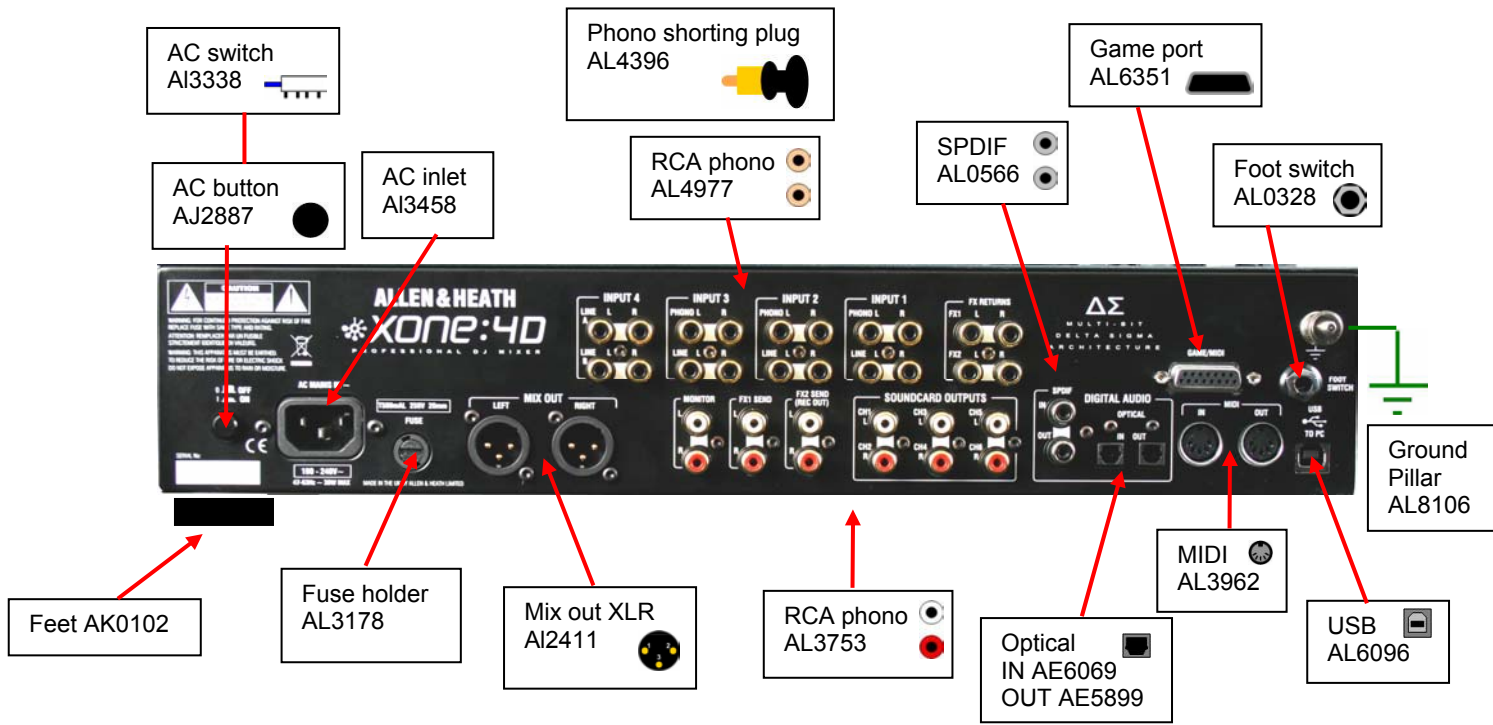

INTERIOR PARTS

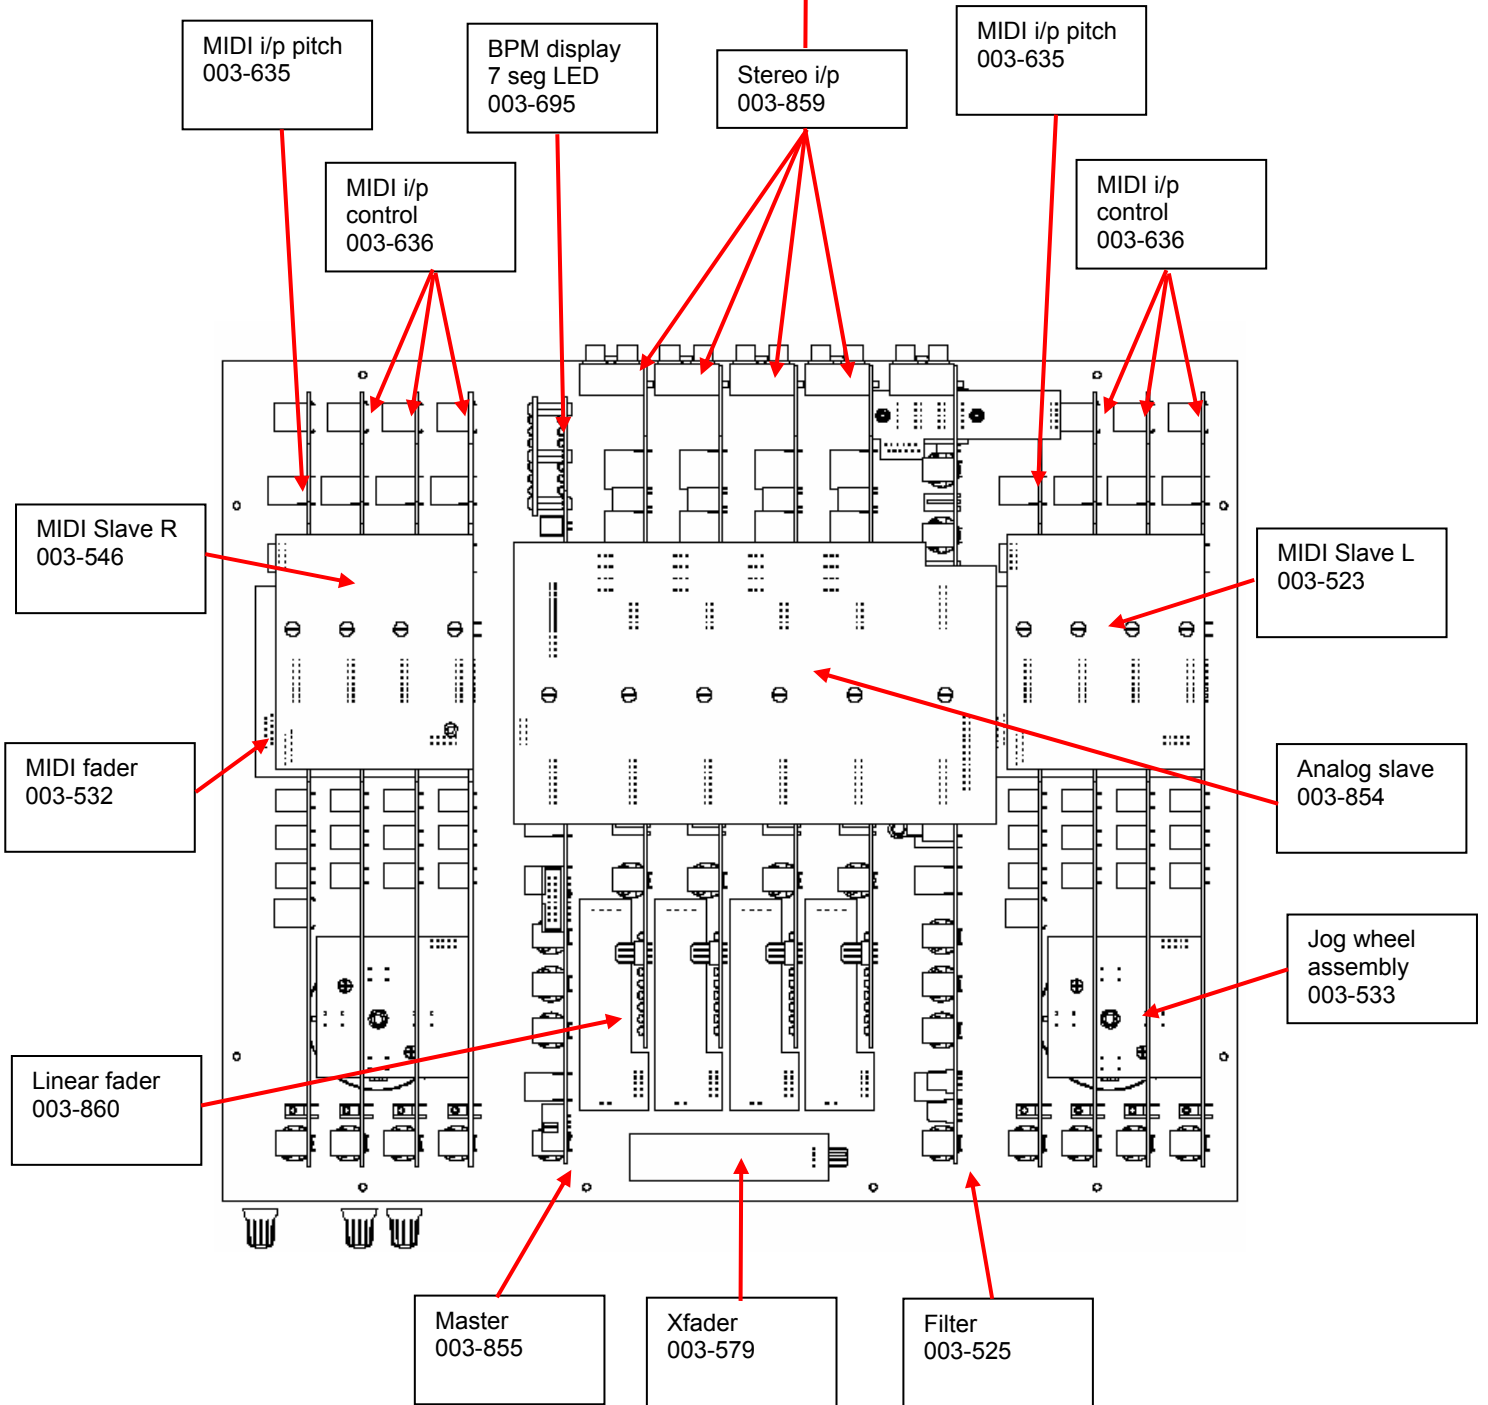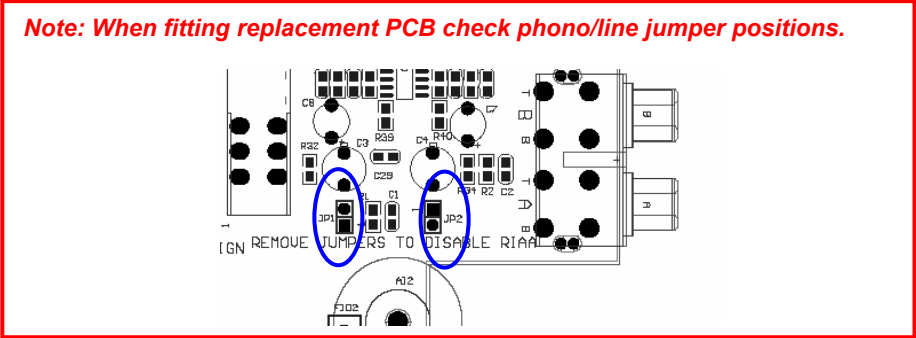

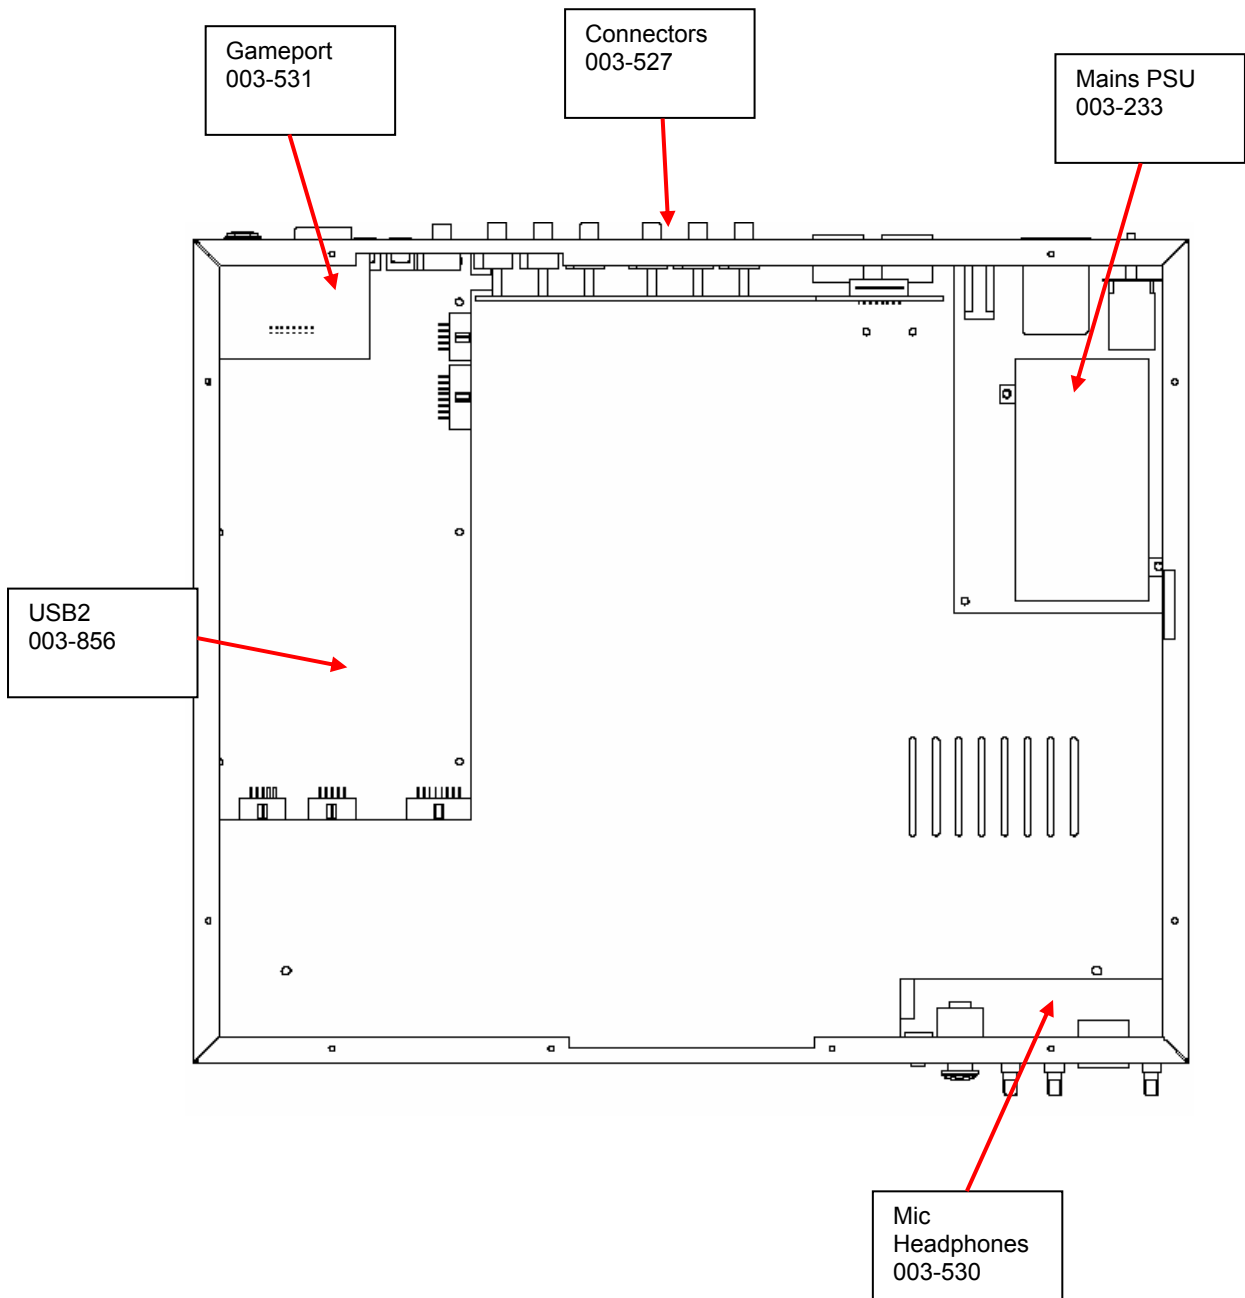

HARNESSES:

AL5904- HEADPHONE → MASTER

AL5904- BPM 7 SEGMENT DISPLAY → USB CONTROL

AL5904- ANALOGUE SLAVE → POWER SUPPLY

AL5904- JOGWHEEL (L) → MIDI SLAVE (L)

AL5904- JOGWHEEL (R) → MIDI SLAVE (R)

AL4606- CONNECTOR → MASTER

AL4607-MIDI SLAVE (L) → USB CONTROL

AL6592- MIDI CONTROL (R) → USB CONTROL

AL7338- ANALOGUE SLAVE → USB CONTROL

AL6098- GAMEPORT → USB COTROL

AL3817- LINEAR FADER → INPUT

AL3817- X FADER → FILTER

AH2228 MIDI FADER → MIDI SLAVE