

# Projection Viewing Surface Care & Maintenance Instructions

**Please Note: Cleaning should be undertaken only when needed and with great care. Not all stains can be removed. Please take care to protect your screen from damage to minimize the need for these procedures.**

## OptiView™

### **Matt White XT1000E, Contrast Grey XH800E, Contrast White XH1100E**

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.

### **Glass Beaded CH3200E**

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use Armor All®. These substances will damage a glass beaded viewing surface.

### **High Performance XS850E**

Clean surface with a soft, non abrasive cloth, wiping gently in a horizontal motion across the screen. If dry cloth does not work, soak cloth in warm water (less than 105° F/40°C) and squeeze until cloth is only damp (not dripping water). Gently wipe screen surface in a horizontal motion. If cloth soaked in warm water does not work then take damp cloth and apply a small amount of a mild soap or detergent. Gently rub several times in a horizontal motion over the affected area several times. Rinse soap out of cloth and squeeze until cloth is only damp. Gently wipe away soap or mild detergent. Perform this step until visible signs of cleaning agent are no longer seen. Do not use alcohol, acetone, organic solvents, alkaline-based cleaners or acidic-based cleaners.

### **Pearl White CH1900E, Argent White XH1500E, Radiant CT2900E, Contrast Radiant CH2700E**

Using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. Do not use a circular motion. To clean a stubborn stain or a sticky surface, a solution of mild dishwashing liquid diluted with warm water can also be used following the same procedure as for water, and allow it to air dry.

### **Ecomatt XT700E**

Blow off excess debris with air or use a feather duster, or using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction.

## OptiFlex™

### **Matt White XT1000V, Grey XH600V**

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.

### **Pearl White CH1900V**

Clean with a very soft brush or cloth and carefully dust the surface. Do not use soap, water, solvents or abrasives. Do not use Armor All®.

## ClearSound™

### **Grey Weave XH600E, NanoPerf XT800V, Perf XT900V, Perf XT950E, White Weave XT900E**

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.

## CineFlex™

### **CineFlex Dual XT600V, CineFlex MH800V, CineFlex CH1200V**

Gently clean this rear projection material with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.

## Rigid Rear Screens

### **IRUS, Cinescreen®, DiamondScreen™**

Rigid rear screens can be cleaned with a soft, lint free cloth to remove dust from the surface. Remove soil marks with a cloth or sponge and mild soapy water. Wring free of excess moisture before applying, rinse and blot dry. Do not use solvent or abrasives. Do not use Armor All®.

# DRAPER®

These are basic cleaning tips for dust or dirt. For more information on cleaning stains, please contact Draper, Inc.

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999

www.draperinc.com ■ fax 765-987-7142

Copyright © 2012 Draper Inc. Form Care&Maintenance\_Inst12 Printed in U.S.A.

Cinescreen® is a registered trademark of Draper, Inc.  
Armor All® is a registered trademark of Armor All Products Corporation