


1. use a network cable to connect TX/ RX LAN port to PC LAN port.


Get power TX/RX with 5V/1A.

2. Change the PC's IP address to below data (same network segment with our current LKV373):

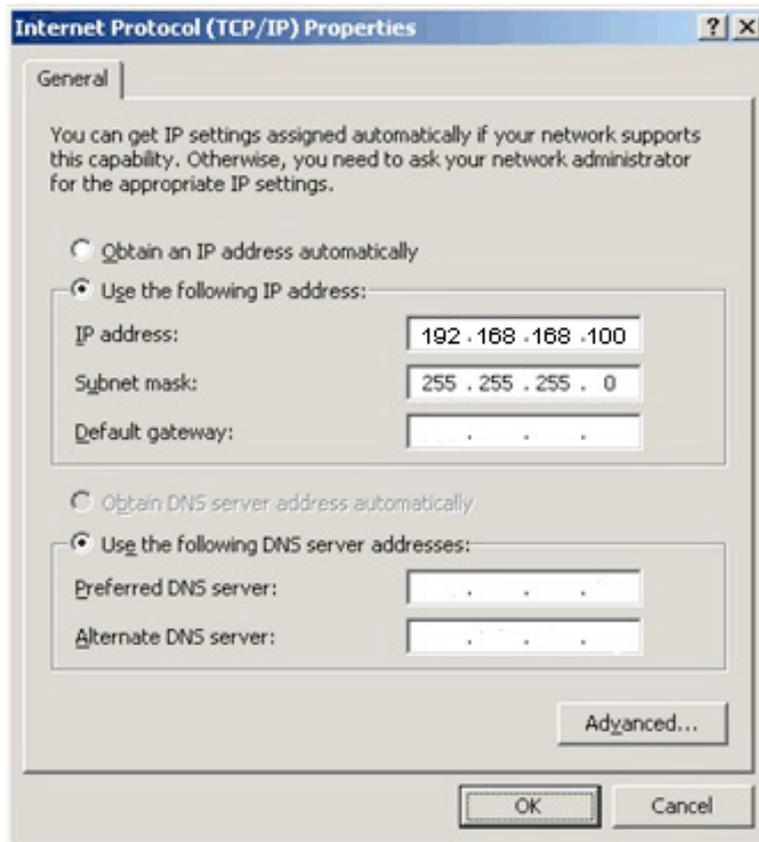

3. Open IE explorer and input 192.168.168.55 for TX (or 192.168.168.56 for RX).

Please refer to below picture:

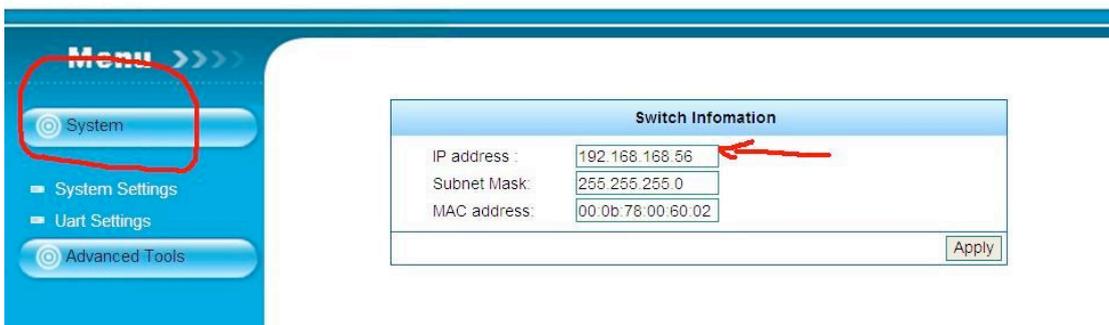

4, You can change TX / RX IP address there.

Type the new IP address of TX or RX in the “ IP address” column and then apply.

TX: change 192.168.168.55 to 192.168.1.55

RX: change 192.168.168.56 to 192.168.1.56