



\* Only 4 outputs are available when using the -R2S split rear module.

\*\* The function of BNC 9 depends on how JP2 is set.