



**IP VIDEO DECODER
NVD-20
Quick Start Guide**

www.datavideo.com

Contents

- Warnings and Precautions 4**
- Warranty 5**
 - Standard Warranty 5
 - Two Year Warranty 5
 - Disclaimer of Product & Services 6
 - Disposal..... 6
 - Packing List 6
- Product Overview 7**
 - Features 7
- Front Panel 8**
- Rear Panel 9**
- Workflow options 10**
- How to find the NVD-20 on an IP network..... 11**
 - How to use the NVD-20 IP Finder utility software 11
- NVD-20 Login using a web browser 12**
 - Default Login details..... 12
- NVD-20 web browser Home page 13**
 - Settings option..... 13
- Settings > Audio Setup 13**
- Settings > Display Setup 14**
- Settings > Network Setup 15**
- Settings > Live Stream Setup..... 16**
- Settings > Account Setup..... 17**
- Decoding video from the NVS-20 encoder 18**
- Decoding other stream types 19**
- Automatic Firmware Updates..... 20**

Port Forwarding on your firewall / router	20
Setup Diagrams	21
Specifications	23
Service & Support	24

Warnings and Precautions

1. Read all of these warnings and save them for later reference.
2. Follow all warnings and instructions marked on this unit.
3. Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
4. Do not use this unit in or near water.
5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord's rating.
10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.
13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered by this warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- Cables & batteries are not covered under warranty.
- Warranty only valid within the country or region of purchase.
- Your statutory rights are not affected.



Two Year Warranty


- All Datavideo products purchased after 01-Oct.-2008 qualify for a free one year extension to the standard Warranty, providing the product is registered with Datavideo within 30 days of purchase. For information on how to register please visit www.datavideo.com or contact your local Datavideo office or authorized Distributors
- Certain parts with limited lifetime expectancy such as LCD Panels, DVD Drives, Hard Drives are only covered for the first 10,000 hours, or 1 year (whichever comes first).

Any second year warranty claims must be made to your local Datavideo office or one of its authorized Distributors before the extended warranty expires.

Disclaimer of Product & Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

Disposal

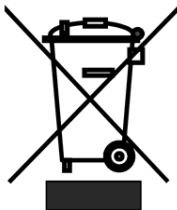

For EU Customers only - WEEE Marking

This symbol on the product indicates that it will not be treated as household waste. It must be handed over to the applicable take back scheme for the recycling of Waste Electrical and Electronic Equipment. For more detailed information about the recycling of this product, please contact your local Datavideo office.

Packing List

The following items should be in the box. If any items are missing please contact your supplier.

Item No.	Description	Quantity
1	NVD-20 Unit	1
2	Mains Power Supply	1
3	Instruction Manual	1
4	CD Containing IP Finder Software	1

Product Overview

The Datavideo NVD-20 is a wired IP video decoder with HDMI, Composite and analogue audio outputs.

The NVD-20 decodes all common protocols including RTP/RTSP, RTMP, UDP, TCP, HTTP, HLS and MPEG-TS and can output SD/HD video at resolutions up to 1080p60.

The NVD-20 is the perfect partner to the Datavideo NVS-20 IP encoder allowing full HD point to point video links over Ethernet, WiFi or the Internet.

That's Datavideo, sharing the value!

Features

- Operates on standard 10/100Mb Ethernet networks
- Excellent image quality with very low delay
- Unicast and multicast support
- Supports RTP/RTSP (Unicast/Multicast), RTMP, UDP (Unicast/Multicast), TCP, HTTP, HLS and MPEG-TS
- Feature-rich WebUI for configuration and control
- Built in video scaler
- Supports Full HD video and audio
- Supports simultaneous digital embedded and analogue audio output
- Small form factor, rack mountable using RMK-1
- 12V DC input

 
Video Outputs – Choose from:

- HDMI
- Composite [CVBS via BNC socket]

Audio Outputs:



- Unbalanced RCA Phono sockets
- Embedded HDMI audio

Front Panel




Power On/Off Switch
Switches the power On / Off

 Rear Panel

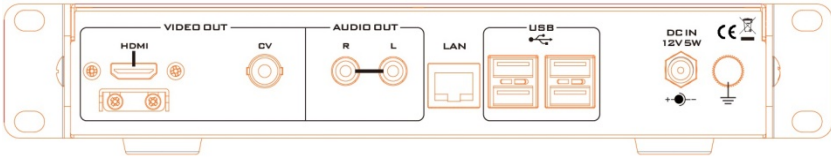

AUDIO OUT (RCA)

RCA stereo for a line level analogue audio.

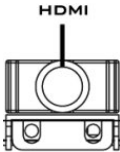


HDMI OUT

HDMI digital signal output connector.



CVBS OUT (BNC)

 Composite video output



Ethernet Port (RJ-45)

10/100M base Ethernet Network interface



DC In Socket


Connect the supplied 12V PSU to this socket. The connection can be secured by screwing the outer fastening ring of the DC In plug to the socket.



USB

Used for connecting a USB mouse, required to install the automatic updates.

Workflow options

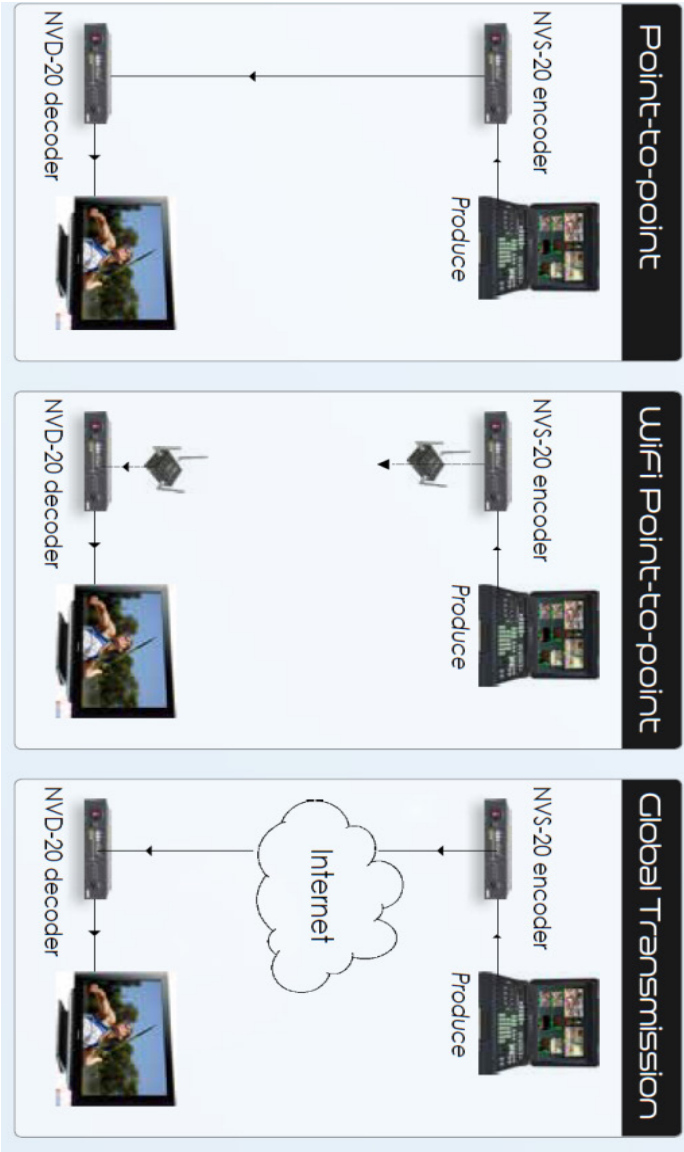


How to find the NVD-20 on an IP network

By default, once the physical connections have been made, the **NVD-20 will try to obtain an IP Address from a DHCP network server.** As we will see this can be changed later to a Static IP address if required.

How to use the NVD-20 IP Finder utility software

Datavideo supply a free, *Windows based* utility, called **NVD-20 IP Finder**.

The first time this software is used on the computer you may need to allow it permission through your computers firewall / anti-virus software in order for it to be able to scan or search the local network.

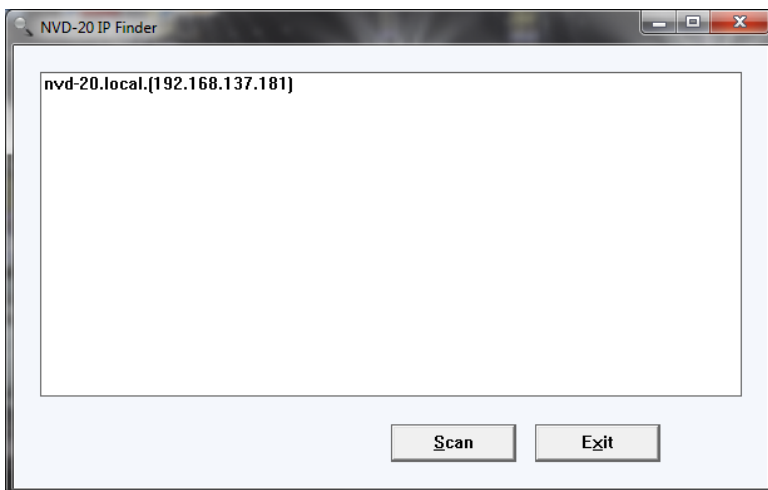


When the utility scans the LAN that the computer is connected to, it displays the current IP address for any NVD-20 units found on this local IP network. Double clicking on the device listed will automatically open your computers default web browser and navigate to the login page of the NVD-20.

If you are using an Apple computer then you can use an alternative utility app such as Fing or Network Analyzer Lite.

NVD-20 Login using a web browser

Type the numbers of the IP address for the NVD-20 into the search bar of the browser. Remember to include the dots in between the numbers. When entered you will then be asked to login to the NVD-20.

Alternatively you can simply double click the IP address listed in the NVD-20 IP finder.

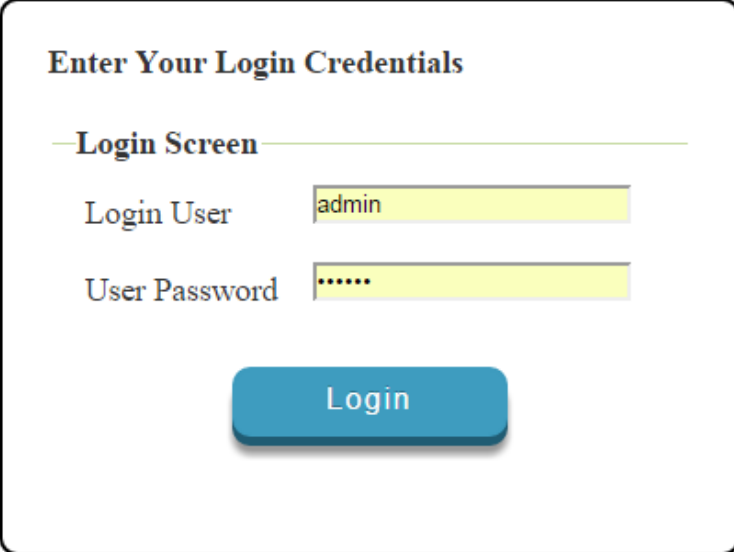A screenshot of the NVD-20 login screen. The title "Enter Your Login Credentials" is at the top. Below it is a horizontal line with "Login Screen" in the center. There are two input fields: "Login User" with the text "admin" and "User Password" with six dots. A blue "Login" button is at the bottom.

Enter Your Login Credentials

Login Screen

Login User

User Password

Login

 
Default Login details

All NVD-20 units are delivered from the factory with the same default user name and password. This can be changed at a later stage to suit your needs.

User = admin **Password** = 000000 [Zero six times]

Please Note: We recommend the Mozilla Firefox web browser

NVD-20 web browser Home page



Welcome to NVD-20 Web Server!

Please click on the Settings menu to configure the decoder for the first time.

By default this device will output via the HDMI interface with embedded audio, for optimal performance please set the output resolution and frame rate to match the source video.

Once we have logged into the NVD-20 we are presented with the **Home** page.

Settings option

When clicked, the Settings option tab will open a new page. There are five sections of settings which can be looked at. These are: **Audio Setup**, **Display Setup**, **Network Setup**, **Live Stream Set Up** and **Account Setup**.

Settings > Audio Setup

By default the NVD-20 will output audio over the digital HDMI connection and the analogue stereo connections. Alternatively you can choose to output digital or analogue audio only.



Settings > Display Setup

By default the NVD-20 will output video over the digital HDMI port at a resolution of 720P 50 fps and YUV colourspace.

Please note: The set resolution is only applied when the stream us decoding, the device will output your monitors preferred resolution as it boots.

← → ↺ 🏠

192.168.1.74/#display

datavideo®

Sharing the Value

Home

Settings

Logout (admin)

AUD

Audio Setup

VID

Display Setup

NET

Network Setup

LIVE

Live Stream Setup

A/C

Account Setup

Display Configuration

Warning , not all resolutions will work on your display

Choose Output

Output To

HDMI (Digital)

HDMI

Screen

720p 50

Resolution

HDMI

YUV

Colourspace

Misc. Options

☐ Deinterlace Source

☒ Disable automatic HDMI clock adjustment

Save Changes

Output To

Here you can select to output video digitally over HDMI or over the SD analogue composite connection.

HDMI (Digital)

When digital is selected you can select a screen resolution from SD PAL/NTSC right up to HD 1080P60. The NCP-20 will scale your source video to match the output resolution however the aspect ratio (4:3 or 16:9) should be matched to avoid black space on the output, for optimal performance match the output resolution to the source video. The colour space can be switched between YUV (YCbCr) and RGB, most video equipment will use the YUV colour space however if the colors appear wrong on your display please try RGB.

Composite (Analogue)

When analogue is selected the UI will change and you can only select between PAL and NTSC resolution with a 4:3 or 16:9 aspect ratio.

Display Configuration

Warning , not all resolutions will work on your display

Choose Output

Output To

Composite

Composite

Mode



Aspect Ratio

Settings > Network Setup

By default the NVD-20 will obtain its IP address automatically from a DHCP server.

If you intend to use the NVD-20 directly connected to a PC or network without a DHCP server then you should assign a manually set IP address by selecting 'Static Configuration'.

We recommend that only advanced users who are aware of IP addressing set the manual 'Static Configuration' IP address. Your local network administrator or I.T. support may be able to help you with this.



[Home](#)[Settings](#)[Logout \(admin\)](#)

AUD

Audio Setup

VID

Display Setup

NET

Network Setup

LIVE

A/C

Network Configuration. Mandatory Fields marked *

IPv4 Configuration

Network Type ☐ Automatic Configuration(DHCP)
☒ Static Configuration

Static IPv4

IP Address

Subnet Mask

Gateway IP

DNS1

DNS2

Save Changes

Settings > Live Stream Setup

From this page you can configure the source stream for the decoder.
The NVD-20 supports the following stream types:

- RTSP over UDP (Unicast / Multicast)
- RTSP over TCP
- RTSP over HTTP
- MPEG-TS over UDP
- RTMP over TCP
- UDP raw (Unicast/Multicast)
- HLS over HTTP

Stream Configuration.

— Choose Input Stream —

Input Stream

Buffer Size seconds

RTSP Protocol

Save Changes

Input Stream

Enter the URL for the source stream here

Buffer Size

This determines how much video is buffered before playback starts, the default 0.3 seconds is fine for streaming over Ethernet or but a larger buffer may be required to achieve smooth video when streaming over the internet or WiFi.

RTSP protocol

Only valid if a RTSP stream is being used, the transport protocol can be manually specified.

Settings > Account Setup

The NVD-20 has one admin user account and password. This account is used to keep the NVD-20 secure and gives access to the streaming settings.

Default user name = **admin** Default password = **000000** [Zero six times]

This section describes how to change the default username and password shown above to something new which is more secure.

—User Credentials Management—

[admin](#)

—Manage User - admin—

User	admin
Password	<input type="password"/>
Confirm Pass.	<input type="password"/>

1. Log in with the NVD-20 server as normal using the computer web browser.
2. Click **Setting**
3. Click **Account Setup**
4. Click admin and then enter the new **user name and password**.
5. Click 'Save Changes'

Please Note: Please be careful and memorize the new login details as the old or default login is deleted during this process.

Decoding video from the NVS-20 encoder

The decode video from the NVS-20 the NVD-20 must be on the same local network (Ethernet/WiFi) or be able to access the NVS-20s stream over the internet.

When the NVS-20 is in RTSP TCP/UDP mode (Recommended for LAN)

Simply copy the RTSP URL from the 'Live' tab of the NVS-20 and enter it into the 'Input Stream' field on the NVD-20. When streaming over LAN it is recommended to set the NVS-20 in RTSP (TCP/UDP) mode.

When the NVS-20 is in RTMP mode Local server mode

Simply copy the RTSP URL from the 'Live' tab of the NVS-20 and enter it into the 'Input Stream' field on the NVD-20

When the NVS-20 is in HLS mode

The NVS-20 does not currently publish its full HLS stream URL. To decode its local HLS stream please copy the URL below replacing the IP address with that of your NVS-20 unit and enter it into the 'Input Stream' field on the NVD-20.

<http://admin:000000@192.168.16.69/hls/live.m3u8>

If on the NVS-20 you have changed the password from the default of 000000 please also replace the six zeros in the URL above with your new password

Please Note: When in HLS mode the buffer size should be set to 0.7 seconds or higher.

Decoding other stream types

To decode other stream types such as UDP multicast simply enter the stream URL into the 'Input Stream' field of the NVD-20.

Listening for a Pushed UDP Stream

To listen for a pushed UDP stream enter the following URL into the 'Input Stream' field of the NVD-20.

UDP://@:9710


Replacing 9710 with the port number of the pushed stream.

Automatic Firmware Updates

The NVD-20 features an automatic update system to avoid the need for the user to have to manually install firmware upgrades.

The NVD-20 will automatically check for updates whenever it is connected to the internet.

You will be notified if an update is available when the unit is next started. A firmware update question will appear for 10 seconds on the selected video output (HDMI or Composite), to update simply click on the Yes button and then follow the prompts.

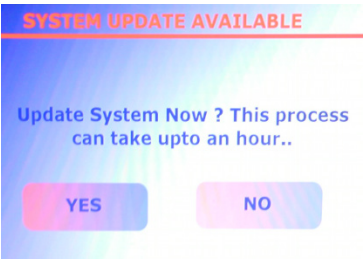

Please note: A USB mouse must be connected to install updates.


Port Forwarding on your firewall / router


So that an NVS-20 video stream can be seen on the internet (beyond the default gateway) certain network related ‘ports’ should be opened on your router or firewall. Your local network administrator or I.T. support should be able to help you with this.

Enable the “port forwarding” function or open below ports within the router settings.

Web Server/HLS	RTSP	RTMP
80	8554 (over TCP)	1935 (RTMP)
	8000 (over HTTP)	8080 (RTMPT)
	8080 (over HTTP)	8081 (RTMPS)

Setup Diagrams

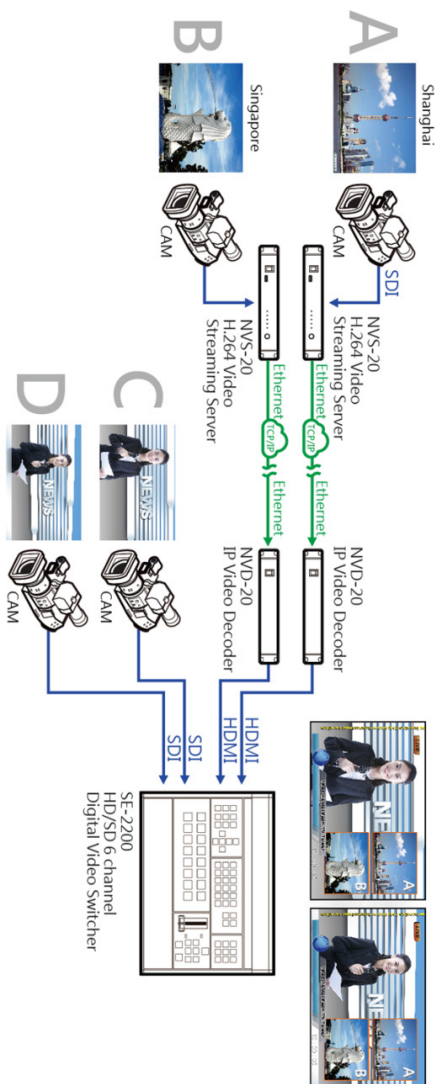

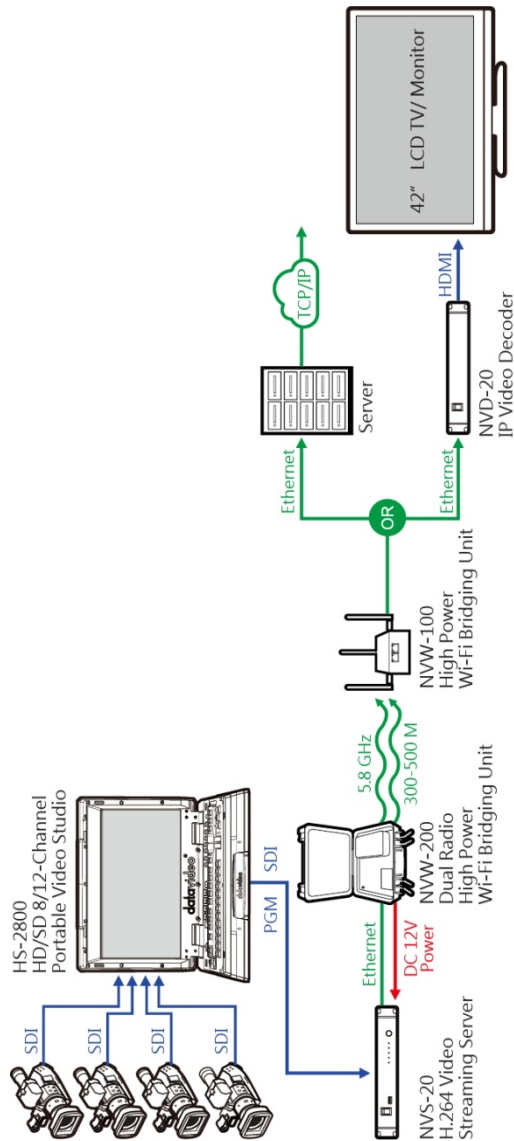

Specifications

Audio/Video Input	Stream Input <ul style="list-style-type: none">• RTSP over UDP (Unicast / Multicast)• RTSP over TCP• RTSP over HTTP• MPEG-TS over UDP• RTMP over TCP• UDP raw (Unicast/Multicast)• HLS over HTTP
Audio Output	2 x Phono Connectors
	HDMI embedded audio
Video Output	Composite (analogue)
	HDMI (digital)
Network Feature	1x RJ-45 Female (10/100M Ethernet) DHCP/Static IP
Supported Video Resolution	480i 60 (NTSC) 576i 50 (PAL) 720 @ 50p / 60p 1080 @ 50i / 60i 1080 @ 24p / 25p / 30p / 60p
Control	Web browser UI for configuration and control
Update	Automatic firmware upgrade
Power	Input AC 100 ~ 240V Switching Adaptor Output DC 12V / 0.5 A
Environmental Conditions	Operating temperature. : 0~50°C Storage temperature : -10~60°C

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

Datavideo USA

Datavideo Corporation
7048 Elmer Avenue.
Whittier, CA 90602,
U.S.A.
Tel: +1-562-696 2324
Fax: +1-562-698 6930
E-mail: sales@datavideo.us

Datavideo Taiwan

Datavideo Technologies Co., Ltd
10F, No. 176, Jian 1st Rd., Chung Ho
District, New Taipei City 235, Taiwan,
R.O.C.
Tel: +886-2-8227-2888
Fax: +886-2-8227-2777
E-mail: service@datavideo.com.tw

Datavideo Hong Kong

Datavideo Hong Kong Ltd
G/F, 26 Cross Lane
Wanchai, Hong Kong
Tel: +852-2833-1981
Fax: +852-2833-9916
E-mail: info@datavideo.com.hk

Datavideo Europe

Datavideo Technologies Europe BV
Floridadreef 106
3565 AM Utrecht,
The Netherlands
Tel: +31-30-261-96-56
Fax: +31-30-261-96-57
E-mail: info@datavideo.nl

Datavideo China

Datavideo Technologies China Co
101, NO. 618, LiuYing Rd, Zhabei District,
Shanghai, China
Tel: +86 21-5603 6599
Fax: +86 21-5603 6770
E-mail: service@datavideo.cn

Datavideo France

Datavideo France s.a.r.l
Cité Descartes 1, rue Albert Einstein
Champs sur Marne
774477-Marne la Vallée cedex 2
Tel: +33-1-60370246
E-mail: info@datavideo.fr

Datavideo United Kingdom

Datavideo UK Limited
Units1 & 2 Waterside Business Park
Hadfield, Glossop, Derbyshire
SK13 1BE, UK
Tel: +44-1457 851 000
Fax: +44-1457 850 964
E-mail: sales@datavideo.co.uk

Datavideo Singapore

Datavideo Technologies (S) PTE Ltd
No. 178 Paya Lebar Road #08-03
Singapore 409030
Tel: +65-6749 6866
Fax: +65-6749 3266
E-mail: sales@datavideo.sg

Datavideo India

Datavideo Technologies India Pvt Ltd
A-132, Sec-63, Noida-201307,
Uttar Pradesh (UP), India.
Tel: +91-0120-2427337
Fax: +91-0120-2427338
E-mail: sales@datavideo.in



Please refer to our website for update the latest version manual.

www.datavideo.info/Encoders/NVD-20

datavideo®

www.datavideo.com

All the trademarks are the properties of their respective owners. Datavideo Technologies Co., Ltd. All rights reserved 2018

Nov.04.2014 P/N: G082060734B1