 

BT-1 User's Guide



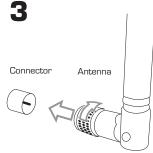


- 1. Connect the power supply to the BT-1L and a power outlet.
- 2. Using the supplied 1/8" to 1/8" audio cable, connect one end to the audio output on the BT-1, connect the other end to your powered speaker or audio system.
- 3. Install the antenna by aligning it to the center of the antenna input and turn clockwise.

NOTE: Do not connect 6-pin connector and 5V power adapter simultaneously.

- Installation (For BT-1 only) •
- 1. Remove the expansion port cover plate from your compatible host unit.

3. Slide the BT-1 into the port and secure with the screws. 4. Install the antenna by aligning it to the center of the antenna input and turn clockwise.

2. Find the 6-pin cable and connect its connector to the 6-pin connector on the back of the BT-1.

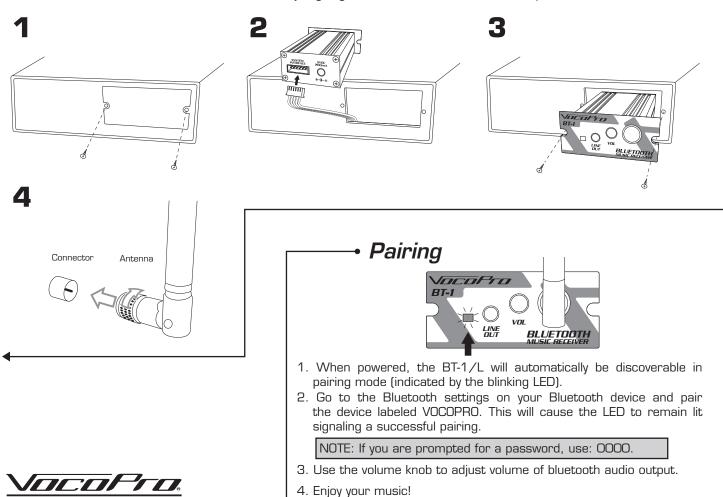

PROFESSIONAL VOCAL SYSTEM

Specifications

- Bluetooth: Version 3
- Frequency Band 2.402GHz~2.480GHz ISM Band
- Audio input: Bluetooth
- Audio output: 1/8" mini-jack
- Power 5VDC 200 mA
 - 6-Pin Connector

Troubleshooting

If you experience performance issues with the BT-1/L, perform the following:

- 1. Make sure the BT-1/L is still paired.
 - This can be verified by checking the LED.
 - Solid LED: Paired
 - Blinking LED: Not paired
 - If need be, repeat the process to pair your Bluetooth device.

2. Make sure you are within operating range.

The operating range is approximately 30 ft. If you are in excess of 30 ft from the BT-1/L, the signal may cut-out or drop. Also try and limit any obstructions to line of sight.

3. Check the volume levels.

On the BT-1/L, check the VOLUME knob to make sure it is at a sufficient level. Check the volume setting for the sound system. Lastly, check the sound settings on your Bluetooth device.



BT-1 User's Guide © VocoPro 2013 v1.0404

www.vocopro.com

JAUNAM S'ABNWO

