

DMX Values

52 Ch	Channel	Function	Value	Percent/Setting
	1	Red 1	000 ◊ 255	0–100%
	2	Green 1	000 ◊ 255	0–100%
	3	Blue 1	000 ◊ 255	0–100%
	4	Amber 1	000 ◊ 255	0–100%
	5	Red 2	000 ◊ 255	0–100%
	6	Green 2	000 ◊ 255	0–100%
	7	Blue 2	000 ◊ 255	0–100%
	8	Amber 2	000 ◊ 255	0–100%
	9	Red 3	000 ◊ 255	0–100%
	10	Green 3	000 ◊ 255	0–100%
	11	Blue 3	000 ◊ 255	0–100%
	12	Amber 3	000 ◊ 255	0–100%
	13	Red 4	000 ◊ 255	0–100%
	14	Green 4	000 ◊ 255	0–100%
	15	Blue 4	000 ◊ 255	0–100%
	16	Amber 4	000 ◊ 255	0–100%
	17	Red 5	000 ◊ 255	0–100%
	18	Green 5	000 ◊ 255	0–100%
	19	Blue 5	000 ◊ 255	0–100%
	20	Amber 5	000 ◊ 255	0–100%
	21	Red 6	000 ◊ 255	0–100%
	22	Green 6	000 ◊ 255	0–100%
	23	Blue 6	000 ◊ 255	0–100%
	24	Amber 6	000 ◊ 255	0–100%
	25	Red 7	000 ◊ 255	0–100%
	26	Green 7	000 ◊ 255	0–100%
	27	Blue 7	000 ◊ 255	0–100%
	28	Amber 7	000 ◊ 255	0–100%
	29	Red 8	000 ◊ 255	0–100%
	30	Green 8	000 ◊ 255	0–100%
	31	Blue 8	000 ◊ 255	0–100%
	32	Amber 8	000 ◊ 255	0–100%
	33	Red 9	000 ◊ 255	0–100%
	34	Green 9	000 ◊ 255	0–100%
	35	Blue 9	000 ◊ 255	0–100%
	36	Amber 9	000 ◊ 255	0–100%

DMX Values (cont.)

52 Ch (cont.)	Channel	Function	Value	Percent/Setting
	37	Red 10	000 ∅ 255	0–100%
	38	Green 10	000 ∅ 255	0–100%
	39	Blue 10	000 ∅ 255	0–100%
	40	Amber 10	000 ∅ 255	0–100%
	41	Red 11	000 ∅ 255	0–100%
	42	Green 11	000 ∅ 255	0–100%
	43	Blue 11	000 ∅ 255	0–100%
	44	Amber 11	000 ∅ 255	0–100%
	45	Red 12	000 ∅ 255	0–100%
	46	Green 12	000 ∅ 255	0–100%
	47	Blue 12	000 ∅ 255	0–100%
	48	Amber 12	000 ∅ 255	0–100%
	49	Auto Programs	000 ∅ 010 No function 011 ∅ 030 Auto 1 031 ∅ 050 Auto 2 051 ∅ 070 Auto 3 071 ∅ 090 Auto 4 091 ∅ 110 Auto 5 111 ∅ 130 Auto 6 131 ∅ 150 Auto 7 151 ∅ 170 Auto 8 171 ∅ 190 Auto 9 191 ∅ 210 Auto 10 211 ∅ 230 Auto 11 231 ∅ 250 Auto 12 251 ∅ 255 Auto 1–12	
	50	Auto Speed	000 ∅ 255	Slow to fast
	51	Dimmer	000 ∅ 255	0–100%
	52	Strobe	000 ∅ 010 No function 011 ∅ 255 Slow to fast	

48 Ch	Channel	Function	Value	Percent/Setting
	1	Red 1	000 ∅ 255	0–100%
	2	Green 1	000 ∅ 255	0–100%
	3	Blue 1	000 ∅ 255	0–100%
	4	Amber 1	000 ∅ 255	0–100%
	5	Red 2	000 ∅ 255	0–100%
	6	Green 2	000 ∅ 255	0–100%
	7	Blue 2	000 ∅ 255	0–100%
	8	Amber 2	000 ∅ 255	0–100%
	9	Red 3	000 ∅ 255	0–100%
	10	Green 3	000 ∅ 255	0–100%
	11	Blue 3	000 ∅ 255	0–100%
	12	Amber 3	000 ∅ 255	0–100%

DMX Values (cont.)

48 Ch (cont.)	Channel	Function	Value	Percent/Setting
	13	Red 4	000 ◊ 255	0–100%
	14	Green 4	000 ◊ 255	0–100%
	15	Blue 4	000 ◊ 255	0–100%
	16	Amber 4	000 ◊ 255	0–100%
	17	Red 5	000 ◊ 255	0–100%
	18	Green 5	000 ◊ 255	0–100%
	19	Blue 5	000 ◊ 255	0–100%
	20	Amber 5	000 ◊ 255	0–100%
	21	Red 6	000 ◊ 255	0–100%
	22	Green 6	000 ◊ 255	0–100%
	23	Blue 6	000 ◊ 255	0–100%
	24	Amber 6	000 ◊ 255	0–100%
	25	Red 7	000 ◊ 255	0–100%
	26	Green 7	000 ◊ 255	0–100%
	27	Blue 7	000 ◊ 255	0–100%
	28	Amber 7	000 ◊ 255	0–100%
	29	Red 8	000 ◊ 255	0–100%
	30	Green 8	000 ◊ 255	0–100%
	31	Blue 8	000 ◊ 255	0–100%
	32	Amber 8	000 ◊ 255	0–100%
	33	Red 9	000 ◊ 255	0–100%
	34	Green 9	000 ◊ 255	0–100%
	35	Blue 9	000 ◊ 255	0–100%
	36	Amber 9	000 ◊ 255	0–100%
	37	Red 10	000 ◊ 255	0–100%
	38	Green 10	000 ◊ 255	0–100%
	39	Blue 10	000 ◊ 255	0–100%
	40	Amber 10	000 ◊ 255	0–100%
	41	Red 11	000 ◊ 255	0–100%
	42	Green 11	000 ◊ 255	0–100%
	43	Blue 11	000 ◊ 255	0–100%
	44	Amber 11	000 ◊ 255	0–100%
	45	Red 12	000 ◊ 255	0–100%
	46	Green 12	000 ◊ 255	0–100%
	47	Blue 12	000 ◊ 255	0–100%
	48	Amber 12	000 ◊ 255	0–100%

DMX Values (cont.)

10 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ∅ 255	0–100%
	2	Red	000 ∅ 255	0–100%
	3	Green	000 ∅ 255	0–100%
	4	Blue	000 ∅ 255	0–100%
	5	Amber	000 ∅ 255	0–100%
	6	Strobe	000 ∅ 010 011 ∅ 255	No function Slow to fast
	7	Color Macro + White Balance	000 ∅ 010 011 ∅ 030 031 ∅ 050 051 ∅ 070 071 ∅ 090 091 ∅ 110 111 ∅ 130 131 ∅ 150 151 ∅ 170 171 ∅ 200 201 ∅ 205 206 ∅ 210 211 ∅ 215 216 ∅ 220 221 ∅ 225 226 ∅ 230 231 ∅ 235 236 ∅ 240 241 ∅ 245 246 ∅ 250 251 ∅ 255	No function R: 100% G: 0–100% B: 0 R: 100%–0 G: 100% B: 0 R: 0 G: 100% B: 0–100% R: 0 G: 100%–0 B: 100% R: 0–100% G: 0 B: 100% R: 100% G: 0 B: 100%–0 R: 100% G: 0–100% B: 0–100% R: 100%–0 G: 100%–0 B: 100% R: 100% G: 100% B: 100% A: 100% White 1 White 2 White 3 White 4 White 5 White 6 White 7 White 8 White 9 White 10 White 11
	8	Auto Programs	000 ∅ 010 011 ∅ 030 031 ∅ 050 051 ∅ 070 071 ∅ 090 091 ∅ 110 111 ∅ 130 131 ∅ 150 151 ∅ 170 171 ∅ 190 191 ∅ 210 211 ∅ 230 231 ∅ 250 251 ∅ 255	No function Auto 1 Auto 2 Auto 3 Auto 4 Auto 5 Auto 6 Auto 7 Auto 8 Auto 9 Auto 10 Auto 11 Auto 12 Auto 1–12
	9	Auto Speed	000 ∅ 255	Slow to fast
	10	Dimmer Speed	000 ∅ 051 052 ∅ 101 102 ∅ 152 153 ∅ 203 204 ∅ 255	Preset dimmer speed from display menu Linear dimmer Nonlinear dimming curve 1 (fastest) Nonlinear dimming curve 2 Nonlinear dimming curve 3 (slowest)

DMX Values (cont.)

6 Ch	Channel	Function	Value	Percent/Setting
	1	Dimmer	000 ○ 255	0–100%
	2	Red	000 ○ 255	0–100%
	3	Green	000 ○ 255	0–100%
	4	Blue	000 ○ 255	0–100%
	5	Amber	000 ○ 255	0–100%
	6	Strobe	000 ○ 010 011 ○ 255	No function Slow to Fast

4 Ch	Channel	Function	Value	Percent/Setting
	1	Red	000 ○ 255	0–100%
	2	Green	000 ○ 255	0–100%
	3	Blue	000 ○ 255	0–100%
	4	Amber	000 ○ 255	0–100%