

If you have a different brand of TV or other types of equipment i.e. satellite receiver, VCR and need to change the settings, first activate the desired device you want to change in the device menu and hold down the 'mode' button (silver button on the far left underneath the touch-screen) for three seconds. (arrow 4)

The following is an example for changing the brand in TV mode. This applies for all types of products. Choose 'brand', follow the instructions on the screen, and enter one of the four-digit codes for your TV-brand, which you find in the booklet enclosed (arrow 6). Press 'OK' when finished or 'cancel' if you made a mistake (two middle silver buttons, arrow 5). Then press 'use' on the screen, and check if the code works. If it doesn't, or only some functions work, try with one of the other codes for your brand. In some cases, you must use the learn function to ensure all commands for a device works.

In the programming mode, you can also make several other changes, i.e. program macros (macro), change the name for any button (label) or use the learning function (learn).

Thule Audio reserves the right to alter design and specifications without notice



## System Remote Control

# RC250

## *How to get started*



First of all, congratulations with your new Thule Audio RC250 system remote control. The RC250 can replace all your existing remote units, and it is pre-programmed to control all types of Thule Audio products.

**IMPORTANT:** If you wish to make sure that you can always recall the factory programming, you should install the NEO Edit 4 program on your computer, from the enclosed CD-ROM, and upload the configuration from your RC250, using the COM cable from the box. Please see the original manual from the manufacturer for further details.

You can also learn more about the many other advanced functions in your remote from the Neo Edit 4 manual.

It is a good idea to save your existing configuration on a computer before you make any changes in the remote. This way, you can always reload the original file if something goes wrong.

In the NEO Edit program, you can also change all settings and programming in the remote, and you can insert downloads into your remote from various international internet sites, such as: [remotecentral.com](http://remotecentral.com)

On this site, you can download hundreds of different set-ups for many types and brands of products.

### General advise on using the RC250

The pre-programming on this remote is meant for controlling a full Thule Audio system. For example, when you are in 'Device mode', you can put both your Thule PR2/350B in standby as well as your Thule DVD player. In 'Device' mode, the 'Volume' controls the PR, and the channels are set to control your TV.

### Device pre-programming:

- TV: Sony, codeset 0037
- VCR: Philips, codeset 9027
- Tuner: Thule Audio, codeset 9027
- CD: Thule Audio, codeset 9027
- Sat: Philips, codeset 9027
- Amp: Thule Audio, codeset 9027
- DVD: Thule Audio, codeset 9027
- Tape: Philips, codeset 9027
- Processor: Thule Audio, codeset 9027
- CDR: Philips, codeset 9027
- Cable: Jerrold, codeset 0030

### This box contains:

- 1 Thule RC250 System remote
- 1 Thule manual 'How to get started'
- 1 Com cable for PC uploads
- 1 CD-ROM, Neo Edit 4
- 1 Philips manual for Neo Edit 4
- 3 AA batteries

### Shortcut version for immediate use:

Insert batteries on the rear side.

(Picture 1) After a one-second start-up period, the remote will always open in device mode. To get back to this mode, press far right silver button underneath touch-screen (arrow 1).

On the touch-screen, now choose the device you wish to operate:

- 'processor' (if you have a PR250B/350B or AV100/120),
- 'amp' (for any other Thule amplifier)
- CD-player, tuner etc.

If you need light to see the touch-screen, press the small top button on the left side of the RC250 just under the connector cable hole. (arrow 2)

After you have chosen the device, the various function choices will appear, like 'stand-by', 'play', 'stop'.

(Picture 2) For some complex units like processors, videos, TVs and DVDs, there are several screen pages with functions. These can be scrolled by the two larger buttons on the left side of the RC250. You can also scroll to the second page in the device page (arrow 3).



Picture 1



Picture 2