LIMITED WARRANTY

This product is warranted to the original consumer purchaser to be free from defects in materials and workmanship under normal installation, use and service for a period of one (1) year from the date of purchase as shown on the purchaser's receipt.

The obligation of Rolls Corporation under this warranty shall be limited to repair or replacement (at our option), during the warranty period of any part which proves defective in material or workmanship under normal installation, use and service, provided the product is returned to Rolls Corporation, TRANSPORTATION CHARGES PRE-PAID. Products returned to us or to an authorized Service Center must be accompanied by a copy of the purchase receipt. In the absence of such purchase receipt, the warranty period shall be one (1) year from the date of manufacture.

This warranty shall be invalid if the product is damaged as a result of defacement, misuse, abuse, neglect, accident, destruction or alteration of the serial number, improper electrical voltages or currents, repair, alteration or maintenance by any person or party other than our own service facility or an authorized Service Center, or any use violative of instructions furnished by us.

This one-year warranty is in lieu of all expressed warranties, obligations or liabilities. ANY IMPLIED WARRANTIES, OBLIGA-TIONS, OR LIABILITIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE ONE YEAR DURATION OF THIS WRITTEN LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

IN NO EVENT SHALL WE BE LIABLE FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESSED OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental or consequential damages so the above limitation or exclusion may not apply to you. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.





OWNERS MANUAL

Thank you for your purchase of the GS76 Game Show. This device determines which "contestant" has identified a proper response first.

INSPECTION

1. Unpack and Inspect the GS76 package

Your GS76 was carefully packed at the factory in a protective carton. Nonetheless, be sure to examine the unit and the carton for any signs of damage that may have occurred during shipping. If obvious physical damage is noticed, contact the carrier immediately to make a damage claim. We suggest saving the shipping carton and packing materials for safely transporting the unit in the future.

2. Please complete the Warranty Registration Card and return it to the factory.

DESCRIPTION



The GS76 Controller (shown above) has eight modular telephone jack inputs on the back, eight green "ring-in" LEDs and a red "Status" LED on the top, and a "Join" modular telephone jack and a DC Input Jack on the front of the unit.



Each GS76 Remote consists of a "Ring-in" switch, a green "Ring-in" LED, and a modular telephone jack input. Each Remote comes with a 15 foot length of telephone cord.

OPERATION

Upon power-up, the GS76 controller beeps and the eight indicator LEDs light up. After approximately three seconds, the indicator LEDs go out and the Ready LED lights.

During operation, when a remote button is pressed, all other remotes are locked out, and the corresponding indicator LED on the controller will light. Approximately three seconds after a contestant has rung-in, the indicator LED will go out, and the Ready LED will light again indicating the system is ready for another use.

Note: Before beginning contests, press the "Ring-In" switch on each Remote several times to ensure proper operation.