



AST-2446 INSTALLATION INSTRUCTIONS

Single Stud Installation

1. Secure the ceiling plate to the ceiling structure (see WARNING).
2. Use suitable hardware (commercially available) depending on your installation environment to secure the two (2) mounting points found on the ceiling plate to the ceiling structure (Figure 1).
3. Refer to ceiling adapter installation instructions.

WARNING: The ceiling structure must be capable of supporting a maximum weight of 400 lbs. If not, the ceiling must be reinforced. Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury.

WARNING: Make sure to hold the plasma display, or projector, securely and remove it from the mount to make the height adjustment prior to loosening the adjustment screws. Do not remove the screws completely from the extension loosen all at once. Loosen, remove, adjust then re-tighten the screws. Failure to do so could result in injury and or damage to the plasma display or projector.

9533-011-011-00

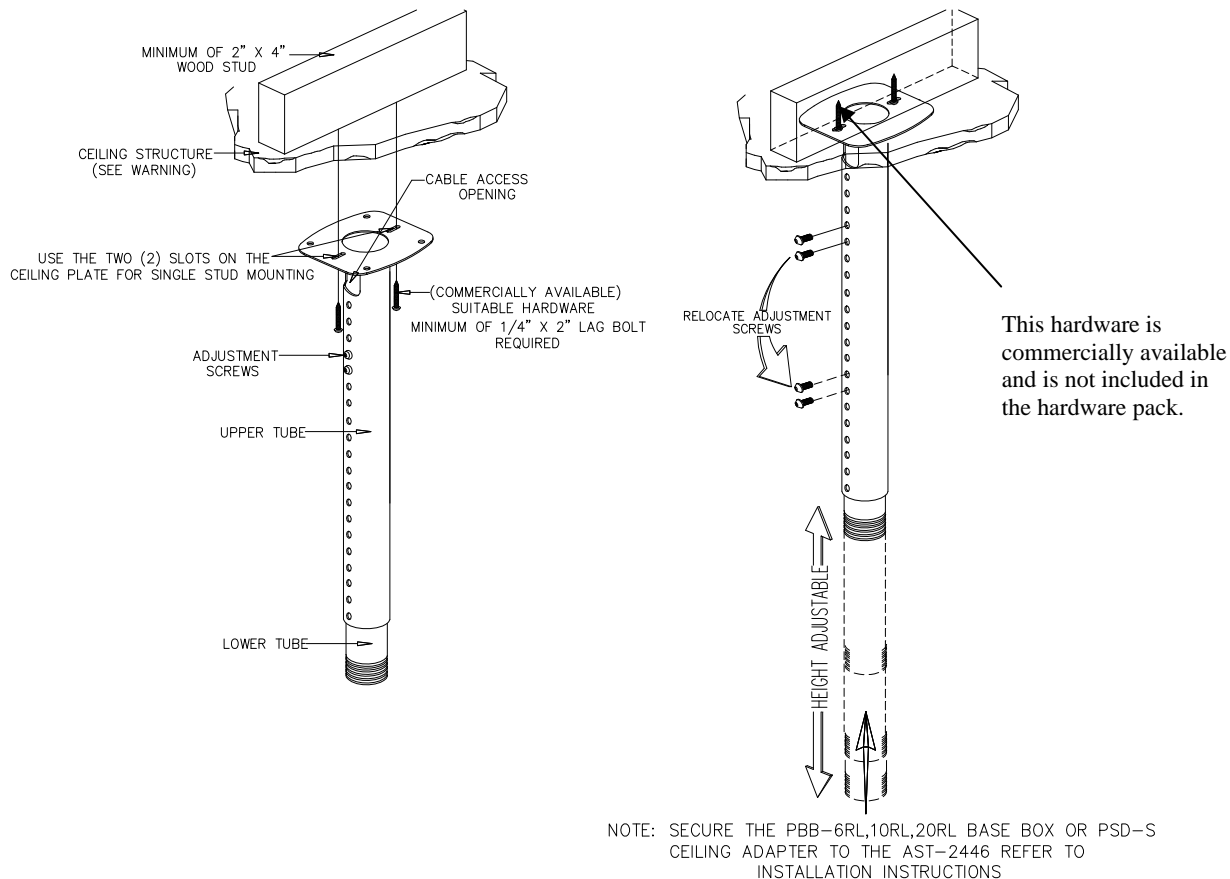


Figure 1. AST-2446 Single Stud Installation



Solid Structure Installation

1. Secure the ceiling plate to the ceiling structure (see WARNING).
2. Use suitable hardware (commercially available) depending on your installation environment to secure the four (4) mounting points found on the ceiling plate to the ceiling structure (Figure 2).
3. Refer to ceiling adapter installation instructions.

WARNING: The ceiling structure must be capable of supporting a maximum weight of 400 lbs. If not, the ceiling must be reinforced. Proper installation procedure by qualified personnel as outlined in the installation instructions must be adhered to. Failure to do so could result in serious personal injury.

WARNING: Make sure to hold the plasma display, or projector, securely and remove it from the mount to make the height adjustment prior to loosening the adjustment screws. Do not remove the screws completely from the extension loosen all at once. Loosen, remove, adjust then re-tighten the screws. Failure to do so could result in injury and or damage to the plasma display or projector.

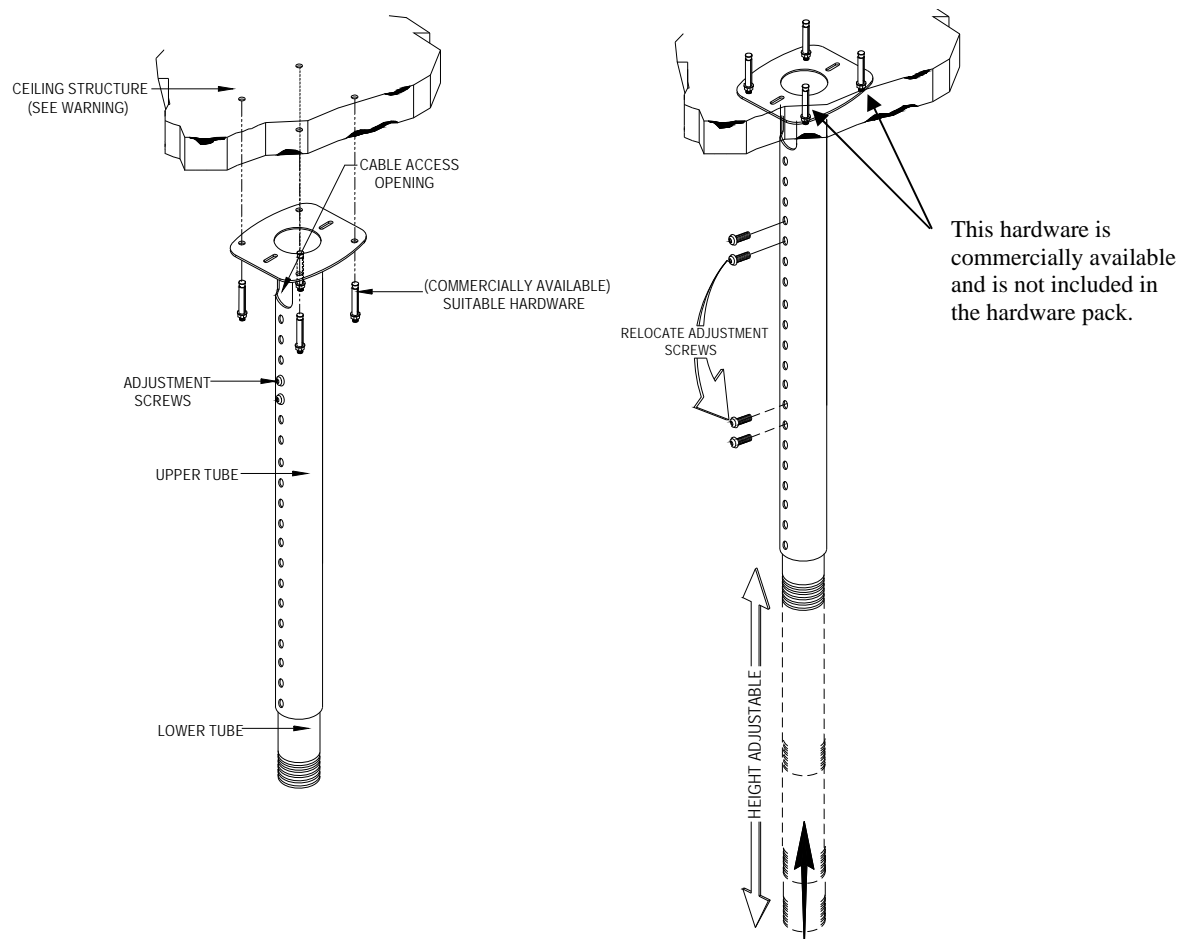


Figure 2. AST-2446 Solid Surface Installation