



No. 6 EXTENSION WALL BRACKETS

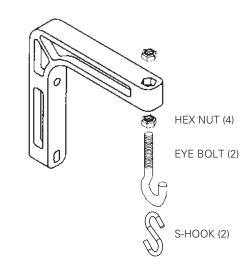


Wall fasteners not included

- Screen can be extended 6" from wall.
- Install eye bolts in wall brackets. Determine the height and location of the screen to be mounted and mark. Measure the distance between the centers of the 2 mounting rings on the screen. Transfer the measurement to the wall and attach the wall brackets securely to the wall at those points.
- Maximum recommended fastener size is ⁵/16" diameter.
- Do not overtighten fasteners.
- Hang screen on eye bolts.
- Extension wall brackets are only to be used with screens weighing 75 pounds or less.
- For Model C, Model C with CSR and Cosmopolitan[®] screens: Hang screen from the eye bolts with S-hooks. Crimp both loops of S-hooks closed.
- To provide proper tilt and eliminate keystoning pull the screen down, then hook it back to the wall by attaching the bail handle to an accessory Tilt Lock, Da-Lite part No. 40965. Tilt Lock is sold separately.

No. 11 EXTENSION WALL BRACKETS

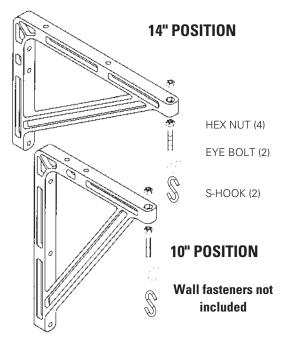



- Screen can be extended 10" or 14" from wall by simple selecting one of the two mounting positons shown above.
- Install eye bolts in wall brackets. Determine the height and location of the screen to be mounted and mark. Measure the distance between the centers of the 2 mounting rings on the screen. Transfer the measurement to the wall and attach the wall brackets securely to the wall at those points.
- Maximum recommended fastener size is ⁵/16" diameter.
- Do not overtighten fasteners.
- Hang screen on eye bolts.
- Extension wall brackets are only to be used with screens weighing 75 pounds or less.
- For Model C, Model C with CSR and Cosmopolitan[®] screens: Hang screen from the eye bolts with S-hooks. Crimp both loops of S-hooks closed.
- To provide proper tilt and eliminate keystoning pull the screen down, then hook it back to the wall by attaching the bail handle to an accessory Tilt Lock, Da-Lite part No. 40965. Tilt Lock is sold separately.

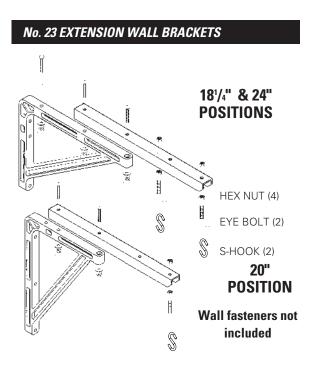

- Screen can be extended 18'/4", 20" or 24" from wall by simple selecting one of the two mounting positons shown above and wing nut and bolt adjustment.
- Extension arm holes should be lined up with desired holes in plastic bracket. Attach extension arms to wall brackets.
- Install eye bolts in extension arms. Determine the height and location of the screen to be mounted and mark. Measure the distance between the centers of the 2 mounting rings on the screen. Transfer the measurement to the wall and attach the wall brackets securely to the wall at those points.
- Maximum recommended fastener size is ⁵/16" diameter.
- Do not overtighten fasteners.
- Hang screen on eye bolts.
- Extension wall brackets are only to be used with screens weighing 75 pounds or less.
- For Model C, Model C with CSR and Cosmopolitan[®] screens: Hang screen from the eye bolts with S-hooks. **Crimp both loops of S-hooks closed.**
- To provide proper tilt and eliminate keystoning pull the screen down, then hook it back to the wall by attaching the bail handle to an accessory Tilt Lock, Da-Lite part No. 40965. Tilt Lock is sold separately.

EXTENSION WALL MOUNTING BRACKETS

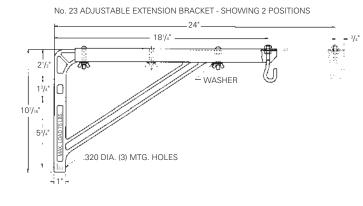

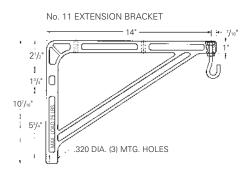

No. 23 ADJUSTABLE EXTENSION BRACKET - SHOWING 1 POSITION

