

Thank you for purchasing the **VariZoom VZ-Pro-EX** remote controller. Here are some important guidelines for safe and effective operation...

**Connection:** Insert the **VZ-Pro-EX** controller cable into the lens jack located on the front of the camera. Be sure to match the pin connections carefully. When properly connected, the cable should be firmly seated within the jack.

\*\*\*\*\*

**WARNING: ABUSE OF THE CONNECTOR MAY RESULT IN DAMAGE NOT COVERED BY THE WARRANTY. TREAT THE CONNECTOR GENTLY WHEN CONNECTING AND DISCONNECTING FROM THE LENS.**

**Power:** The **VZ-Pro-EX** controller does not require batteries or external power. Just plug the cable into the lens servo jack, and it's ready to use.


**Tripod / Jib Mount:** Your **VZ-Pro-EX** controller comes with a heavy-duty quick-release clamping system to attach firmly to your tripod handle, shoulder support or camera crane/jib.

**Recording:** Press the button next to the zoom rocker to activate the pause and record functions on the camera.

**Video Return:** Allows you to see what is being recorded through the viewfinder.

**Zoom:** The thumb rocker is pressure sensitive and allows you to smoothly ramp up to that speed and back down again

## VZ-ProEX

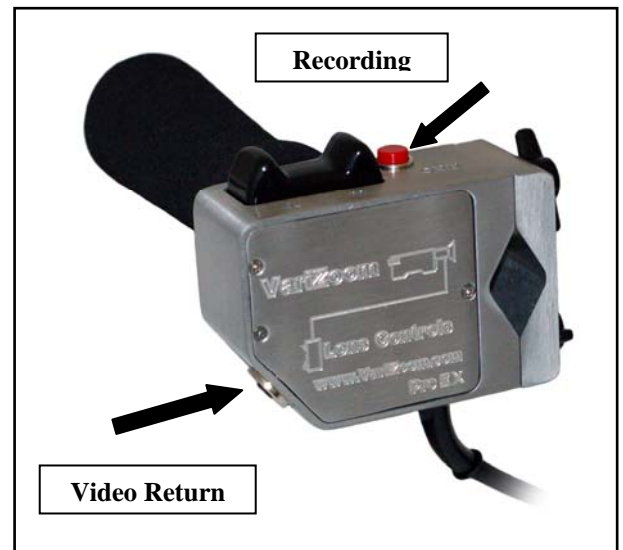

**Warranty Warning!** *Do not open your control device. If you need service, call and we'll be happy to set up a service return. All controllers have a 2-year parts and labor warranty. Please save your receipt and feel free to send us your comments and suggestions. Thanks!*

-- please keep this document for your records & reference --

VariZoom Lens Controls 888-826-3399 / 512-219-7722  
visit us at [www.varizoom.com](http://www.varizoom.com)