



Always-On Solo Wireless Boundary Microphone Charger Users Guide

Congratulations on purchasing the Always-On Solo Wireless Boundary Microphone Charger—designed to charge the battery in Revolabs Solo™ TableTop microphones (05-TBLMIC, 05-TBLMICEU) from any AC outlet. This is useful when microphones are used for more than 8 hours, or haven't been charged.


The connector accepts the supplied power adapter that converts power from any standard 100-240V AC outlet to 5 volts DC. **Note:** power adapter plug-type varies by country.

To use the TableTop Microphone Charger:


Step One: Plug the AC adapter into an AC outlet.



Step Two: Attach the AC Adapter cable to the connector in TableTop Microphone Charger Base.

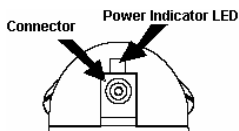

Step Three: Insert the Microphone into the Charger Base.

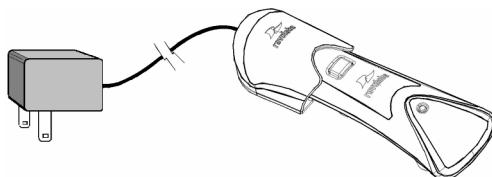

The microphone will take several seconds to establish wireless communication with the base station before capturing audio, indicated by self-test LED activity on the Microphone. Press the microphone Mute button to un-mute. **Note:** The battery will NOT overcharge if left in the Charger.

Warranty

Revolabs, Inc. warrants this product to be free of manufacturing defects. Repair or replacement of any defective part or unit (at the discretion of the Seller) will be free of charge for a period of 1 year after purchase.

System Specifications

Dimensions, (L, W, H) and Weight

2.0" (5.0 cm) x 1.3" (3.4 cm) x 0.9" (2.4 cm), 0.1 lb (0.06 kg)

Environmental Requirements:

Temperature 40° to 105° F (5° to 40° C)

Operating Humidity 20% to 85%

Shipping Weight: 1.5 lbs (0.68 kg)

Power Requirements

Adapter Input: 100-240VAC, 50-60Hz

Adapter Output: 5 VDC, 300mA

Models: 05-TBLCHG-C, 05-TBLCHGEU-C