



 
# Instruction sheet -- Buhl Wide Body TV Cart

Model number: WC44E & WC54E

Congratulations for having chosen this excellent Buhl product.

To assure your complete satisfaction, this product is warranted against defect in manufacture for one year after the purchase date. Any parts requiring replacement during the 1--year period, under normal use and service, as a result of defective workmanship, will be replaced by Buhl or by an authorized Buhl dealer, without cost, except for transportation charges. All unit should be returned in original packing to guarantee safe transport. Buhl is not responsible for damage in shipment.

**Note: This unit is easier to assemble with two people.**

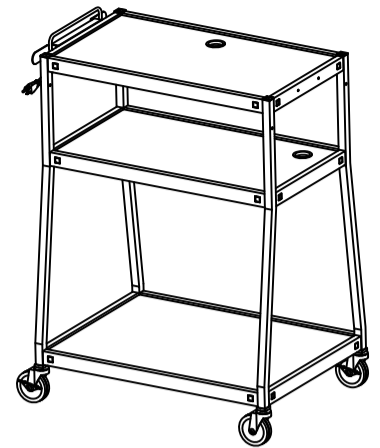


WC44E/54E

## Parts list

 Qty.	Description	Qty.	Description
1	Top shelf with decal	25 Set	Square head bolts, washer and serrated nuts (A)
1	Middle shelf	3 Set	Screws and serrated nuts (B)
1	Bottom shelf	2	Casters with brakes
2	Legs (Labeled "O")	2	Casters without brakes
2	Legs (Labeled "X")	1	Electrical bracket
1	Handle (Optional)	1	Power cord

**Tools required**  
 Hex wrench (provided)  
 Adjustable wrench/pliers  
 Rubber mallet

### Screw table



**1.** Lay front legs (labeled "O" and "X") on the floor with the brackets facing upward and inward as illustrated. Note: legs, when placed on the floor should bend upward, off the floor at their top end and the width of the unit should remain constant all the way to the top.

**2.** Slide each shelf over the brackets of the legs. The largest shelf is the bottom. The top shelf has the **Buhl** decal on it.

**3.** Slide the two remaining legs onto the shelves as illustrated. Make sure that the brackets are inside the shelves.

**4.** **HAND TIGHTEN** the top, middle and bottom shelves at the two corners with square head bolt, washer and nut (see screw table A) as illustrated. Please make sure washer and nut are together on the inside of the leg bracket.

**5.** It is very important that the next step be performed on a level surface in order to have the unit properly aligned. stand unit upright on a level surface. Gently rock unit back and forth to realign and level the unit. **TIGHTEN ALL NUTS AND BOLTS WITH WRENCHES AT THIS TIME.** Unit should now be properly aligned and level. If unit is not level at this time, repeat the above steps before proceeding to step 6.

**6.** Lay unit on floor. Insert casters with brakes into opposite corner holes on the bottom of the unit as shown. Insert the other casters into the remaining holes.

**7. Electrical bracket assembly instruction**  
 A. Push power cord into cord winder bracket.  
 B. Attach electrical bracket to side of top shelf with two nuts and bolts (see screw table B). Tighten nuts and bolts securely. Wrap power cord around wings of the bracket.



A Division of Vcom MM Corp.  
 South Hackensack, NJ 07606, USA  
 Tel.: (800)631-0868

If any parts or hardware are missing or damaged, **Do Not Return** the unit to your dealer. Call the Buhl helpline at (800)742-5672 for immediate parts replacement.