

blizzard *PUCK* 06™ LIGHTING



blizzard LIGHTING

Blizzard Lighting, LLC
www.blizzardlighting.com
Wisconsin, USA
Copyright (c) 2011

TABLE OF CONTENTS

The Puck™ Q6 LED PAR Can	1
1. Getting Started	3
What's In The Box?	3
Getting It Out Of The Box	3
Powering Up!	3
Getting A Hold Of Us	3
Safety Instructions (Don't Stick Your Hand In The Toaster!)	4
2. Meet The Puck™ Q6 LED PAR Can	5
Features	5
DMX Quick Reference (4 and 7-Channel Modes)	5
The Puck™ Q6 Pin-up Picture	6
3. Setup	7
Fuse Replacement	7
Connecting A Bunch Of Puck™ Q6 LED PAR Cans	7
Data/DMX Cables	7
4. Operating Adjustments	8
DMX Mode & DMX Mode Selection	8
Master/Slave Mode	8
Sound Active Mode	8
Custom Color Display	8
Fixture running hour display	8
Troubleshooting	9
5. Appendix	10
Keeping The Puck™ Q6 LED PAR Can As Good As New	10
Returns (Gasp!)	10
Shipping Issues	10
Tech Specs	11

1. GETTING STARTED

What's In The Box?

- 1 x Puck™ Q6 Flat LED PAR Fixture
- 1x IEC Power Cord
- This Lovely User Manual

Getting It Out Of The Box

Congratulations on being completely and utterly qtastic! Now that you've got The Puck™ Q6 (or hopefully, *Pucks!*), you should carefully unpack the box and check the contents to ensure that all parts are present and in good condition. If anything looks as if it has been damaged in transit, notify the shipper immediately and keep the packing material for inspection. Again, please save the carton and all packing materials. If a fixture must be returned to the factory, it is important that the fixture be returned in the original factory box and packing.

Powering Up!

All fixtures must be powered directly off a switched circuit and **cannot be run off a rheostat (variable resistor) or dimmer circuit, even if the rheostat or dimmer channel is used solely for a 0% to 100% switch.**

AC Voltage Switch - Not all fixtures have a voltage select switch, so please verify that the fixture you receive is suitable for your local power supply. See the label on the fixture or refer to the fixture's specifications chart for more information. A fixture's listed current rating is its average current draw under normal conditions. Check the fixture or device carefully to make sure that if a voltage selection switch exists that it is set to the correct line voltage you will use.

Warning! Verify that the voltage select switch on your unit matches the line voltage applied. Damage to your fixture may result if the line voltage applied does not match the voltage indicated on the voltage selector switch. All fixtures must be connected to circuits with a suitable Ground (Earthing).

Getting A Hold Of Us

If something is wrong, just give us a call or send an email. We'll be happy to help, honest.

Blizzard Lighting
W220 N1531 Jericho Ct. Suite E, Waukesha, WI 53186 USA
support@blizzardlighting.com
www.blizzardlighting.com
1.866.493.6025

SAFETY INSTRUCTIONS



Please read these instructions carefully. They include important information about the installation, usage and maintenance of this product.

- Please keep this User Guide for future use. If you sell the unit to someone else, be sure that they also receive this User Guide.
- ALWAYS make sure that you are connecting to the proper voltage, and that the line voltage you are connecting to is not higher than that stated on the decal or rear panel of the fixture.
- This product is intended for indoor use only.
- To prevent risk of fire or shock, do not expose fixture to rain or moisture.
- Make sure there are no flammable materials close to the unit while operating.
- The unit must be installed in a location with adequate ventilation, at least 20in (50cm) from adjacent surfaces. Be sure that no ventilation slots are blocked.
- ALWAYS disconnect from the power source before servicing or replacing fuse and be sure to replace with same fuse size and type.
- ALWAYS secure fixture using a safety chain. NEVER carry the fixture by its cord. Use its carrying handles.
- DO NOT operate at ambient temperatures higher than 104°F (40°C).
- In the event of a serious operating problem, stop using the unit immediately. NEVER try to repair the unit by yourself. Repairs carried out by unskilled people can lead to damage or malfunction. Please contact the nearest authorized technical assistance center. Always use the same type spare parts.
- NEVER connect the device to a dimmer pack.
- Make sure the power cord is never crimped or damaged.
- Never disconnect the power cord by pulling or tugging on the cord.
- Avoid direct eye exposure to the light source while it is on.

Caution! There are no user serviceable parts inside the unit. Do not open the housing or attempt any repairs yourself. In the unlikely event your unit may require service, please contact Blizzard Lighting at support@blizzardlighting.com.

2. MEET The Puck™ Q6A / Q6W Flat LED PAR Can

CONTROL FEATURES

- RGBA color mixing via 6x 10-Watt Quad Color R/G/B/A LEDs (Q6A)
- RGBW color mixing via 6x 10-Watt Quad Color R/G/B/W LEDs (Q6W)
- Variable electronic strobe
- Variable electronic dimmer
- Built-in automated programs via DMX and master/slave
- Built-in sound active programs
- Full RGBA/RGBW color mixing in standalone and master/slave
- RGBA/RGBW (4-Channel) and extended (7-Channel) DMX modes

ADDITIONAL FEATURES

- Lightweight and Compact (It kept its New Years' resolution!)
- 4-Button LED control panel for easy programming
- Light source: 6x 10-Watt LEDs, Quad-Color
- Dual bracket for flexibility in mounting
- Power outlet for fixture linking (up to 10 fixtures)

DMX Quick Reference (7-Channel Mode)

Channel	What It Does
1	Dimmer
2	Red Intensity
3	Green Intensity
4	Blue Intensity
5	Amber / White Intensity
6	Strobe (0-15 off, 16-255 strobe slow <-> fast)
7	Color Macros (slow <-> fast)


DMX Quick Reference (4-Channel Mode)

Channel	What It Does
1	Red Intensity
2	Green Intensity
3	Blue Intensity
4	Amber / White Intensity

Figure 1: The Puck™ Q6 Pin-Up Picture



Figure 2: The Rear Connections

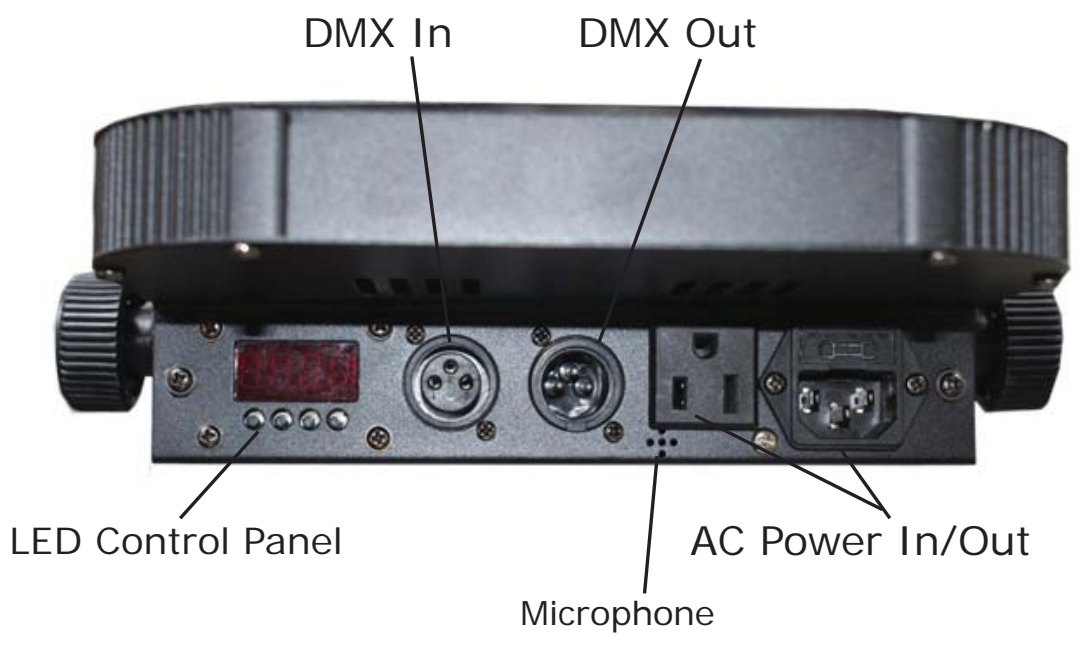


3. SETUP



Before replacing a fuse, disconnect power cord. ALWAYS replace with the same type and rating of fuse.

Fuse Replacement

With a flat head screwdriver, wedge the fuse holder out of its housing. Remove the damaged fuse from its holder and replace with exact same type fuse. Insert the fuse holder back in its place and reconnect power.

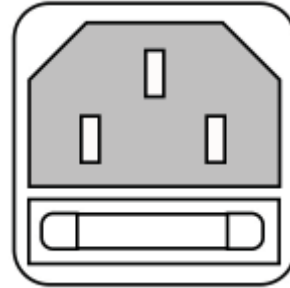

Connecting A Bunch of Puck™ Q6 Flat LED PAR Cans

You will need a serial data link to run light shows using a DMX-512 controller or to run shows on two or more fixtures set to sync in master/slave operating mode. The combined number of channels required by all the fixtures on a serial data link determines the number of fixtures the data link can support.

Fixtures on a serial data link must be daisy chained in one single line. Also, connecting more than 32 fixtures on one serial data link without the use of a DMX optically-isolated splitter may result in deterioration of the digital DMX signal.

The maximum recommended cable-run distance is 500 meters (1640 ft). The maximum recommended number of fixtures on a serial data link is 32 fixtures.

Data/DMX Cabling

To link fixtures together you'll need data cables. You should use data-grade cables that can carry a high quality signal and are less prone to electromagnetic interference.

For instance, Belden© 9841 meets the specifications for EIA RS-485 applications. Standard microphone cables will "probably" be OK, but note that they cannot transmit DMX data as reliably over long distances. In any event, the cable should have the following characteristics:

2-conductor twisted pair plus a shield

Maximum capacitance between conductors – 30 pF/ft.

Maximum capacitance between conductor & shield – 55 pF/ft.

Maximum resistance of 20 ohms / 1000 ft.

Nominal impedance 100 – 140 ohms

4. OPERATING ADJUSTMENTS

NOTE: After making any adjustment, the fixture will return to the correct mode after approximately 5 seconds.

DMX Mode

Allows the unit to be controlled by any universal DMX controller.

- 1.) The default mode for the fixture is DMX, which appears as *Addr* on the LED Readout. Use the <ENTER> button then the <UP> and <DOWN> buttons to choose a channel between *1* and *512*. Press <ENTER> again to confirm.
- 2.) To change between 3 and 6 channel DMX mode, select *Chnd*, then press <ENTER>. Select either *3Ch* or *6Ch*, then press <ENTER> again to confirm.

Master/Slave Mode (Auto/Sound Active/Color Preset/Custom):

Allows you to link up to 32 units together without a controller.

- 1.) Use standard DMX cables to daisy chain your units together via the DMX connector on the rear of the units.
- 2.) Choose a unit to function as the Master. Select MAST. The master unit must be the first unit. Finally, chain the units together using DMX cable.

Master *SLNd* then *MASt* to confirm.

- 3.) Select slave function by using the <UP>/<DOWN> keys to reach SLAV in the Master/Auto menu on the slave units, and they will react in the same as the Master.

Slave *SLNd* then *SLAV* to confirm.

- 4.) On the master fixture, use the <UP>/<DOWN> keys to reach SHND, which allows you to select the Master/Slave mode.

Sound active *SOUn* then <ENTER> to confirm.

Auto mode *CoLo* then *Auto*, then <ENTER> to confirm.

Color preset *CoLo* then *Col 1 - Col 15*, <ENTER>.

To set a custom color in Master/Slave / Standalone Mode:

Using this function, you can select any color by adjusting the Red, Green, Blue and White/Amber values from 0-255. You may also adjust the color balance of the fixture.

Please note that modifying the values in this step will affect ALL modes, therefore we recommend resetting all levels to their highest value (255) after using this mode.

- 1.) Select *NAw* from the control panel, then hit <ENTER>.
- 2.) Choose *rEd, GrEE, bLUe or WhiL*, then hit <ENTER> to confirm.
- 3.) Using the <UP>/<DOWN> keys, select the color you wish to display by varying Red/Green/Blue intensity between 0 and 255, then hit <ENTER> to confirm each color choice.
- 4.) Select Color preset mode as instructed above, then select *Col 15*. then <ENTER> to confirm.

To Show the Fixture Running Hours:

- 1.) Select *Fhr5* from the control panel, then hit <ENTER> to confirm.

Troubleshooting

Symptom	Solution
Fixture Auto-Shut Off	Check the fan in the fixture. If it is stopped or moving slower than normal, the unit may have shut itself off due to high heat. This is to protect the fixture from overheating. Clear the fan of obstructions, or return the unit for service.
Beam is Dim	Check optical system and clean excess dust/grime. Also ensure that the 220V/110V switch is in the correct position, if applicable.
No Light Output	Check to ensure fixture is operating under correct mode, IE sound active/auto/DMX/Etc., if applicable. Contact service for more information.
Chase Speed Too Fast/Slow	Check to ensure proper setup of speed adjustment.
No Power	Check fuse, AC cord and circuit for malfunction.
Blown Fuse	Check AC cord and circuit for damage, verify that moving parts are not restricted and that unit's ventilation is not obstructed
Slow Movement	Verify that 220V/110V switch is in the correct position, if applicable. Also check that speed channels are set appropriately.
No Response to Audio	Verify that the fixture is in "Sound Active" mode. Adjust Audio Sensitivity, If Applicable.
Fixture Not Responding / Responding Erratically	Make sure all connectors are seated properly and securely. Use Only DMX Cables. Install a Terminator. Check all cables for defects. Reset fixture(s).
Intermittant Lamp	Check lamp for properly installation. Relamp, lamp may have reached end of life.
Remote Doesn't Work	Verify remote control cable is installed properly and securely. Verify remote is correct type (CA-9 or other as applicable.)
Fixture Moving On Its Own	Verify proper mode of operation. Is the fixture in "Auto" mode?

If your problem isn't listed, or if problems persist, please contact support: support@blizzardlighting.com.

5. APPENDIX

Keeping Your Puck™ Q6 As Good As New

The fixture you've received is a rugged, tough piece of pro lighting equipment, and as long as you take care of it, it will take care of you. That said, like anything, you'll need to take care of it if you want it to operate as designed. You should absolutely keep the fixture clean, especially if you are using it in an environment with a lot of dust, fog, haze, wild animals, wild teenagers or spilled drinks.

Cleaning the optics routinely with a suitable glass cleaner will greatly improve the quality of light output. Keeping the fans free of dust and debris will keep the fixture running cool and prevent damage from overheating.

In transit, keep the fixtures in cases. You wouldn't throw a prized guitar, drumset, or other piece of expensive gear into a gear trailer without a case, and similarly, you shouldn't even think about doing it with your shiny new light fixtures.

Common sense and taking care of your fixtures will be the single biggest thing you can do to keep them running at peak performance and let you worry about designing a great light show, putting on a great concert, or maximizing your client's satisfaction and "wow factor." That's what it's all about, after all!

Returns (Gasp!)

We've taken a lot of precautions to make sure you never even have to worry about sending a defective unit back, or sending a unit in for service. But, like any complex piece of equipment designed and built by humans, once in a while, something doesn't go as planned. If you find yourself with a fixture that isn't behaving like a good little fixture should, you'll need to obtain a Return Authorization (RA).

Don't worry, this is easy. Just send an email to support@blizzardlighting.com, and we'll issue you an RA. Then, you'll need to send the unit to us using a trackable, pre-paid freight method. We suggest using USPS Priority or UPS. Make sure you carefully pack the fixture for transit, and whenever possible, use the original box & packing for shipping.

When returning your fixture for service, be sure to include the following:

- 1.) Your contact information (Name, Address, Phone Number, Email address).
- 2.) The RA# issued to you
- 3.) A brief description of the problem/symptoms.

We will, at our discretion, repair or replace the fixture. Please remember that any shipping damage which occurs in transit to us is the customer's responsibility, so pack it well!

Shipping Issues

Damage incurred in shipping is the responsibility of the shipper, and must be reported to the carrier immediately upon receipt of the items. Claims must be made within seven (7) days of receipt.

Tech Specs!

Weight & Dimensions	
Length	8.25 inches (210 mm)
Width	3.75 inches (95.25 mm)
Height	7.5 inches (190 mm)
Weight	4.4 lbs (2 kg)
Power	
Operating Voltage	90-230VAC, 50-60 Hertz
Fuse	3A 250V
Power Consumption	35W
Light Source	
LED	6x 10-Watt (4*2.5-watt) Quad-Color RGBA (Q6A) / RGBW (Q6W) LED's 60K hrs.
Optical	
Beam Angle	25 degrees 29 degree field
Luminous Intensity	Puck Q6A: 4,800 Lux @ 1m Puck Q6W: TBA Lux @ 1m
Thermal	
Max. Operating Temp.	104 degrees F (40 degrees C) ambient
Control	
Protocol	USITT DMX-512
DMX Channels	4 or 7 (User Selectable)
Input	3-pin XLR Male
Output	3-pin XLR Female
Other Operating Modes	Standalone, Master/Slave, Sound Active, Color Preset, Standalone color mixing
Military Callsign	
Tango-Papa-Quebec-Six-Alpha (Q6A) <i>or</i> Tango-Papa-Quebec-Six-Whiskey (Q6W)	
Warranty	
2-year limited warranty, does not cover mal-function caused by damage to LED's.	



Enjoy your product!
Our sincerest thanks for your purchase!
--The team @ Blizzard Lighting