 
 


ZOOM

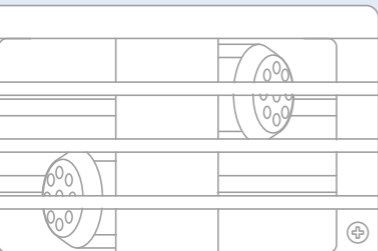

Q3HD Handy Video Recorder



Handy Video Recorder **Q3HD**

 
User Guide

Safety and Operation
Precautions must be read
before using the unit.

Q3HD

Items included with this product

- **Q3HD unit**

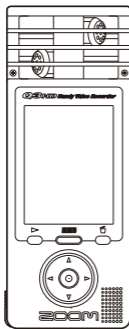

- **2 AA batteries
(for testing the unit)**

 


Note: Use alkaline or rechargeable NiMH batteries.

- **SD card**



- **User Guide
(this document)**




HandyShare software for video editing and sharing

To install HandyShare on your computer, connect the Q3HD to the computer and double-click the HandyShare installer on the included SD card. If your computer does not already have QuickTime installed, follow the instructions that appear on your screen after starting the HandyShare installer.

Part functions

■ Parts of the unit

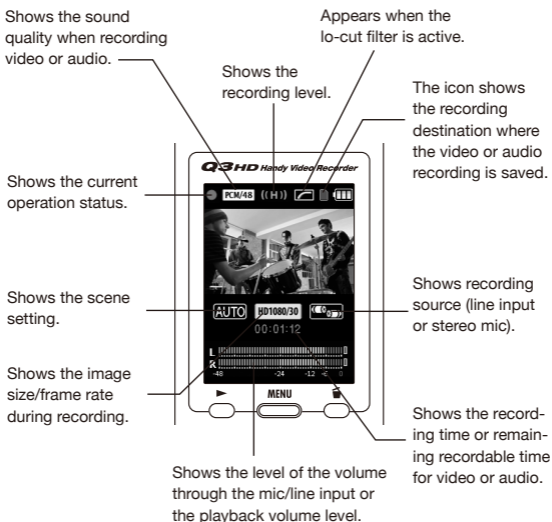

Video/audio recording destination




The SD card icon shows that video/audio is being recorded to the SD card.



The built-in memory icon shows that video/audio is being recorded to the built-in memory.


Part functions (continued)

 ■ Parts of the unit

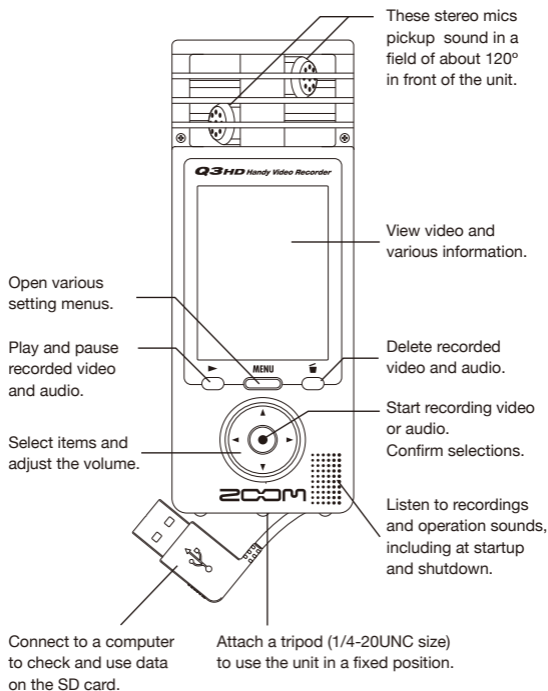


Set the mic gain to one of three levels.

 (L = low sensitivity, H = high sensitivity, AUTO = automatic)

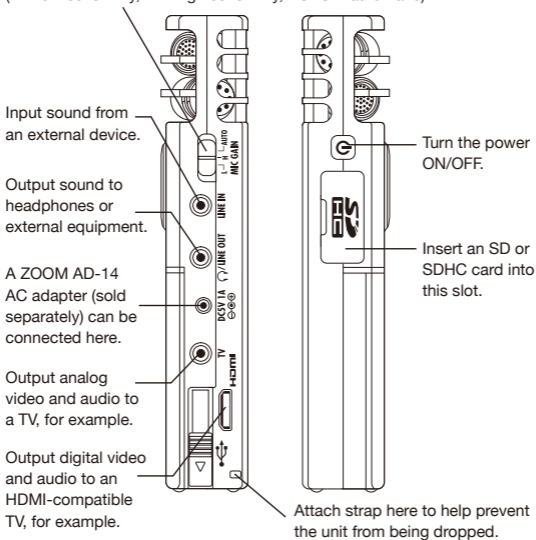

■ Inserting batteries

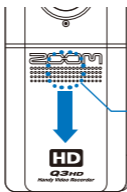 


Open the case while pressing here and then insert the batteries.


Note: Use alkaline batteries or rechargeable NiMH batteries.

Setting the date and time



 This is used for video and audio recording information, so set it accurately before recording.

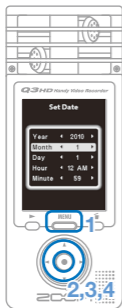


1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SETTING**  and press **●**.
3. Use **▲ ▼** to select **Set Date** and press **●**.
4. Use **▲ ▼ ◀ ▶** to set the current date and time, and press **●**.
5. After formatting completes, the **SETTING** menu reopens.

Setting the battery type



By setting the battery type, the amount of remaining battery life can be accurately shown.



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SETTING**  and press **●**.
3. Use **▲ ▼** to select **Battery** and press **●**.
4. Use **▲ ▼** to select the battery type and press **●**.
5. Press **MENU** again after the setting is made.

Note: Use alkaline batteries or rechargeable NiMH batteries.


Formatting an SD card



Format an SD card to make it compatible with the Q3HD.

Warning: formatting a card will permanently erase all data on it.



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SETTING**  and press **○**.
3. Use **▲ ▼** to select **SD Format** and press **○**.
4. Use **◀ ▶** to select "Yes" to format or "No" to cancel, and press **○**.
5. When the reconfirmation screen appears, use the same procedure to select again and press **○**.
 - Select "Yes" to start formatting.
 - Select "No" to not format the card and return to the **SETTING** menu.
6. After formatting completes, the **SETTING** menu reopens.

NOTE


- If the SD card write-protection switch is set to ON, the card cannot be formatted.
- Formatting also initializes the built-in memory at the same time.

Turning operation sounds on or off



The output of beeping sounds from the Q3HD speaker at startup and during operation can be turned on or off.




1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SETTING**  and press **●**.
3. Use **▲ ▼** to select **Beep** and press **●**.
4. Use **▲ ▼** to select **ON** or **OFF**, and press **●**.
5. Press **MENU** again after the setting is made.

Reducing noise



Turn the low-cut filter function on to reduce wind sounds and other noise.



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **LO CUT**  and press **●**.
3. Use **▲ ▼** to select **ON (MIC Only)** or **OFF**, and press **●**.
4. Press **MENU** again after the setting is made.

NOTE

Use the windscreen included in the APQ-3HD accessory package to further reduce noise.

Adjusting the recording level



By changing the recording sensitivity, you can record both quiet sounds and loud band performances at the optimal level.



1. Set the **MIC GAIN** switch according to the recording conditions.

L Low sensitivity

Band performances and concerts

H High sensitivity

Field recordings

AUTO Automatic sensitivity adjustment

Use in various situations to maintain an even recording level without breaks in sound

NOTE

AUTO LEVEL



When set to **AUTO**, use the **AUTO LEVEL** menu to set how the mic sensitivity works.

Up and Down

Sensitivity increases and decreases according to the input level

One Way Down

Sensitivity decreases in response to the highest input level




Turning sound monitoring on or off



Turn this on to hear the sound being recorded through devices connected to the line/headphones output, TV and HDMI jacks.




1. Press **MENU** to open the Main Menu.
2. Use **▶** **▼** **◀** **▶** to select **SETTING**  and press **○**.
3. Use **▶** **▼** to select **Sound Monitor** and press **○**.
4. Use **▶** **▼** to select **ON** or **OFF**, and press **○**.
5. Press **MENU** again after the setting is made.

Setting video-recording lighting



You can set the camera sensitivity to suit the video recording conditions. This allows the unit to record video optimally even in dark places or on stages with bright lights.




1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SCENE**  and press **○**.
3. Use **▲ ▼** to select the mode and press **○**.
 - "AUTO" adjusts to lighting conditions automatically.
 - "CONCERT LIGHTING" is best for concerts and other situations with bright lights.
 - "NIGHT" is best for night and dark situations.
4. Press **MENU** again after the setting is made.

Setting the image quality



You can set the resolution and frame rate used during recording. The amount of recording time available decreases as the image quality is increased.




1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **VIDEO**  and press **○**.
3. Use **▲ ▼** to select the video quality and press **○**.
4. Press **MENU** again after the setting is made.

Setting the sound quality



You can set the sound quality to use when recording video or audio. The amount of recording time available decreases as the sound quality is increased.



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SOUND**  and press **●** to open the **SOUND QUALITY** menu.
3. Change each item as desired.

Format

Select PCM or AAC format.

Sample Rate

If set to PCM, the sample rate can be changed.

Bit Length/Rate

If set to PCM, the bit length can be changed.

If set to AAC, the bit rate can be changed.

4. Press **MENU** again after the setting is made.


Recording audio and video



From the main operation screen, you can start recording audio or video by pushing a single button.



1. After preparing to record audio or video, press **REC** to start recording.

- Use the **CAMERA**  menu to set whether to record video with audio or audio only.



- Press **←** and **→** to zoom in and out.



Zoom in and out

- Press **▲** and **▼** to adjust the volume level when using the line/headphones jack.



Adjust the volume



Audio only

2. Press **REC** when finished to put the unit back into audio/video recording standby.

 
NOTE

- If the transfer speed to the card is not fast enough during video/audio recording, "Low Speed Card!" appears on the screen and recording stops. We recommend using cards that are Class 4 or faster. Information about SD cards that can be used with this unit can be found at www.zoom.co.jp.
- Even if no SD/SDHC card is in the unit, video can be recorded to the built-in memory (64 MB). However, this video can only be viewed on the unit; it cannot be copied or transferred.

Playing recordings



Turn the unit sideways to play back recorded audio and video.

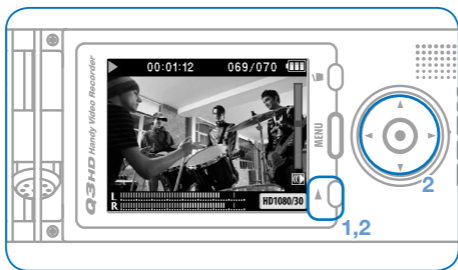

1. Press when on the main operation screen.
2. Use and to select a different file to play

Functions of other buttons

 
- Adjust volume
- Press and hold during playback to search backward/forward.
- Press to pause during playback and restart when paused.



NOTE

Only files that have been recorded with the Q3HD can be played back.

Erasing recordings

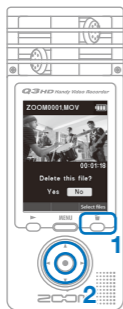You can erase recorded video and audio files to increase the amount of open space on the media card.



1. Press  while the file that you want to erase is playing.
 - If you press this when on the main operation screen, the last recorded or played file will be selected to be erased.
2. When the confirmation screen opens, select “Yes” to erase the recording or “No” to cancel, and then press .



■ Erasing multiple recordings at the same time




1. Press when on the main operation screen or while playing to open the “Delete this file?” confirmation screen. Press again to open the video selection screen
2. Use to select a recording that you want to erase and press .
3. Repeat Step 2 as many times as necessary to select other files that you want to erase.
 - Press to select all files.
4. Press when you are done selecting files.
5. When the confirmation screen opens, select “Yes” to erase the recordings or “No” to cancel, and then press .

Editing recordings

 
Recorded video and audio files can be divided and trimmed.



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **FILE**  and press **●**.
3. Thumbnails of the recorded files are shown. Use **▲ ▼ ◀ ▶** to select a file that you want to edit and press **●**.
4. The editing menu opens. Use **▲ ▼** to select the item you want and press **●**.
 - See the following page for the editing options.
5. After editing, a reconfirmation screen opens. Select “Yes” to execute the change or “No” to cancel, and then press **●**.
6. When you are done editing, press **MENU**.




DIVIDE

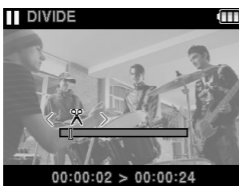

- ◀ ▶ Change the point where the file will be divided
- ⏮ ⏭ Play/pause
- Confirm the point where the file will be divided

 TRIM (partial deletion)

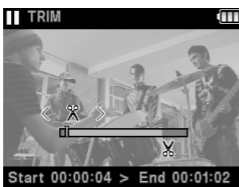

- ◀ ▶ Move trim points to set how much of the file to delete at its beginning and end
- ▲ ▼ Switch between the beginning and end trim points
- ⏮ ⏭ Play/pause
- Confirm the trim points

INFORMATION (about the file)



- Return to the thumbnail list

 
Connecting external devices

This unit can be connected to various external devices as needed.

■ Connect to a computer (via USB) to edit and save files and upload them to video sharing sites

With this unit's power off, connect its built-in USB connector to a computer running Windows or Macintosh. When connected, you can use the bundled HandyShare software for the following functions.

- Upload to video sharing sites
- Add reverb and other effects to audio
- Playback audio or video
- Delete or backup files
- Extract parts of selected audio or video

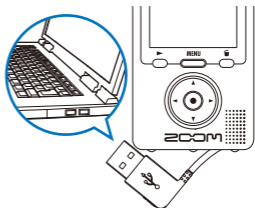


NOTE

HandyShare is on the included SD card. See page 1.

■ Input sound from another device (LINE IN connection)

 This unit can record sounds from external devices. When an external device is connected to the LINE IN jack, the stereo mic is disabled.

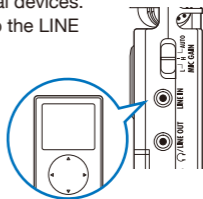


■ Listen with headphones or audio equipment (LINE OUT connection)

Use this connector when you want to listen with headphones or connect to the amplifier of an external audio device.

Turn monitoring on to listen to sound input during recording through headphones.

 
See “Turning sound monitoring on or off” on page 8.

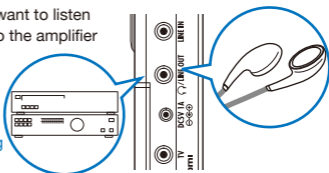

■ View on a TV (AV connection)

Use an AV cable to output recorded video and audio to a TV or similar device.

 - Before connecting to a TV, use the **SETTING** menu to set the **TV Out** item according to the region where you are using the device.

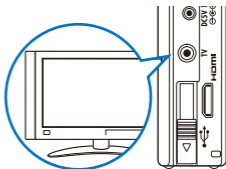


■ View on a TV (HDMI connection)

Use an HDMI cable to connect the unit to an HDMI-compatible TV to view recordings with high definition image quality.

NOTE

 Since different TVs support different audio formats, correct playback might not be possible in some cases.

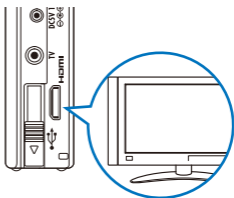

Caution

The Q3HD HDMI connector is a Type C Mini connector.


When using an HDMI cable (purchased separately), be sure to use a High Speed HDMI (category 2) cable with a Type C Mini connector on one end and a connector that matches your TV's HDMI input on the other.

Viewing information



You can check the firmware version and remaining recordable memory.

 



1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **INFO**  and press **○**.
3. Check the information.
4. When you are done checking, press **MENU**.

Resetting the unit



The unit can be reset to the settings, including SCENE and video and audio quality, it had when it was shipped from the factory.

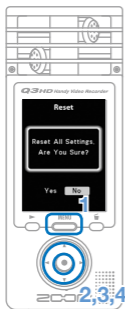

1. Press **MENU** to open the Main Menu.
2. Use **▲ ▼ ◀ ▶** to select **SETTING**  and press **○**.
3. Use **▲ ▼** to select **Reset** and press **○**.
4. When the confirmation screen opens, select "Yes" to execute the change or "No" to cancel, and then press **○**.

Upgrading the firmware version





Upgrade the firmware version when necessary.

NOTE

You can check the firmware version using the **INFORMATION** menu item.



- The latest version of the firmware can be downloaded from www.zoom.co.jp.

1. Copy the file for upgrading the firmware to the SD card.
2. Insert the SD card into the unit's card slot.
3. While pressing and holding , press  to open the **VERSION UP** screen.
4. If the version upgrade shown is the one desired, select "Yes" and press .
5. When the screen shows that the version upgrade is complete, press  to turn the power OFF.



Caution

Upgrading the firmware version is not possible if the remaining battery power is low.

Safety and Operation Precautions



This indicates that if a user ignores this warning and handles the device incorrectly, serious injury or death could result.



This indicates that if a user ignores this caution and handles the device incorrectly, bodily injury or damage to equipment could occur.

Observe the following precautions to use this unit safely.

■ Power and batteries



- Use only the ZOOM AD-14 (DC 5V/1A/center plus) AC adapter (sold separately).
- Unplug the AC adapter when the unit will not be used for a long time.
- When using batteries, insert two commercially-available AA-size alkaline batteries or NiMH recyclable batteries with the correct orientation.
- Remove batteries from the unit if they will not be used for a long time.

■ Operation environment

Avoid using the unit in the following types of places.

Doing so could cause malfunction.



- Places that become extremely hot or cold
- Near heating devices or other sources of heat
- Places that are extremely humid or where the unit could become wet
- Sandy or dusty places
- Places with frequent vibrations

■ Handling



Do not disassemble or modify this device. Doing so could cause injury or malfunction. ZOOM Corporation will not take responsibility for malfunctions resulting from disassembly or modification.



Do not apply excessive force to buttons and other parts. Use of excessive force, dropping, bumping and other shocks could break the unit.

You might need this User Guide in the future.
Always keep it in a place where you can access it easily.

FCC regulation warning (for the U.S.A.)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment to an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

For EU Countries



Declaration of Conformity:

This product complies with the requirements of
EMC Directive 2004/108/EC and
Low Voltage Directive 2006/95/EC

Disposal of Old Electrical & Electronic Equipment (Applicable in European countries with separate collection systems)



This symbol on the product or on its packaging indicates that this product shall not be treated as household waste. Instead it shall be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. The recycling of materials will help to conserve natural resources. For more detailed information about recycling of this product, please contact your local city office, your household waste disposal service or the shop where you purchased the product.

THIS PRODUCT IS LICENSED UNDER THE AVC PATENT PORTFOLIO LICENSE FOR THE PERSONAL AND NONCOMMERCIAL USE OF A CONSUMER TO

- ENCODER VIDEO IN COMPLIANCE WITH THE AVC STANDARD ("AVC VIDEO") AND/OR
- DECODE AVC VIDEO THAT WAS ENCODED BY A CONSUMER ENGAGED IN A PERSONAL AND NONCOMMERCIAL ACTIVITY AND/OR WAS OBTAINED FROM A VIDEO PROVIDER LICENSED TO PROVIDE AVC VIDEO.

NO LICENSE IS GRANTED OR SHALL BE IMPLIED FOR ANY OTHER USE. ADDITIONAL INFORMATION MAY BE OBTAINED FROM MPEG LA, LLC. SEE [HTTP://WWW.MPEGLA.COM](http://www.mpegla.com)



Windows is a trademark of Microsoft Corporation (USA). Macintosh, QuickTime and the QuickTime logo are registered trademarks or trademarks of Apple Computer Inc. in the USA and other countries. The SD and SDHC logos are trademarks. YouTube is a registered trademark of Google, Inc. HDMI (High-Definition Multimedia Interface) and **HDMI** are trademarks of HDMI Licensing, LLC. Other product names, registered trademarks and company names in this document are the property of their respective companies. The contents of this document and the specifications of the product could be changed without notice.

ZOOM

www.zoom.co.jp

ZOOM CORPORATION
4-4-3 Kanda-Surugadai, Chiyoda-ku, Tokyo
101-0062 Japan

Copying or reproduction of this document in part or in whole without permission is prohibited.
Q3HD-5000-1