

TUNER FEATURES

 
Thank you for purchasing Snark! Both SN-5 and SN-6 tuners are chromatic, and both tuners sense the vibrations of the instrument they are attached to.

ATTACHING THE TUNER TO YOUR INSTRUMENT

Use the clamp to attach the Snark to your instrument. Take care to avoid damaging the finish of your instrument. Do not attach the tuner to your instrument if any of the rubber pads are broken or missing.

Attach the clamp to the headstock (placing the body of the tuner either in front or behind the headstock).

After attaching the tuner to your instrument, adjust the “banana” shaped arm that connects the tuner to the clamp for optimum viewing of the tuner display. Also, the tuner body rotates 360 degrees so the display can be placed right where you want it.

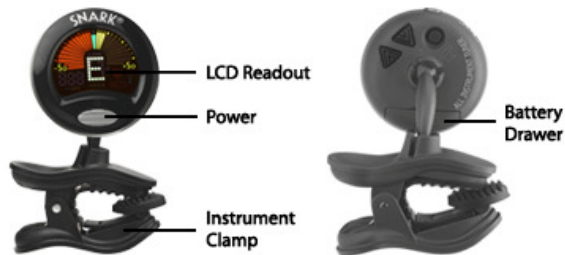

POWER UP

Once you have attached the Snark to your instrument, turn it on by pressing the power switch on the face of the tuner.

TUNING

The Snark is now ready to help you tune your instrument. As soon as you play a note, the Snark's color display will indicate the note you are playing and how close to pitch you are. The left side of the display (red) indicates flat, the right side of the display (yellow) indicates sharp.

If only red needles are lit, it means the note played is flat. If any yellow needles are lit, it means the note played is sharp.

You are in tune if the green needle and the green dot above it (at center of meter) are lit, but no yellow needles are lit.

As the Snark is chromatic, you can easily deal with non-standard tunings. The Snark will read any note you play.

POWER SAVE FEATURE

The tuner display will dim after approximately 5 seconds of no sound detected by the tuner. This conserves battery power. The display will return to normal brightness when a note is detected. If no notes are detected for 2 minutes, the tuner will shut off.

BATTERY REPLACEMENT

The tuner uses 1 CR2032 (3 volt) battery. To replace battery, open the battery drawer, remove the old battery and replace with fresh one, taking care that the positive terminal (+) is directed upwards when placed in the battery drawer (plus side toward back side of tuner). Then gently push the battery drawer closed until you feel a slight “click”.

This product complies with FCC Part 15 rules. Operation of this product is permitted in USA provided this product does not cause harmful interference and provided this product accepts interference from other devices, even if that interference is detrimental to performance of this product.

www.snarktuners.com

EEC Agent: John Hornby
Skewes & Co., LTD
Salem House, Parkinson
Approach, Garforth
Leeds LS25 2HR UK



© Snark 2011

SELF TEST

The Snark tuner occasionally runs a “self test” to make sure all the functions are up to snuff. This could happen sometimes when you first turn on the tuner. But not to worry, the self test lasts just a few seconds and will return you to tuning mode when it is finished.

CAUTION

Leaving the tuner attached permanently to the instrument for a long time period could cause marring of the finish. We recommend you remove the tuner from the instrument after you finish playing.

TUNE TIGHT! TUNE RIGHT!

SNARK®



TUNER INSTRUCTIONS

- SN-5 (GUITAR BASS & VIOLIN)