

## **Updating Firmware of PUC<sup>2</sup>**

This Document describes how to perform a firmware update on the PUC<sup>2</sup>

- Install the PUC<sup>2</sup> drivers. To perform a firmware update the drivers are needed.
  If you don't want to work with the drivers you can uninstall them by the same
  method.
- 2. From the folder PUC2\_FW\_updater copy the Puc2\_FWUpdater.exe Program into a folder on your PC.
- 3. Download the newest \*.bin file from <a href="http://www.yellowtec.com/PUC2.html">http://www.yellowtec.com/PUC2.html</a> and store it into the same folder.
- 4. Connect the PUC<sup>2</sup> to the PC and start the Puc2\_FWUpdater.exe program from the folder by double clicking on it .
- 5. If your device is connected you will get the following information:

 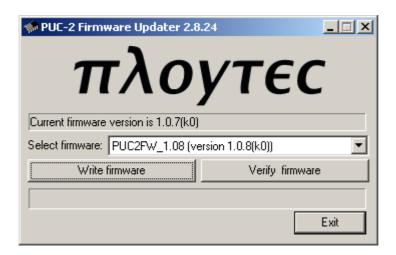


- 6. The Updater shows always the current firmware installed in the device and the latest firmware available in the Folder.
- 7. Select the desired firmware version

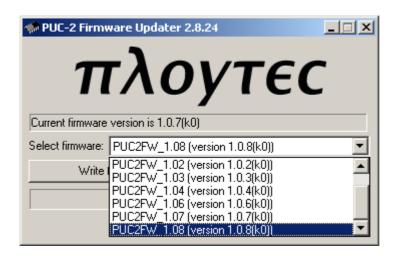

8. Click now "write firmware" The update process will take only a few seconds.

9. After finishing you will get the following message



10. Unplug the device will create a new message



11. plug the device the device again and confirm one of the following options



- 12. Note the firmware updater will disable every audio stream on the PUC<sup>2</sup> as long as the Program is running. In order to continue using audio functions the updater must be closed.
- 13. Before closing the Updater you can verify the updated firmware with the file on the hard disk. Select the right file and click "Verify firmware".
- 14. The following Message should appear.



15. In case of mismatch a message similar like below will appear.



16. In this case you should make sure that you have selected the right file. If the right file was choose you should perform a new update.