


Operating Instruction		<b>WALLY</b> <sub>LOOPER</sub>
OPERATION	FUNC./STATUS	LED DISPLAY
Power on (no data)	Empty	None
Power on (with data)	Stop	Green LEDs flash
Tap footswitch (no data)	Record	Red LEDs light up
Tap footswitch when recording/overdubbing	Play	Green LEDs light up
Tap footswitch when playing	Overdub	Red LEDs light up
Hold footswitch when playing	Undo/Redo (last recording)	Green LEDs flash fast
Tap footswitch twice when playing/recording/overdubbing	Stop	Green LEDs flash
Hold footswitch when stopped	Delete	Green LEDs flash fast
Turn up the TEMPO when playing	Speed up	Green/Red LEDs flash successively at higher speed
Turn down the TEMPO when playing	Slow down	Green/Red LEDs flash successively at lower speed
Recording (around 15 minutes)	Memory nearly full	Red LEDs flash

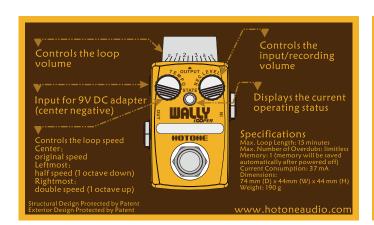

## \*\*XLEDs will flash once at the loop end. \*\*\*COverdub cannot be operated during tempo variation, you must turn the tempo back to the original speed (TEMPO knob pointing to center position) to resume overdubbing. \*\*Red LEDs will flash for a while when memory space is going to run out. When the loop time reaches the limit, recording will stop and turn to playback.