

# Projection Viewing Surface Care & Maintenance Instructions

*Please Note: Cleaning should be undertaken only when needed and with great care. Not all stains can be removed. Please take care to protect your screen from damage to minimize the need for these procedures.*

## TecVision™

*XH700X Grey, XH900X Grey, MS1000X Grey, XT1000X White, XT1100X White, XT1300X White, XT1600X White, XT1800X White*

Using a Lint-Free (microfiber) cloth that is dampened with clear water, gently blot the area. To clean a stubborn stain or a sticky surface, spray a solution of equal parts Clorox® Formula 409® and warm water onto a Lint-Free cloth. **DO NOT SPRAY THE SURFACE DIRECTLY.** Blot the stain and use compressed air to dry the area. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.**

## OptiView™

*Matt White XT1000E, Contrast Grey XH800E, Contrast White XH1100E*

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. Do not allow any cleaner to be absorbed by the fabric. **Do not use cleaning solvents or abrasives. Do not use Armor All®.**

*Pearl White CH1900E, Argent White XH1500E*

Using a clean, white cloth (100% cotton preferred) that is dampened with clear water, gently wipe the area in one direction. **Do not use a circular motion.** To clean a stubborn stain or a sticky surface, a solution of mild dishwashing liquid diluted with warm water can also be used following the same procedure as for water, and allow it to air dry.

## OptiFlex™

*Matt White XT1000V, Grey XH600V, ReAct MS1000V, Pure White XT1300V*

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.**

*Pearl White MH1500V*

Clean with a very soft brush or cloth and carefully dust the surface. **Do not use soap, water, solvents or abrasives. Do not use Armor All®.**

## ClearSound™

*Grey Weave XH600E, NanoPerf XT800V, Perf XT900V, Perf XT950E, White Weave XT900E*

Clean surface with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaning solvents or abrasives. Do not use Armor All®.**

## CineFlex™

*CineFlex White XT600V, CineFlex MH800V, CineFlex CH1200V*

Gently clean this rear projection material with warm water. A solution of mild dishwashing liquid diluted with warm water can also be used. Using a soft, disposable cloth, gently wipe the surface, completely rinse the entire surface with clear water and blot dry. **Do not allow any cleaner to be absorbed by the fabric. Do not use cleaners which contain abrasives or wax. Do not use Armor All®.**

## Rigid Rear Screens

*IRUS, Cinescreen®, DiamondScreen™*

Rigid rear screens can be cleaned with a soft, lint free cloth to remove dust from the surface. Remove soil marks with a dry cloth. **Do not use solvent or abrasives. Do not use Armor All®. Contact Draper for stronger cleaning needs.**

# DRAPER

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142  
Copyright © 2015 Draper Inc. Form Care&Maintenance\_Inst15-R Printed in U.S.A.

These are basic cleaning tips for dust or dirt. For more information on cleaning stains, please contact Draper, Inc.

Cinescreen® is a registered trademark of Draper, Inc.  
Armor All® is a registered trademark of Armor All Products Corporation  
Clorox® Formula 409® is a registered trademark of the Clorox Company Corporation

