

# Instructions

## StageHand by Draper

### Caution

- ① Avoid contact between the StageHand and the viewing surface. The metal may scratch or tear the vinyl screen material.
- ② Make sure screen is propped securely by the StageHand before attaching legs to the screen frame.
- ③ Assemble screen face up according to instructions provided with screen, and leave feet folded flat against legs.

- ① With the hook extended “up,” insert the StageHand beneath the top of the screen frame and pull back to hold screen frame firmly in place.



- ② Lift the StageHand and screen, telescoping the StageHand as needed to support screen comfortably. Hook rotates as it lifts.



- ③ Use the StageHand to prop the screen in an upright position.



- ④ The StageHand will support the screen while you unfold and lock the legs in their normal position, following the instructions supplied with the screen.



- ⑤ When finished, set the screen on its feet and pull down firmly to remove the StageHand from top of screen frame.



# DRAPER®

411 S. Pearl St., Spiceland, IN 47385 USA ■ 765-987-7999  
www.draperinc.com ■ fax 765-987-7142  
Copyright ©2012 Draper Inc. Form StageHand\_Inst12 Printed in U.S.A.

*If you encounter any difficulty using your StageHand by Draper, call your dealer or Draper, Inc., Spiceland, Indiana, (765) 987-7999; or fax (765) 987-7142.*