


StageScreen Projection Screen by Draper—Leg "A" Assembly Map

For use with screen viewing area heights up to 8'.

⚠ Before you start:

- Leg sections should be arranged so that:
 - Vertical guide pins point up.
 - Horizontal guide pins point toward T-section.

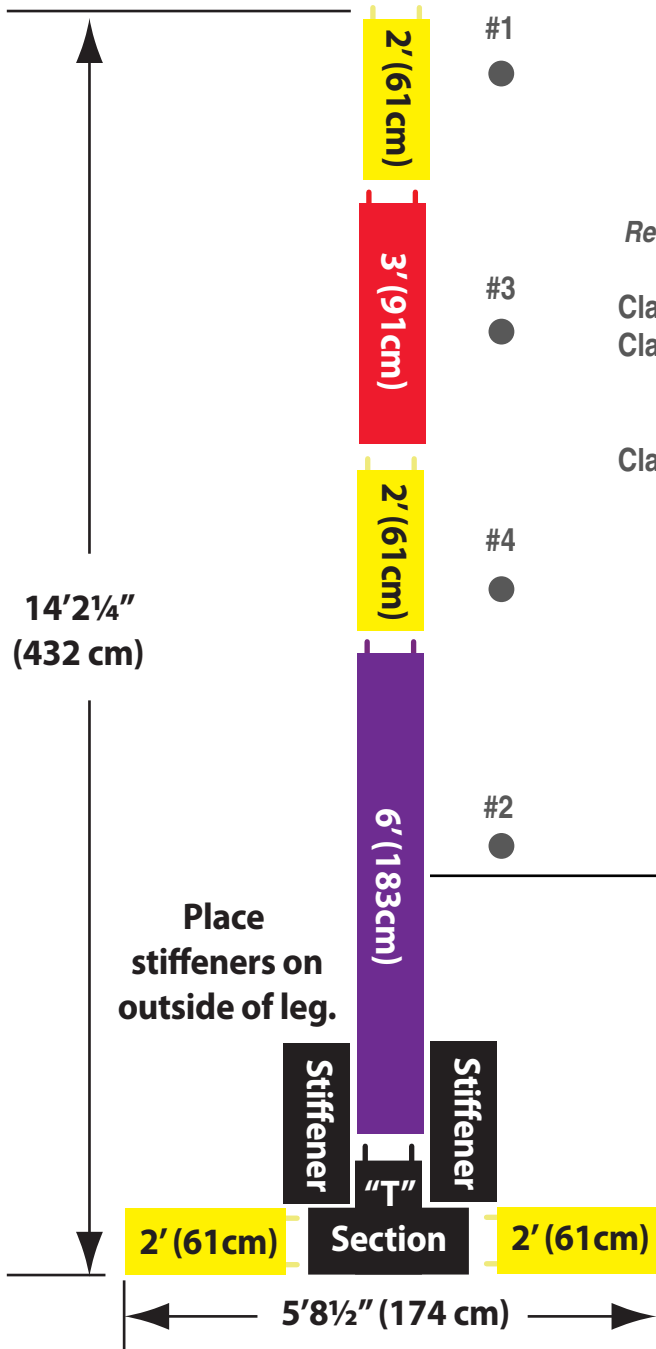

Red dots indicate recommended approximate points of attachment for leg clamps. Use the following rules for clamp placement:

- Clamp #1:** Attach within the top 6" of the leg.
Clamp #2: Attach as close to the bottom of the screen frame as possible (normally attaches to the corner section).
Clamp #3, #4: Space the clamps equally between clamp #1 and #2.

Part Numbers
 383781—Silver
 383785—Black

It is recommended that the bottom of the screen frame be positioned approximately 40" above the floor.



⚠ Caution:
 Beware of pinch points.

DRAPER®