

Extension Wall Mounting Brackets

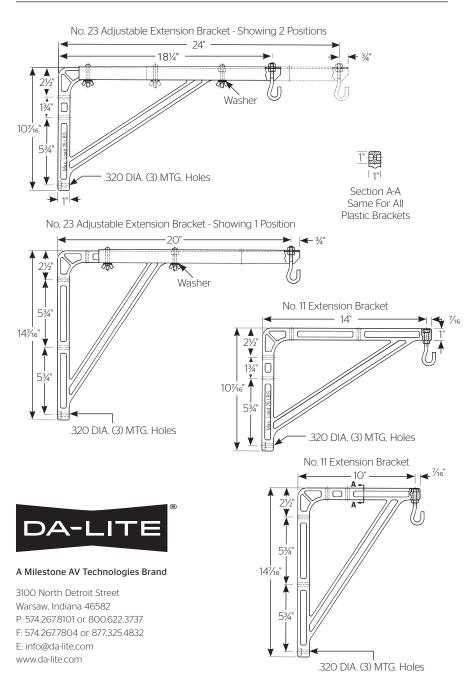



MOUNTING INSTRUCTIONS FOR


No. 11 and No. 23 Wall Brackets

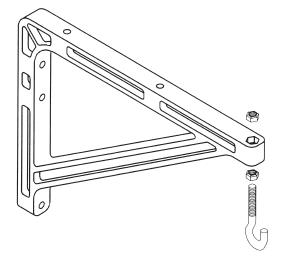

79163


No. 11 Extension Wall Brackets

• Screen can be extended 10" or 14" from wall by selecting one of the two mounting positions shown above.

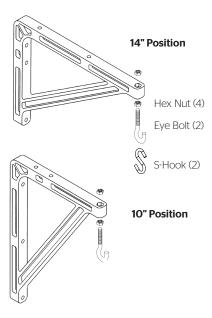

No. 23 Extension Wall Brackets

- Screen can be extended
 18¼", 20" or 24" from wall by selecting one of the two mounting positions shown above and wing nut and bolt adjustment.
- Extension arm holes should be lined up with desired holes in plastic bracket.
 Attach extension arms to wall brackets.

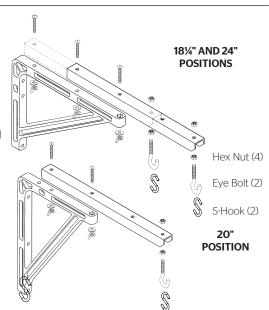

Installation

Wall fasteners not included

- Install eye bolts in wall brackets. Determine the height and location of the screen to be mounted and mark. Measure the distance between the centers of the 2 mounting rings on the screen. Transfer the measurement to the wall and attach the wall brackets securely to the wall at those points.
- Maximum recommended fastener size is 5/16" diameter.
- Do not overtighten fasteners.
- Extension wall brackets are only to be used with screens weighing 75 pounds or less.
- Hang screen from the eye bolts with S-hooks.

Crimp both loops of S-hooks closed.

To provide proper tilt and eliminate keystoning pull the screen down, then
hook it back to the wall by attaching the bail handle to an accessory Tilt Lock,
Da-Lite part No. 40965. Tilt Lock is sold separately.