

DW 9700 CYMBAL STAND

Remove the stand and all packing materials from the box, then follow these instructions to set up and adjust your stand to fit the way you play.

Section 1: Leg Assembly and Base Section Adjustments

Section 1.1: Leg Assembly

1. Loosen wingscrew on the clamp at top of base section.
2. Pull legs outward far enough to allow the clamp to contact memory lock.
3. Tighten wingscrew.

To open or close the legs, loosen the drumkey screw on the leg memory lock located on the bottom tube section. Loosen the wingscrew on the clamp at top of base section and adjust the tripod to achieve the desired position. Then tighten the clamp and memory lock screw.

Section 2: Height Adjustments

Section 2.1: Tube Sections and Receivers

1. Loosen the memory locks and wingscrews on tube receivers.
2. Raise or lower the upper or middle tubing sections to the desired position.
3. Tighten memory locks and wingscrews on tube receivers.

Section 3: Boom Arm Adjustments

Section 3.1: Straight/Boom Casting

DW's Straight/Boom Casting utilizes an exclusive double-sided clamp with one side used to adjust the distance and balance of the arm and the other controlling its angle. This casting is also designed to allow the stand to be converted from a boom to a straight stand by positioning the angle of the arm so that it is vertical and then telescoping it through the casting and into the top of the upper tube section. To adjust either one of the positioning adjustments, loosen the respective wingnut on the clamp, position the arm as desired and retighten the wingnut.

Section 3.2: Boom Arm

1. Loosen the drumkey screw on the boom arm memory lock.
2. To adjust the distance of the arm, loosen the distance clamp wingnut and position the arm as desired.
3. Tighten the distance clamp wingnut.
4. Move the boom arm memory lock so that it interlocks with the notch in the top of the straight/boom casting and tighten the drumkey crew on the memory lock.

Section 4: Tilter and Cymbal Space Adjustments

Section 4.1: Tilter

1. Loosen the TechLock™ on the tilter section.
 2. Loosen the Position Reset Handle.
- Note: The Position Reset Handle is spring activated. To operate, grasp the handle with your fingers and use your thumb to press on the button in the center of the handle while pulling the handle away from the tilter. Reset the handle to a more comfortable position and release.
3. Adjust the angle of the tilter and retighten the Position Reset Handle and TechLock.

Section 4.2: Cymbal Space Adjustment

1. Loosen the drumkey screw on the cymbal seat/cymbal space mechanism.
2. Spin the mechanism to open or close the amount of space between the upper and lower cymbal felts and the cymbal. Be careful to leave some slack in the spacing as this will allow the cymbal to sound fuller and prevent cracking.
3. Adjust the angle of the tilter and retighten the Position Reset Handle and TechLock.


Section 4.3: Drop-Resistant Wingnut

The contoured wingnut and cymbal stem feature a drop-resistant design for faster set up and pack up as well as increased security. To remove the wingnut, gently spin it counterclockwise. To replace the wingnut, spin it clockwise so that it securely contacts the cymbal sleeve.

Section 5: Memory Labels

Section 5.1: Memory Labels

Eight sets of Memory Labels are included with each 9700 stand. These labels can be adhered to the upper portion of each stand section and used to identify the parts of individual stands when multiple stands are separated for transport.

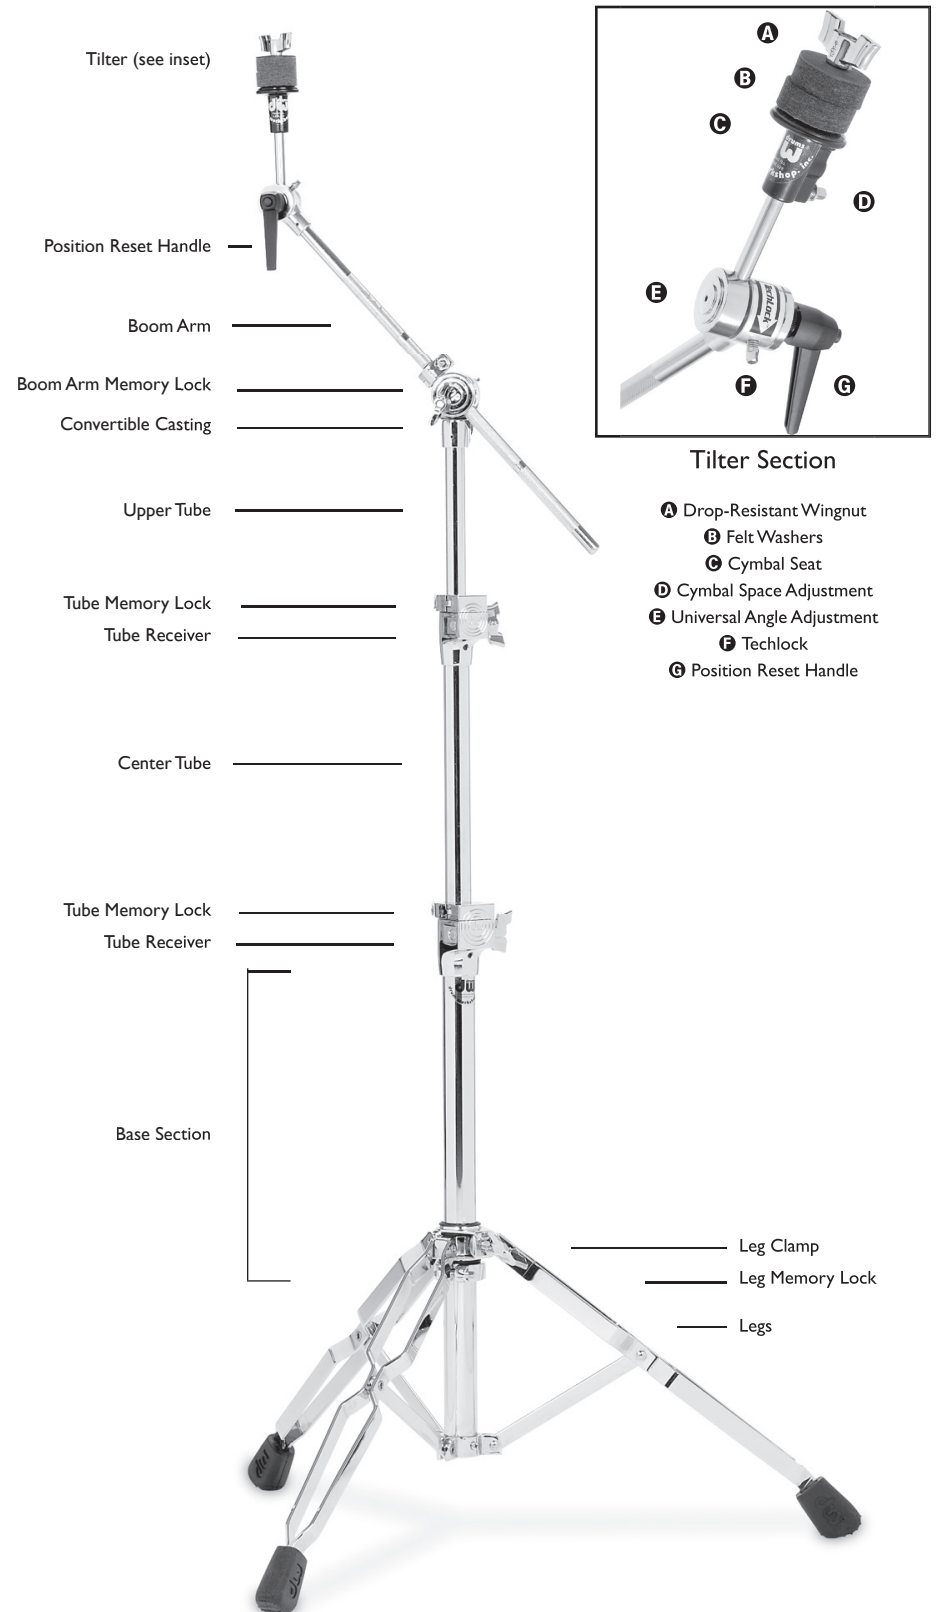

9700

Instructions and parts identifications also apply to 9710, 9700L and 9710L stands.

DW 9700 Straight/Boom Cymbal Stand

— Don Lombardi
President, Drum Workshop, Inc.



Thanks for purchasing this DW product. It has been designed and manufactured to provide a lifetime of trouble-free service. Please take a moment to familiarize yourself with the exclusive features and operating suggestions contained in this manual in order to ensure its optimum performance. Should you have any further questions, feel free to contact your local authorized DW dealer.

9000 SERIES CYMBAL STANDS

O W N E R ' S M A N U A L



The Drummer's Choice®

DRUM WORKSHOP, INC
3450 Lunar Court • Oxnard, CA 93030 USA
www.dwdrums.com

specifications subject to change without notice
PR-OM-9700 © DW 2004

DW HARDWARE 5-YEAR LIMITED WARRANTY

For a period of five years from the date of purchase, Drum Workshop, Inc. guarantees the original owner, when presented with proof of purchase, that all 9000, 5000 and 6000 Series Hardware cast parts are free of material and manufacturing defects. This warranty is limited to cast parts only. This warranty does not include moving parts. If, under normal playing conditions, parts covered in this limited five year warranty fail, they will be replaced at no charge. Return the item to your authorized DW dealer or, if there is not a dealer in your area, contact DW directly. **DO NOT** send products to DW without first receiving a Return Authorization Number. Shipping charges to DW will be paid by the consumer. DW's maximum liability pursuant to this warranty is limited to the monetary value of the product that is the subject of the warranty claim. This is a summary only; please see the actual limited warranty for additional terms and conditions.



9300
snare
drum

9934
double
tom/cymbal

9900
double
tom

9710
straight
cymbal

9700
straight/boom
cymbal

9500
hi-hat

9100
round
throne

9120
motorcycle
throne

A wide range of DW 9000 Series Stands, Pedals, Thrones and Accessory Clamps and Arms are now available.

Contact your authorized DW dealer for additional accessories and replacement parts.