

FreeSpeak II™ Stand alone Base Station system

Quick Start Guide



A FreeSpeak II (FS II) system consists of six main elements:

- Wireless beltpacks (FSII-BP-19, FSII-BP-24).
- The Base Station (FSII-BASE-II) that routes communication to and from the beltpacks and other audio devices.
- A Core Configuration Manager (CCM) to quickly operate and configure your FS-II system.
- Antennas (FSII-TCVR-19, FSII-TCVR-24) that provide coverage zones in which the beltpacks operate.
- Optional antenna splitters (PD2203 or FSII-SPLTR) that run up to 5 separate antennas.
- Suitable headsets such as the Clear-Com CC-300-X4.

Connecting the transceiver/antennas to the Base Station

To connect the antennas to the Base Station:


- 1) Clear-Com recommends using 4-pair shielded screened cable (CAT-5/5e/6) with RJ45 connectors to connect the antennas to the Base Station. You can connect up to five antennas to each transceiver port using an antenna splitter, or connect two antennas directly to the Base Station. The Base Station can power a single antenna up to 984 ft (300 m) or multiple antennas up to a maximum of 2625 ft (800 m). See the User Guide for more information.



- 2) When the transceiver/antennas are connected, turn on the Base Station and wait for it to boot.

Accessing the CCM


To access the CCM, power the Base Station and use one of the LAN ports to connect it to a network. Find the IP address of the Base Station in the front menu screens using the rotary controllers to navigate through the menu system:

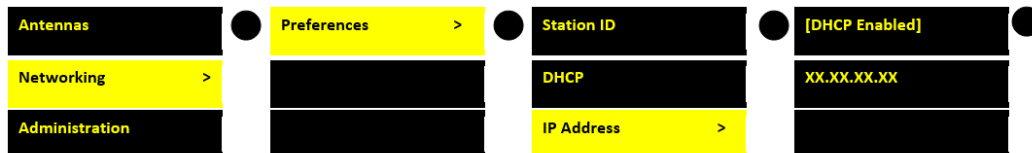

Press **MENU** button on front of Base for menu mode.
Navigate menus using rotary controllers.

To open the CCM, enter the unit's IP address into the URL field of a browser (PC, tablet or mobile). This opens the CCM on the Overview page.


Note: Default user name and password: Admin, Admin.

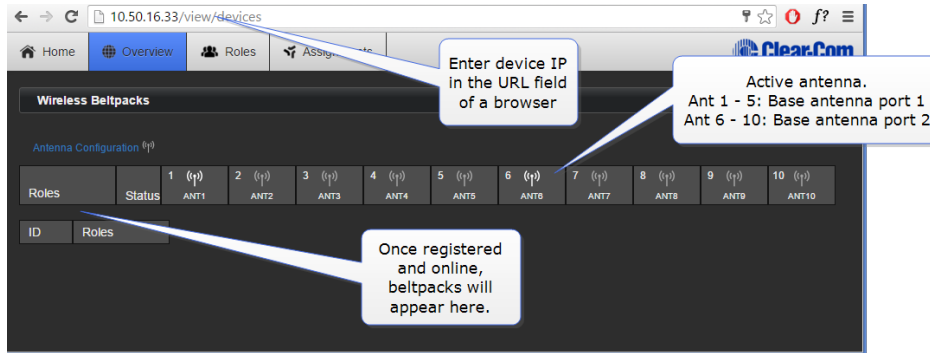

Note: The IP address allocation is set to Dynamic Host Control Protocol (DHCP) as a default.

Using the CCM

Use the top navigation bar to access control pages of the CCM. Click/touch tabs and buttons to explore the pages. Click/touch '+' to drop access menus. Device can be reset to factory defaults in **Home/Maintenance**.

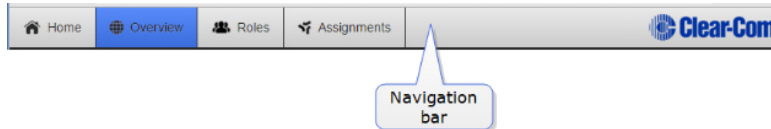



Using the Beltpacks

The system arrives with a default audio set-up for five beltpacks (or 25 if licensed) and roles so the system can simply be wired and powered for basic use. A role is a preset, editable configuration for a beltpack. The default set-up has two Channels. Each channel talks to:

- All the beltpacks on that channel
- The head set on the Base Station.

To customize an audio channel configuration please refer to the **FreeSpeak II User Guide**.

Registering Beltpacks – You must register Beltpacks before use

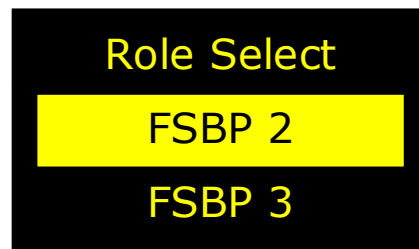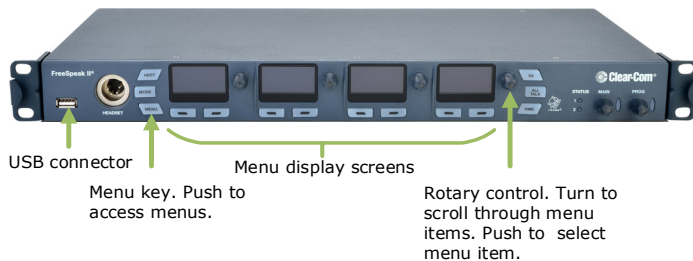

- 1) Do one of the following:
 - (a) Connect the beltpack to the Base Station using the USB connector on the front panel.
 - (b) From the Base Station menu, go to **MAIN MENU > ADMINISTRATION > BELTPACKS > OVER THE AIR > OTA**. Enable registration mode has a two minute inactive time-out.
 - (c) From the CCM, go to **HOME > GENERAL > WIRELESS > ENABLE OTA**
- 2) On the beltpack to be registered, hold down the menu key for two seconds, then enter **SYSTEM CONNECT** using the rotary controllers and the **C & D** keys.
- 3) Select the system to pair to. The system will be visible (**V**) and in pairing mode (**P**).
- 4) Enter the four digit pairing code for the system using the rotary controllers and the menu select key (**D**). The default is 0000.
- 5) Select an available role from the list displayed on the beltpack.

Copyright © 2016 HME Clear-Com Ltd. All rights reserved.