


INSTRUCTION SHEET
SR SERIES
REAR RACKRAIL OPTION

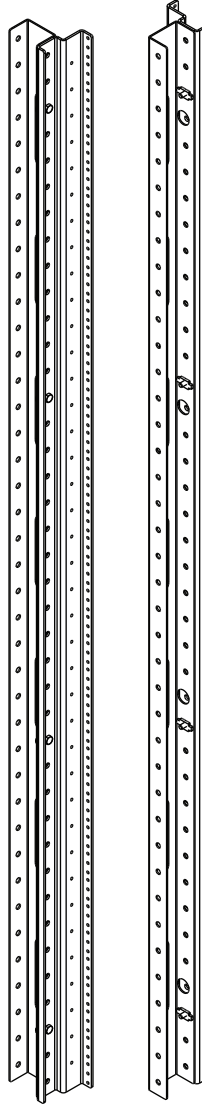

THANK YOU

Thank you for purchasing the SR Series Rear Rackrail option. Please read these instructions thoroughly before installing or assembling this product.

IMPORTANT SAFETY INSTRUCTIONS

- Read these instructions.
- Heed all warnings.
- Clean only with dry cloth.
- Keep these instructions.
- Follow all instructions.
- Only use attachments/accessories specified by the manufacturer.



WARNING: A warning alerts you to a situation that could result in serious personal injury or death.



WARNING: Middle Atlantic Products, Inc. electrical systems conform to and should be properly grounded in compliance with requirements of the current National Electrical Code or codes administered by local authorities. All electrical products may present a possible shock or fire hazard if improperly installed or used. Middle Atlantic Products, Inc. electrical products may bear the mark of a Nationally Recognized Testing Laboratory (NRTL) and should be installed in conformance with current local and/or the National Electrical Code.



WARNING: Failure to read, understand and follow the following information can result in serious personal injury, damage to the equipment or voiding of the warranty. It is the responsibility of the Installer/User to ensure that this product is loaded according to specifications.

INSTRUCTIONS IMPORTANTES SUR LA SÉCURITÉ

- Lire ces instructions.
- Respectez tous les avertissements.
- Nettoyer uniquement avec un chiffon sec.
- Conservez ces instructions.
- Suivez toutes les instructions.
- N'utilisez que des accessoires spécifiés par le fabricant.



AVERTISSEMENT: Un avertissement vous avertit d'une situation pouvant entraîner des blessures graves ou la mort.

 


AVERTISSEMENT: Middle Atlantic Products, Inc. électrique systèmes conformes à devraient être mis à la terre dans conformité avec les exigences de la National actuelle ou comme les codes électrique administré par les autorités locales autorités. Tous les produits électriques peuvent présenter un choc ou un incendie danger si elle est mal installé ou utilisé. Middle Atlantic Products, Inc. produits électriques peuvent porter la marque d'un Nationally Recognized Testing Laboratory (NRTL) et doit être installé en conformité avec courant local et/ou le National Electrical Code.




AVERTISSEMENT: Refus de lire, comprendre et suivre la renseignements suivants peut traduire par de graves blessures, des dommages à l'équipement ou invalider la garantie. Il est la responsabilité de l'installateur / utilisateur de s'assurer que ce produit est chargé conformément aux spécifications.


SUPPLIED COMPONENTS AND HARDWARE



(8x)
Rackrail Nut
A

 

(8x)
Hex Head Screw
B

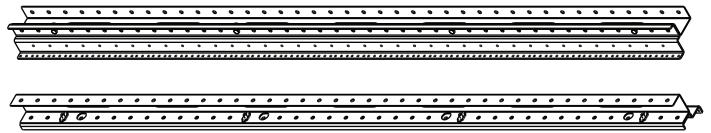

Rear Rackrail
NOTE: Rear rackrail comes pre-assembled to rackrail adapters.
C

NOTE: Additional hardware is included that may not be required for your installation.

REQUIRED TOOLS

- 7/16" Wrench or Socket



WARNING: Use tools with caution and follow all necessary safety protocols.

AVERTISSEMENT: Utiliser des outils avec prudence et suivre tous les protocoles de sécurité nécessaires.

INTRODUCTION

NOTE: If using the vertical plastic fingers option, it must be installed prior to assembling your rear rackrail into the SR enclosure. For more information, refer to the SR Series Vertical Plastic Fingers Option instruction sheet (I-00861).

INSTALLATION

1. Slide (4x) rackrail nuts (A) into rackrail bracket channels as shown. (**FIGURE A**)
2. Use (4x) screws (B) through a rear rackrail adapter (C) and into rackrail nuts (A) as shown.

TIP: Hold rackrail nut in place on the rackrail bracket channel with one hand, while threading a screw through the rear rackrail adapter and into the nut with the other.

NOTE:

- Hand-tighten screws at this point to allow for adjustments.
- On 24 space SR enclosures, use (2x) rackrail nuts (A) and (2x) screws (B) for installation.

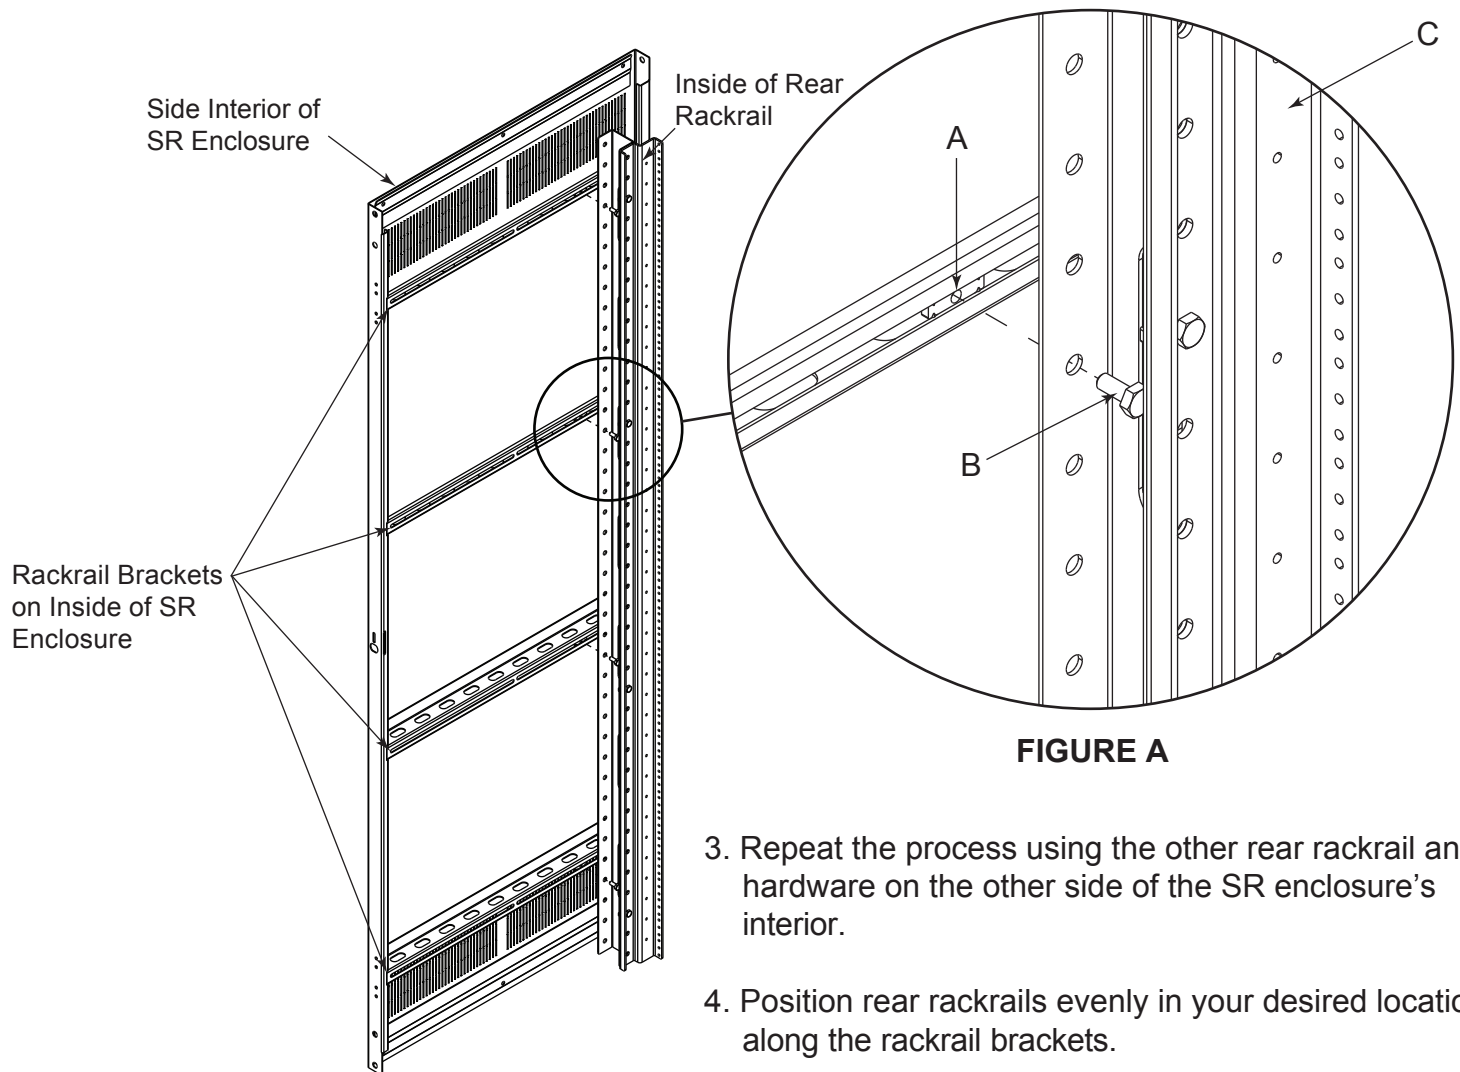


FIGURE A

3. Repeat the process using the other rear rackrail and hardware on the other side of the SR enclosure's interior.
4. Position rear rackrails evenly in your desired location along the rackrail brackets.
5. Tighten all screws.

WARRANTY

For warranty information, refer to <http://www.middleatlantic.com/company/about-us.aspx#warranty>

Corporate Headquarters

Corporate Voice: 973-839-1011 - Fax: 973-839-1976 / International Voice: +1 973-839-8821 -
Fax: +1 973-839-4982
www.middleatlantic.com - info@middleatlantic.com

Middle Atlantic Canada

Voice: 613-836-2501 - Fax: 613-836-2690 / ca.middleatlantic.com -
customerservicecanada@middleatlantic.ca

Factory Distribution

USA: NJ - CA - IL Canada: ON - BC

At Middle Atlantic Products we are always listening. Your comments are welcome.

Middle Atlantic Products is an ISO 9001 and ISO 14001 Registered Company.



Middle Atlantic Products

what great systems are built on™

middleatlantic.com ■ 800.266.7225