
- © 2018 Roland Corporation
- Before using this unit, carefully read the leaflet "USING THE UNIT SAFELY" and "IMPORTANT NOTES." After reading, keep the document(s) where it will be available for immediate reference.
- This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.


## **Part Descriptions**

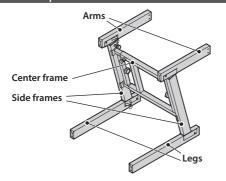

# Assembly


## Attaching the Side Frames

1. Using the included knob bolts, fasten the left and right side frames to the center frame.

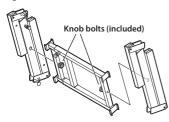

2. Open the arm and leg of each side frame until you hear a click.


Make sure that the lock pins of the arm and leg fit into the holes and are secure.

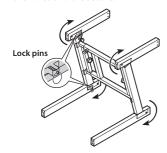

#### NOTE

When opening the arm and leg of each side frame, take care not to pinch your finger etc.

## Adjusting the Height

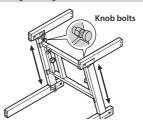

- Loosen the knob bolt of each side frame.
- 2. While pulling out the knob bolt, lift up the arm and adjust it to the height of the calibration line.
  - \* You must adjust it precisely to the calibration line.




Release the knob bolt.

When you release the knob bolt, it enters the screw hole.

- \* Slightly raise and lower the arm to verify that it is locked.
- 4. Firmly tighten the knob bolt to secure it.

### Adjusting the Width

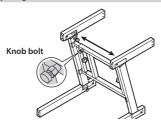

- 1. Loosen the knob bolt of the center frame.
- 2. While pulling out the knob bolt, adjust the width of the center frame.
- Release the knob bolt.
- **4.** Adjust the position of the center frame so that the knob bolt enters the screw hole.
  - \* Slightly slide the side frame to left and right to verify that it is locked.
- 5. Firmly tighten the knob bolt to secure it.

Roland is an either registered trademark or trademark of Roland Corporation in the United States and/or other countries.