

Warranty:

This product is warranted to be free of defects in materials or workmanship to the original purchaser for a period of 2 years from the date of purchase. Should warranty service be required, return the unit postage paid along with the original sales receipt to:

Whirlwind Music Dist., Inc. 99 Ling Road Rochester NY 14612 Whirlwind will, at its option, repair or replace the unit. This warranty does not cover damage resulting from abuse, unauthorized modifications or use of the product in unintended applications.

HANDMADE IN ROCHESTER, NY

1-800-733-9473 | www.whirlwindusa.com



Bomb manual.indd 2-3 10/8/10 10:27 AM



- 1: INPUT JACK Connect a cord from your instrument here. Removing the cord from the INPUT jack when not in use disconnects the battery which will prolong battery life.
- 2: OUTPUT JACK Connect a cord out to your amplifier here.
- 3: 9 VOLT INPUT Connect an optional power supply here. Accepts an industry standard 9 Volt regulated DC supply with a 2.1mm barrel type connector, center contact negative. The Whirlwind PS9V-EFX power supply is recommended for proper operation.
- 4: This controls the amount of boost applied to the signal. At full counter-clockwise ("1"), there is no boost, the unit is at unity gain. As the knob is turned up, the gain gradually increases until it reaches +26 dB of gain at full up ("11").
- 5: STATUS LED Illuminates when the effect is active.
- 6: FOOTSWITCH Turns the effect on and off. When OFF, the unit is completely removed from the signal path (TRUE BYPASS).
- 7: BATTERY COMPARTMENT Remove 4 screws on the bottom of the unit to access the battery. Be sure to leave the protective insulator in place to prevent the circuit board from contacting the metal case.

Bomb manual.indd 4-5 10/8/10 10:27 AM