## **Using the IR Remote Control** (sold separately)

You need to set the fixture to "IR mode" via the LCD control panel prior to using the IR remote control. To do this, just repeatedly press the **<MENU>** button to navigate the LCD display menu until it reads "IR MODE", then push the **<ENTER>** button.

Then here's what to do:

Blackout - The top left red colored button labeled **<BLACKOUT>** on the remote control will turn off the LEDs, regardless of what mode you are currently running. Push the blackout button again to return to its previous mode.

**Auto Run** - The auto run button <**A>** sets the fixture to run in auto mode. You can adjust the speed by pressing the speed button <**SP>**, then use the <+/-> buttons to adjust the speed accordingly.

**Sound Active Mode** - Pressing the **<SA>** button will cause the fixture to self destruct. No, really it just sets the fixture to run in sound active mode.

**Strobe Mode** - The **<F>** button sets the fixture to run in strobe / flash mode. You can adjust the strobe rate by pressing the **<SF>** button, then use the **<+/->** buttons to adjust the speed accordingly.

**Built-in Programs** - Press the **<PROG>** button to run in built-in program mode. You can cycle through different built-in programs by using the **<+/->** buttons. To adjust the speed of the built-in program, press the speed button **<SP>**, then use the **<+/->** buttons to adjust the speed accordingly.

**Set Address** - Press the **<S>** button to begin setting the starting DMX address. Then use the **<+/->** buttons to adjust the starting DMX channel from 001-512. Press the **<D>** button to confirm DMX mode.



**DMX Mode** - Pressing the **<D>** button sets the fixture to run in DMX mode. The currently set address will be used for the starting address. To change the starting DMX channel, see the above "Set Address" instructions.

**Slave Mode** - Want to set this fixture(s) as a slave unit(s) via remote? No problem, just push the **<SL>** button. And note, the first fixture in the DMX chain will serve as the master fixture.

**LCD Backlight** - Press the edit button **<E>** to turn on the LCD backlight. The LCD backlight illumination off after 20 seconds.

## Color Mixing:

**Red Intensity** - Press the <1> button, then press the <+/-> buttons to adjust intensity level.

Green Intensity - Press the <2> button, then press the <+/-> buttons to adjust intensity level.

**Blue Intensity** - Press the <3> button, then press the <+/-> buttons to adjust intensity level.

Amber Intensity - Press the \$<4>\$ button, then press the \$<+/->\$ buttons to adjust intensity level.

White Intensity - Press the <5> button, then press the <+/-> buttons to adjust intensity level.

UV Intensity - Press the <6> button, then press the <+/-> buttons to adjust intensity level.

## Static Colors:

Full On - Press the <7> button for full RGBAW+UV intensity.

Magenta - Press the <8> button for magenta color.

Aqua - Press the <9> button for aqua color.

UV - Press the <0> button for ultraviolet lighting.

**Backspace Button** - Press the <**←>** in any mode to activate IR MODE.

**Enter** - The <**◄**> button is used to save a selected user setting.