 


Operating Manual

PO-9106 Program Distributor



©Copyright 2004 Inter-M Corporation

interM

Contents

Welcome	3
 Unpacking	3
 Warnings	3
 Operation.....	5
 Program Distributor.....	6
Features	6
Front Panel Controls.....	7
Rear Panel Controls	8
Connections.....	9
<u>Specifications.....</u>	<u>10</u>

Welcome

A personal welcome to you from the management and employees of Inter-M

Thank you for purchasing this fine Inter-M product. All of us here at Inter-M are dedicated to providing you with the highest quality products and the best value.

We sincerely trust this product will provide you with years of satisfactory service, but if anything is not to your complete satisfaction, we will endeavor to make things right.

Welcome to Inter-M, and thank you for becoming a part of our worldwide extended family!

Unpacking

Although your PO-9106 is neither complicated nor difficult to operate, we recommend you take a few minutes to read this brief manual and familiarize yourself with the important information regarding product features, setup and operation.

As with most electronic devices, we strongly recommend you retain the original packaging. In the unlikely event the product must be returned for servicing, the original packaging (or reasonable equivalent) is required.

Warnings

Environment

Never place this product in an environment that could alter its performance or reduce its service life. Such environments are usually characterized by high levels of heat, dust, moisture, or vibration.

Safety

1. Read these instructions carefully.
2. Follow all instructions.
3. Keep all warnings.
4. Do not operate this apparatus near water.
5. Clean only with a damp cloth.
6. Do not block any of the ventilation openings.
7. Install only in accordance with the instructions in this manual.

8. Do not install near any heat sources such as radiators, heat registers, stoves, or other devices (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding type plug. A polarized plug has two blades, with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.




10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where it is attached to the apparatus.

11. Use only the attachments/accessories specified.

12. Use only with a cart, stand, tripod, bracket, or table specified, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid overturning.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.

14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

 <p>CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN</p> <p>CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.</p>	 <p>This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.</p>  <p>This symbol is intended to alert the user to the presence of important operation and maintenance (servicing) instructions in the literature accompanying the appliance.</p> <p>Caution: To prevent electric shock do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.</p>
<p>WARNING</p> <p>To prevent fire or shock hazard, do not expose the unit to rain or moisture.</p> <p>*Do not install this equipment in a confined space such as a book case or similar unit. *The apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus. *Worded: "WARNING FOR YOUR PROTECTION PLEASE READ THE FOLLOWING-WATER AND MOISTURE: Unit should not be used near water (e.g. near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement, or near a swimming pool, etc). Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings."</p>	<p>Attention: Pour prévenir les chocs électriques ne pas utiliser cette fiche polarisée avec un prolongateur, une prise de courant ou une autre sortie de courant, sauf si les lames peuvent être insérées à fond sans en laisser aucune partie à découvert.</p>

Operation

Make certain that speakers and input sources are properly connected before switching on.

Keep volume levels at minimum gain before switching on.

NOTE: The system's operation is delayed by approximately three seconds after pressing the power switch. This is due to the built-in protection circuitry, designed to protect speakers and other system components.

PO-9106

Program Distributor

Features

Convenient and Easy to Operate

- Distributes a single channel input to six outputs for signal transmission.


Easy Level Adjustment

- Front-panel input and output level adjustment.

Input Monitoring

- Input Peak LED monitoring.

Front Panel Controls

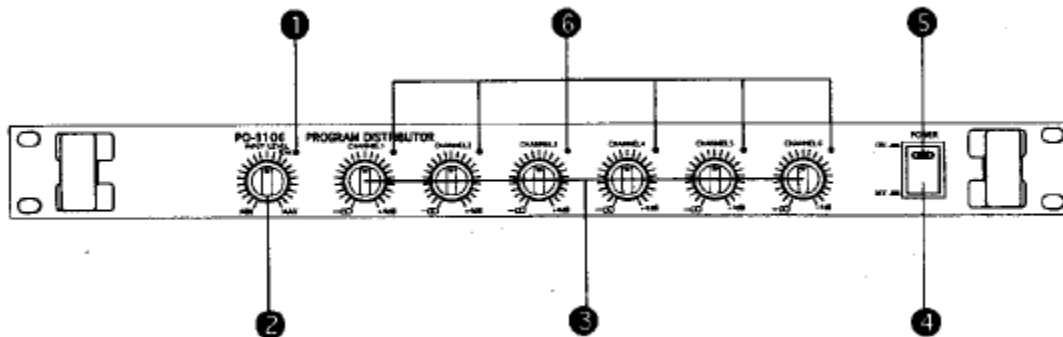

1. Input Peak Indicator

This LED lights to indicate too hot an input level.

2. Input Level Control

This knob controls the input level.

3. Output Level Control

This knob controls the output level for each of the six outputs.

4. Power Switch

This switch is used to switch the unit on and off. When the unit is on, the Power Indicator LED (5) is lit.


5. Power Indicator

When the unit is on, this Power Indicator LED is lit.

6. Output Indicators

These LEDs indicate signal on their associated outputs.

Rear Panel Controls

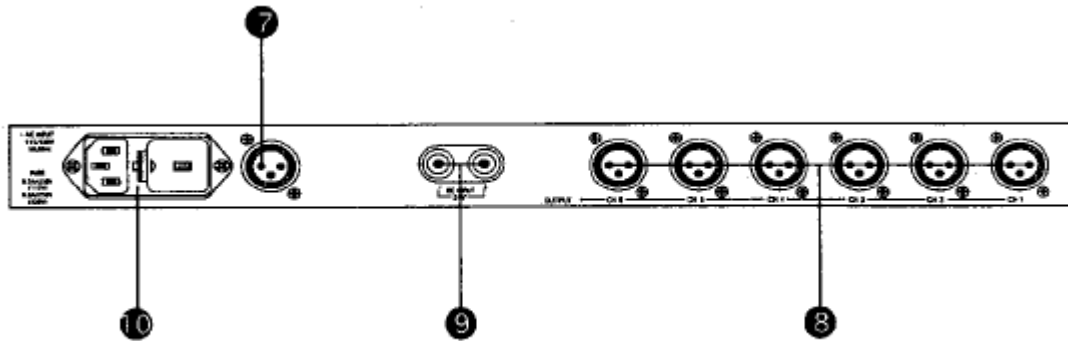

7. Line Input

Line-level input on balanced XLR connector.

8. Line Outputs 1-6

Line-level outputs on balanced XLR connectors.

9. DC Power Input


These terminals are provided for the connection of DC battery power. Connect a 24VDC battery source to these terminals. Make certain the red terminal is connected to the battery's positive (+) side, and the black terminal to the battery's negative (-) side.

10. AC Power Input

Connect a standard three-pin AC cable to this connector.

Connections

- Connect a signal source such as the Inter-M EQ-9232 to the Line Inputs.
- Connect multiple outputs such as Inter-M PA-9312 and PA-9324 amplifiers to the Line Outputs.
- Connect a DC power source such as the Inter-M PD-9212 to the DC Power Inputs.

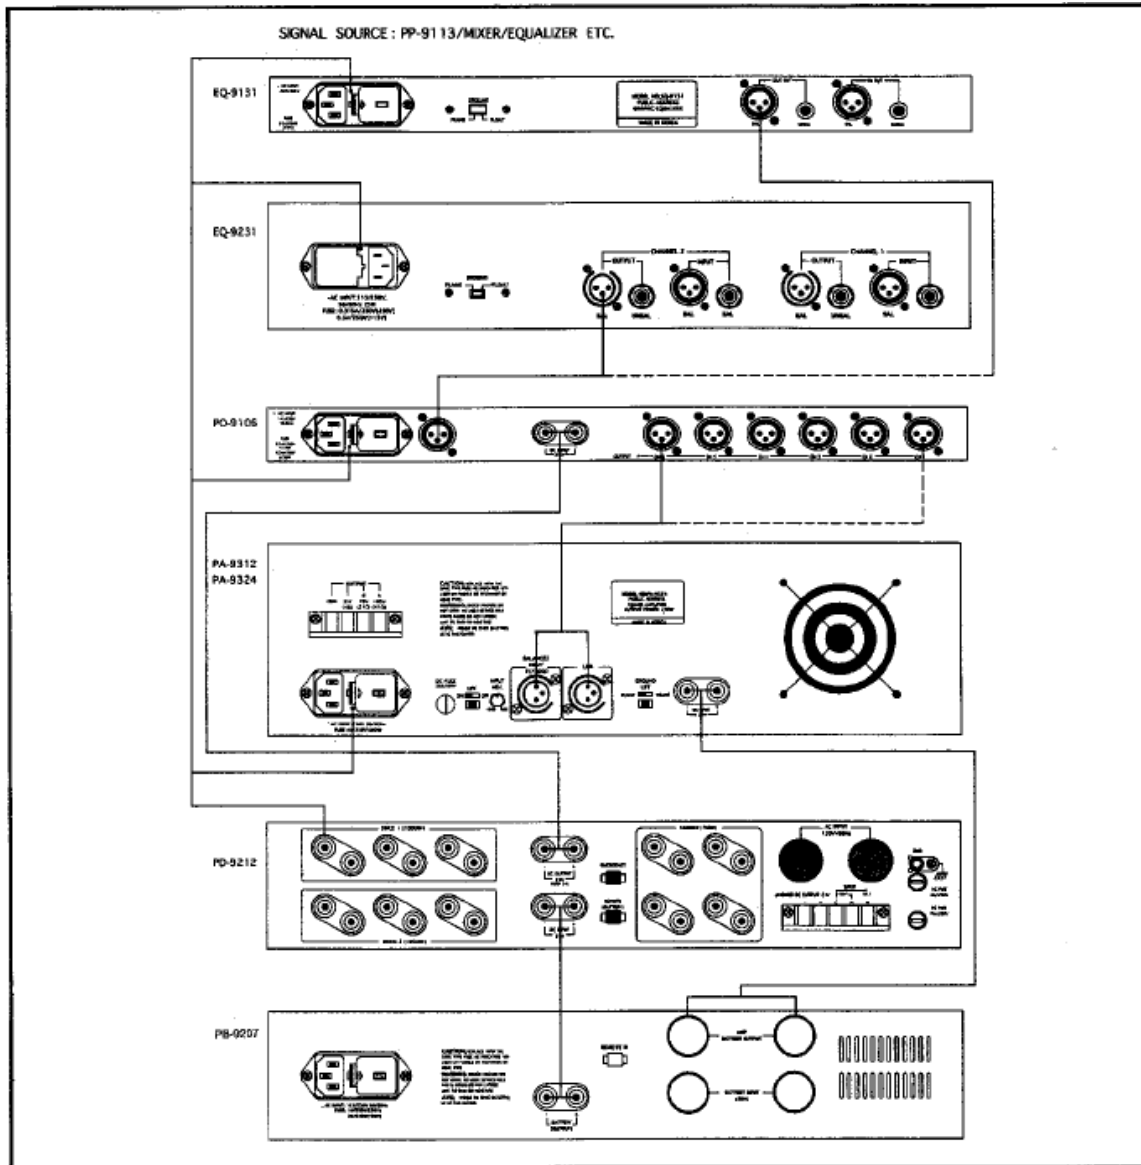

Specifications

ELECTRICAL

Channels	1 Input, 6 Outputs
Frequency Response	20Hz-20kHz
T.H.D at 1kHz, Rated Output	Less than 0.1%
Input Sensitivity/Impedance	1V/600 Ω Balanced
Output Level/Impedance	1V/600 Ω Balanced
Signal to Noise Ratio	> 75dB

GENERAL

Power Source	100 –240VAC, 50/60Hz, 24VDC
Power Consumption	8W
Weight	4 kg (8.8 lbs)
Dimensions	482(W) x 44(H) x280(D) mm 19(W) x 1.75(H) x 11 (D) in.

Specifications and design subject to change without notice for improvements.



Inter-M, Ltd. (Korea) began operations in 1983.

Since then, Inter-M has grown to become one of the largest manufacturers of professional audio and commercial sound electronics equipment in the world.

Inter-M has gained worldwide recognition for its own branded products, as well as private label manufacturing of electronics sold under other names (OEM).

The company is no longer just a Korean company, but rather a global company that is truly international in scope, with factories and offices in Korea and China, and sales and marketing operations located in Japan, Europe, and the U.S.A.

With more than 850 employees around the globe, Inter-M is well-poised for further growth and expansion.

INTER-M AMERICAS, INC.

1 EAST BEACON LIGHT LANE, CHESTER, PA, USA 19013-4409

TEL: (610) 874-8870, FAX: (610) 874-8890

Home Page: <http://www.inter-m.net>, E-mail: service@inter-m.net

INTER-M Corporation

SEOUL OFFICE: 653-5 BANGHAK-DONG, DOBONG-KU, SEOUL, KOREA

TEL: 82-2-2289-8140~8, FAX: 82-2-2289-8149

Home Page: <http://www.inter-m.com>, E-mail: export@inter-m.com