

NOTES:

- Call-in switch is momentary contact, normally open, connect as specified by control system manufacturer
- Verify proper XLR wiring with the connected XLR equipment manufacturer

