FreeSpeak Edge[™] wireless beltpack



FreeSpeak Edge[™] is a member of Clear-Com's FreeSpeak[™] family of digital wireless intercom solutions. A FreeSpeak Edge wireless beltpack gives you simultaneous access to up to 8 channels of talk/listen communication, with the ability to switch among them as desired. It communicates with the following components:

- An Eclipse-HX matrix with one or more E-IPA-HX interface cards.
- FS Edge 5 GHz transceiver/antennas (FSE-TCVR-50-IP-US, FSE-TCVR-50-IP-EU). These provide custom coverage zones in which the beltpacks operate.

Charging the beltpack

To remove the battery, open the battery release latch and push in the direction indicated on the device.

The beltpack uses a rechargeable Li-Ion battery.

A dedicated drop-in battery charger can charge up to four Li-Ion batteries simultaneously.

You can also charge the batteries using a USB C cable to any USB charger.

Ensure the beltpack has a charged battery and press the power button (quick tap).



The beltpack menu





Using the menu system

- Configure volume and display settings for the beltpack
- Read information, such as software version
- Connect to the system
- Perform a site survey and a local RF channel scan
- Switch to speaker mode (no headset)



Configure EHX

Assuming a matrix with at least 1 E-IPA-HX card:

- EHX: Cards and Ports > IPA > Add Ports > wireless beltpacks (for each physical beltpack as required)
- 2. EHX: Hardware > transceivers > add Edge tcvrs
- EHX: Configuration > Beltpack roles > add Edge roles and Panels > role(s) configure keys

Beltpack roles

Audio configuration on your beltpack is controlled by a role.

Before connecting the beltpack to a transceiver, a role for it must be created in the EHX software.

In the EHX software navigate to:

Matrix>Configuration>Beltpack Roles

Port	Label	Beltpack Type	Description	
601	Tech Pubs	FreeSpeak Edge Role ~	New BeltpackRole 601	
New FS	II Role New FS Edge	e Role Delete		

For more information please refer to the *EHX Software Configuration Guide.*

Register beltpacks

Beltpacks must be registered before use. At least one transceiver must be connected to the system before registration is possible.

Register beltpack(s) Over the Air:

- a. EHX: Hardware > Beltpacks > Start OTA registration
- b. Beltpack: Menu > System > System Connect > Select matrix (press D)
- c. Beltpack: Select role (press **D**)
- d. EHX: Hardware > Beltpacks > Fetch registered beltpacks from Matrix
- e. Apply Map to Matrix.

On connection you will select a role for your beltpack. Once the beltpack is registered and connected it is ready for use.

- Note: The beltpacks can also be registered to the system using a USB C cable directly to the PC hosting the EHX software. EHX: Hardware>Beltpacks>Register via USB.
- Note: The role can be fixed to the beltpack in the EHX software. In this case, the beltpack will automatically take the fixed role.

Base connectors





For additional information on system and set up scan QR code. <u>www.clearcom.com/freespeak-edge-knowledge-center</u>

