



26V DUAL BATTERY CHARGER

QUICK START GUIDE

Overview

Charge Indicator LED


Red: Battery is charging.
Green: Battery is fully charged.

Power Indicator LED

Red: Charger is on.

V-Mount

Power Cord

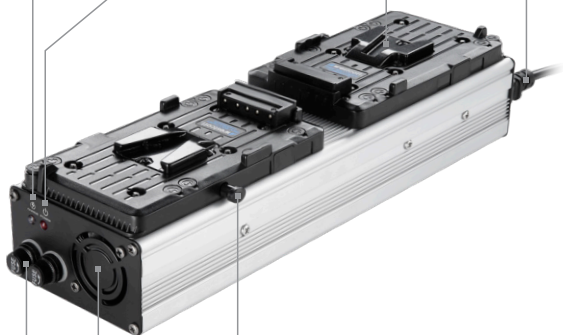

Glass
Tube
Fuse Caps

Battery
Release
Button



Warning

- Only for use with Westcott 26V Lithium-Ion Battery
- Do not attempt to open or alter
- Do not remove or change V-Mount plates
- Keep dry and away from fire
- Do not submerge in water
- Never charge in temperatures above 60°C (140°F)
- Do not cover or block vents when in use
- Always use in well ventilated area

Operation

Charging 26V Lithium-Ion Batteries

1. Plug the female end of the power cord into the end of the charger.
2. Plug the male end of the power cord into a Type-B wall outlet.
3. Ensure that the LED indicators located at both ends of the charger are illuminated.
4. Align the V-Mount on the back of the 26V Battery to one of the docking stations located on the charger, ensuring that the point of the “V” shape on each are pointed in the same direction.
5. Gently press the battery against the docking station and slide the battery into place until it clicks.
6. Repeat with second 26V Battery when charging two batteries.

When at least one battery is connected, the internal cooling fan will spin to ensure optimal cooling. Once charging is complete, the fan will stop.

Removing 26V Lithium-Ion Batteries

To remove batteries, hold the release button located alongside the charger’s V-Mount plates while sliding each battery out of the docking station. Then, release the button and store battery when not in use.

Troubleshooting

Should the 26V Charger become inoperable, ensure that the outlet is receiving power. If the outlet is operating properly, check the power indicator for illumination. If it is not illuminated, one of the two user-replaceable fuses may need to be replaced.

Fuses

Checking the Glass Tube Fuses (250V 10A)


1. Locate the fuse caps on the end of the charger.
2. Twist the fuse caps counterclockwise and remove them from the charger.
3. Determine if one or both of the fuses need to be replaced, which is commonly indicated by black residue on the glass inside the fuse.

If the fuse needs replaced, proceed with caution.

Replacing the Glass Tube Fuses (250V 10A)

1. Allow the fuse(s) to cool for 2 minutes.
2. Carefully grasp the end of the fuse(s) and gently wiggle from side-to-side while pulling away from the fuse cap.
3. Once removed from the cap, discard the blown fuse(s).
4. Insert the new fuse(s) into the charger caps.
5. Twist the caps back into place.


Flex Cine Mounts & Modifiers

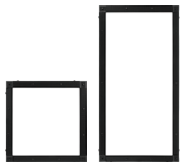

Scrim Jim® Cine Frames



Yokes

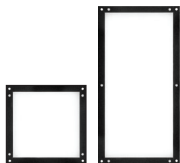

Hard Diffusion Panels



Barndoors



Drum Softbox



China Cubes



Portable Softboxes



Egg Crate Grids

Learn more at FJWESTCOTT.COM/FLEX

Warranty

Westcott's warranty obligations for this product are limited to the following terms.

The F.J. Westcott Co. ("Westcott") warrants this Westcott branded product against defects in materials and workmanship under normal use for a period of ONE (1) YEAR from the date of retail purchase from Westcott or an authorized retailer by the original end-user purchaser ("Warranty Period"). If a defect arises and a valid claim is received within the Warranty Period, at its option and to the extent permitted by law, Westcott will either (1) repair the defect at no charge, using new or refurbished replacement parts, or (2) exchange the product with a product that is new or which has been manufactured from new or serviceable used parts and is at least functionally equivalent to the original product. This Limited Warranty applies only to products manufactured by or for Westcott that can be identified by the Westcott trademark, trade name, or logo affixed to them.

This warranty does not apply to: (a) damage caused by accident, abuse, misuse, flood, fire, earthquake, mold, or other external causes; (b) damage caused by operating the product outside the permitted or intended uses described by Westcott; (c) a product or part that has been modified to alter functionality or capability without the written permission of Westcott; or (d) cosmetic damage, including but not limited to scratches, dents and broken plastic.

Disclaimer: By purchasing, borrowing and/or using this product for any event, both public or private, you, the customer, accepts all responsibility and releases Westcott, and its associates, of any and all liability in the event of manufacturer's defect, malfunction or misuse of the product which may lead to further injuries or complications unforeseen by the user. Westcott is not responsible for any potential or incurred damage caused by failure to properly mount, hang, or store the product, which includes, but is not limited to damage to cameras, electronics, electrical equipment, buildings, building materials, personal injury, death, or disability, fire damage, or any and all other damage not mentioned previously.

Please contact Westcott's Repair Department for a Return Authorization Number "RMA" prior to requesting warranty service. This RMA must be clearly written on the outside of the box to the left of the shipping label. Items sent in without pre-authorization or that do not fall under the limited warranty will be returned at the expense of the sender.

Repair Department: 800-886-1689 / 419-243-7311 (International)

Email: service@fjwestcott.com

Shipping: F.J. Westcott Co, 1425-B Holland Rd. Maumee, OH 43537

[Register your new gear online at FJWESTCOTT.COM/REGISTER](https://www.fjwestcott.com/register)

[Visit FJWESTCOTT.COM](https://www.fjwestcott.com) for videos, pro tips, inspiration, and more!

Westcott products are made to the company's traditionally high standards of quality and comply with all applicable government safety regulations and requirements. In an effort to provide the best quality products possible, we periodically make product modifications. Actual products may not be identical to items pictured. Made in China. ©F.J. Westcott Co. All rights reserved. HW0918