



QUICK SETUP GUIDE

S30-1038


RECOMMENDED

NOT RECOMMENDED

Speaker angle and distance

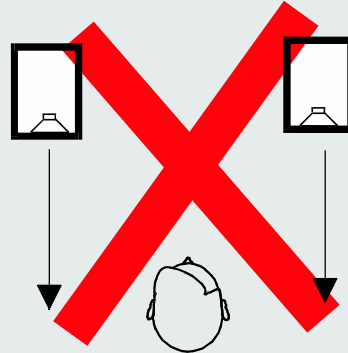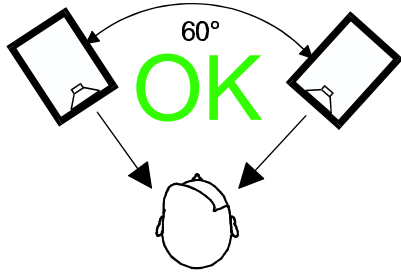


Symmetry of room installation

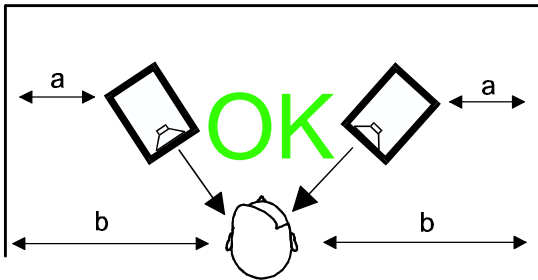


Free standing in a damped room




Free standing in a reverberant room

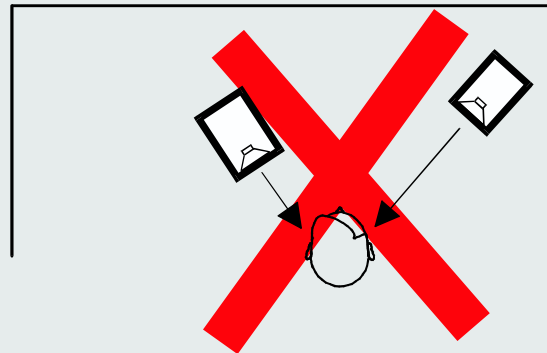

Distance from front wall

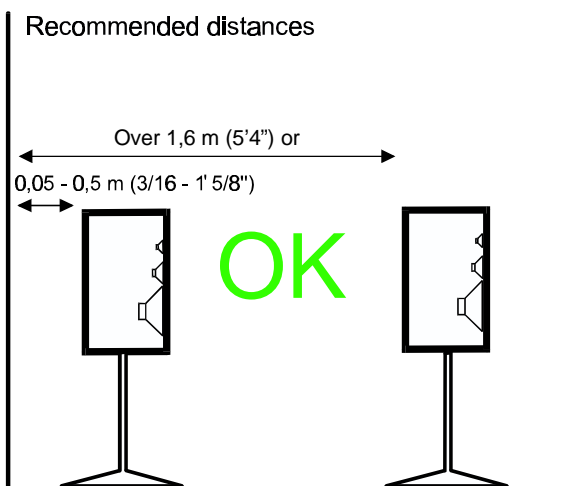

Distances between 0,5 and 1,6 m (1'5/8''-5'4'') are likely to cause LF-cancellation


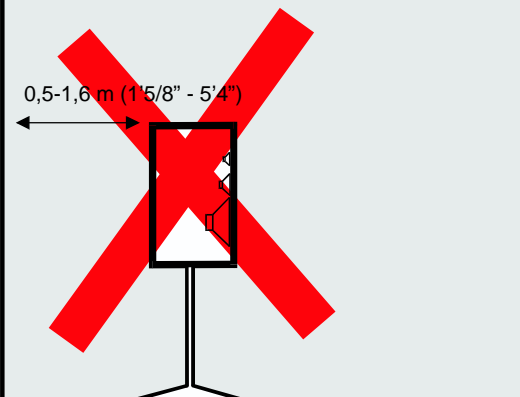


QUICK SETUP GUIDE



RECOMMENDED

NOT RECOMMENDED

Correct flush mounting

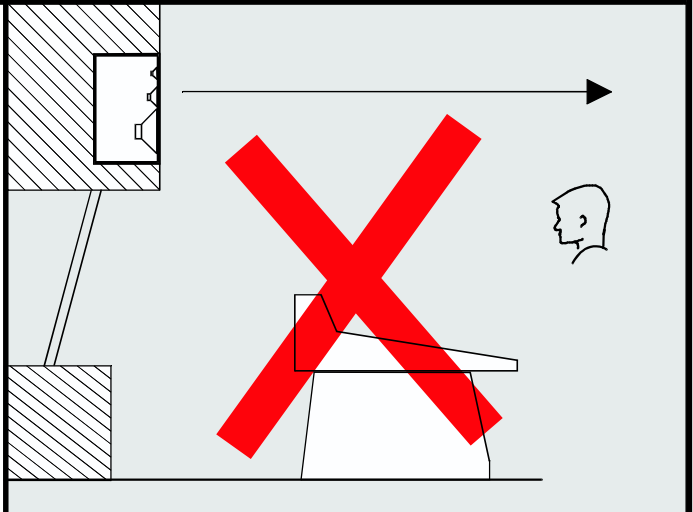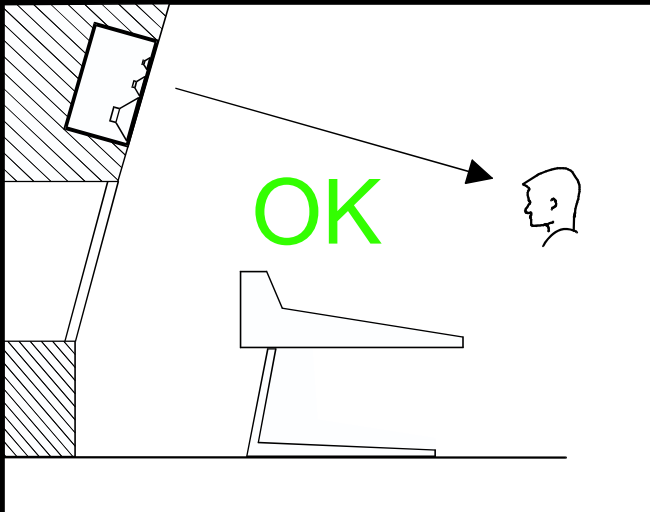

Correct speaker mounting

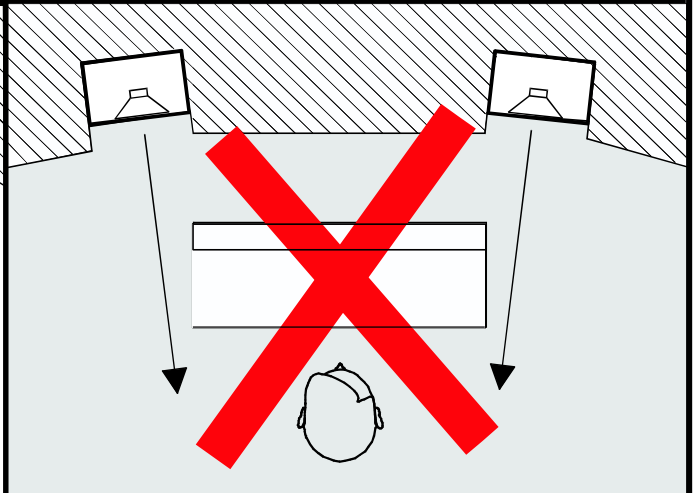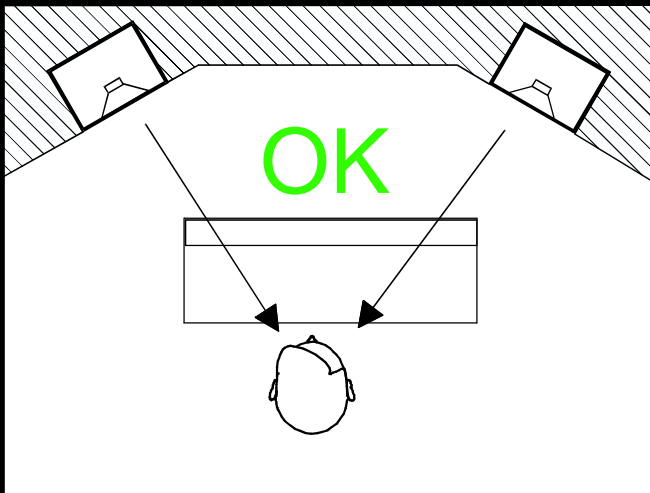

Aligning the DCW correctly

Always align the DCW according to speaker orientation

