

VZ-ROCK-DVX-LE Instructions

Thanks for buying the VZ-ROCK-DVX-LE, our limited edition aluminum zoom control for the Panasonic DV ProLine series camcorders. The ROCK-DVX-LE will provide remote control of variable-speed zoom and record start/stop. We think you will enjoy this product, but before using it ***please read the instructions thoroughly.***

NOTE: THIS IS NOT A "LANC" CONTROL DEVICE! DO NOT PLUG THE ROCK-DVX-LE INTO ANY CAMCORDER OTHER THAN PANASONIC DV PROLINE UNITS. THIS CONTROLLER SHOULD ONLY BE PLUGGED INTO THE JACK LABELED "REMOTE" ON THESE PANASONIC CAMCORDERS.

1. First, loosen the brass clamp nuts and fix the controller to your tripod handle, jib, or shoulder support (or use it hand-held).
2. Using the controller is as simple as turning on your camcorder and plugging the unit into the jack labeled "Remote".
3. To zoom in (telephoto) press the zoom rocker right, and to zoom out (wide) press the rocker left. The farther you press the rocker, the faster the lens will zoom (within the normal operating limits of the lens assembly).
4. You can also start and stop recording by pressing the "R" button.



Warranty Warning! Do not open your control device, as this may void your warranty and possibly damage the controller. If you need service, contact VariZoom for a Return Merchandise Authorization (RMA #). All controllers have a two-year parts and labor warranty. Please save your receipt and send us your comments and suggestions. Thanks!

-- please keep this document for your records & reference --

888-826-3399 / 512-219-7722

Visit us on the web at www.varizoom.com