



Owner's Manual

Version 1.0e

Gold Premier Series & Pro Premier Series

CONTENTS

1. INTRODUCTION	2
2. Features	2
3. Specifications	3
4. LCD Front Control Panel	3
5. Menu Overview	4
1. Copy	6
2. Test	6
3. Copy & Verify	7
4. Copy & compare	7
5. Verify	8
6. Compare Disc	8
7. Burn Speed	9
8. Select Source	9
9. Audio Track Edit	9
9.1 <i>Select and Copy Track</i>	9
9.2 <i>Close Disc</i>	10
9.3 <i>Disc Info</i>	11
10. Utility	11
10.1 <i>Prescan</i>	11
10.2 <i>Quick Erase</i>	11
10.3 <i>Full Erase</i>	12
10.4 <i>Eject All Disc</i>	12
10.5 <i>Disc Info</i>	12
10.6 <i>Drive Info</i>	12
10.7 <i>System Info</i>	12
10.8 <i>Update BIOS</i>	12
11. Setup	13
11.1 <i>Power On Time</i>	13
11.2 <i>Auto Start</i>	13
11.3 <i>Startup Menu</i>	13
11.4 <i>Write Method</i>	14
11.5 <i>Button Beep</i>	14
11.6 <i>Read Error skip</i>	14
11.7 <i>Eject on Start</i>	14
11.8 <i>Boot Password</i>	14
11.9 <i>Setup Password</i>	15
11.10 <i>Clear All</i>	15
12. Image Manager	16
12.1 <i>Select Image</i>	16
12.2 <i>Disc to Image</i>	16
12.3 <i>Reader Speed</i>	16
12.4 <i>Image Info</i>	17
12.5 <i>Rename Image</i>	17
12.6 <i>Delete Image</i>	17
12.7 <i>HDD Info</i>	18
12.8 <i>Format HDD</i>	18
7. About HDD Manager	18
8. USB or USB Firewire Instruction	20

1. INTRODUCTION

The Gold Premier & Pro Premier series duplicator Functions both as a stand-alone CD/DVD Disc Duplication System, and supports up to 11 CD/DVD discs. The duplicator can support up to 11 discs duplicating simultaneously at maximum 56x CD writing and 16X DVD writing speeds.

This easy-to-use operating control panel consists of an LCD screen and 4 control buttons. All operating information, such as the function list, instructions, operating status, or error message(s), is displayed in real time on the screen.

The built-in Hard Drive allows users to load several CD/DVD Master Source Discs onto the HDD as source disc images. This reduces the risk of damaging the Source Disc that result from heavy duplicating jobs. A forceful HDD management system dynamically assigns HDD partitions to each CD/DVD disc image loaded onto the HDD accordingly. This ideal HDD manager ensures a flexible and efficient HDD management.

2. FEATURE

- 2x16 LCD display and 4 control buttons
- Supports up to max 56x CD duplication, 16x DVD duplication
- Offers flexibility in setting different duplication speeds depending on the format of the disc
- Easy to **select any Drive as the Master Reading Source**
- Support for an **IDE Hard Drive Device**. Source CD or DVD discs can be loaded onto the Hard Drive as **disc images**
- Customizable **Hard Drive Partitioning**. Create a Hard Drive partitioning name for easy storage. (Hard drive required)
- Support for **Audio Track editing**. Combines audio tracks into one customized CD
- Special **PRESCAN** feature evaluates master source disc before copying
- Support **System Startup Password Protection**. Prevent unauthorized use of the duplicator systems
- Support **Setup Password Protection** protects custom settings for duplicating systems
- Support for copying simulation prevents failures caused defective blank discs or damaged source discs
- Support for a Verification function ensures copied disc's readability
- Support Counter Function

- Supports all major disc types
- Auto detect source disc
- Can set button beep button on or off
- Optional **USB or USB and Firewire Combo**

3. SPECIFICATIONS

Power	Voltage:	115V / 230V
Environment	Working Temperature	0C~75C
	Storage Temperature	-20 C~85 C
Humidity	Working Humidity	20%~80%
	Storage Humidity	5%~95%

Model	Max Burn CD SPEED	Max Burn DVD SPEED	Buffer Memory Size	Number of copies produces at one time
Pro Premier CD3	52X	N/A	32 MB	Up to 3
Pro Premier CD7	52X	N/A	32 MB	Up to 7
Pro Premier CD11	52X	N/A	64 MB	Up to 11
Gold Premier DVD3	40X	16X	32 MB	Up to 3
Gold Premier DVD7	40X	16X	64 MB	Up to 7
Gold Premier DVD11	40X	16X	128 MB	Up to 11

4. LCD Front Control Panel

1. Control Buttons

 
There are 4 control buttons: ▲, ▼, ENT and ESC

▲ : UP; backward; used to navigate backward in the menu

▼ : Down; forward; used to navigate forward in the menu

ENT : OK, Enter, Execute the function

ESC : Escape, used to go back to previous function

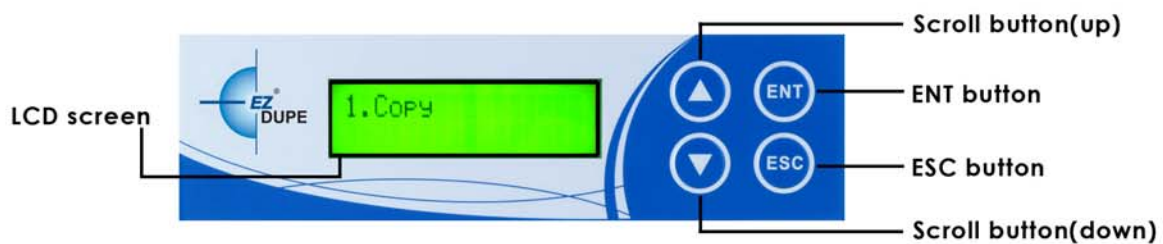

5. MENU OVERVIEW

1	COPY	Allows making a CD/DVD copy. Before the use of this function, assure that the correct reading source and blank discs are placed. The system will automatically display how many blank discs are detected. When the system is ready, press ENT to execute CD/DVD copies.
2	TEST	This function process is the same as above, except it will not record to the recordable disc. The purpose of this process is to ensure an error free duplication.
3	COPY&VERIFY	Creates copies and is followed by a Verification process to automatically ensure data correctness.
4	COPY&COMPARE	Creates copies and is followed by a Comparison process to ensure data correctness.
5	VERIFY	Enables the use of Disc Readability Check. This operation will check all master and copied discs' readability to confirm that all of the copies are readable.
6	COMPARE	Used to make a bit-by-bit Comparison between the Master Reading Source and all the copied discs inside the writer trays. It ensures that the copies have the same information as the Master Reading Source.
7	SET BURN SPEED	Enables to select Duplication Speed for three different disc types (CDs, audio CDs, and DVDs).
8	SELECT SOURCE	Used to set the Master Reading Source as Optical Drive or Hard Drive Disk.
9	TRACK EDIT	Makes Audio Tracking Selection. It will combine audio tracks from various CDs into a single customized audio CD.
10	UTILITY	
	10.1 Pre-scan	Confirms whether or not the Master Source Disc can be properly duplicated.
	10.2 Quick Erase	Quick erase re-writable discs' data.
	10.3 Full Erase	Full erase re-writable discs' data.
	10.4 Eject All Disc	Ejects all discs in writer tray, including master source disc.
	10.5 Disc Info.	Checks disc's basic information such as disc type, data length, and available space.
	10.6 Drive Info.	Checks the duplicator's major component information, such as the manufacturer, Writer or Reader model numbers and versions.
	10.7 System Info.	Provides the duplicator's information, such as the Controller model number, Buffer memory capacity, and Firmware version.
	10.8 Update BIOS	As manufacturer's certified update CD is inserted, this feature instantly updates duplicator's software.


11	SET UP	
	11.1 Power On Time	After the system power is turned on, the system warm up time can be set from 5 sec to 255 sec.
	11.2 Auto Start	This feature allows the duplicator to automatically execute copying once recordable disks are inserted to the master source disc and writer trays. The setting can be turned off or the amount of seconds can be set to (1~99). To execute this function, the operation mode must be set to COPY, TEST, VERIFY, COPMARE, COPY&VERIFY, COPY&COMPARE.
	11.3 Startup Menu	The function in the menu which will be shown first can be selected when the duplicator is turned on.
	11.4 Write Method	CD duplication mode can be selected among “DAO”, “SAO”, and “TAO”. The default mode is “DAO,” which means Disc at Once.
	11.5 Button Beep	Gives the option to hear a beep as you press a button.
	11.6 Skip Read Error	Gives the option to stop duplication process when an error has occurred or simply continue the process.
	11.7 Eject on Start	Allows choosing whether the duplicator system will eject the disc on startup.
	11.8 Boot Password	Allows setting or changing the password at start up.
	11.9 Setup Password	Allows setting or changing the password for Setup.
	11.10 Clear Setup	Resets all of the operations back to manufacturer’s default.
12	IMAGE MANAGER	Demonstrates how to perform various Hard Drive related operations. If duplicator does not have HDD installed, the system menu will not show this function.
	12.1 Select Image	Used to select an Image file as a Source to be copied to the discs.
	12.2 Disc -> Image	Used to copy a Source Disc to HDD to save as an Image file.
	12.3 Reader Speed	The following function (12.2 Disc -> Image function), will allow you to set the Reading Speed of the master source disc.
	12.4 Image Info.	Checks the image-file information and file size.
	12.5 Rename Image	This function renames the HDD image partition’s name.
	12.6 Delete Image	Deletes an image file in HDD. If the file is selected as the source file you will not be able to delete it unless you go back to 12.1 to re-select the image.
	12.7 HDD Info.	Checks the information in HDD, such as the number of discs stored on the HDD and the amount of space left in the HDD.
	12.8 Format HDD	This feature allows you to format the HDD. However, if HDD image was selected as the source you will not be able to format it.

6. OPERATING GUIDE

1. COPY

The following operation shows how to copy a Master Reading Source to a blank CD/DVD disc. If you would like to make Disc-to-Disc copies make sure that the Master Reading Source is set as the READER.

 
- Turn on the duplicator before you start copying and assure the correct reading source and blank disks have been set.
- The system will automatically display how many blank discs were detected.
- When the system is ready to copy, press **ENT** to execute CD/DVD copies.
- When the system starts the copying process, it will start loading the disc. It will then analyze the discs, then start copying. During the copying process, the LCD screen will display the Master Source Disc's data size and copying progress.
- When the copying is finished, the Writer Trays will automatically eject.

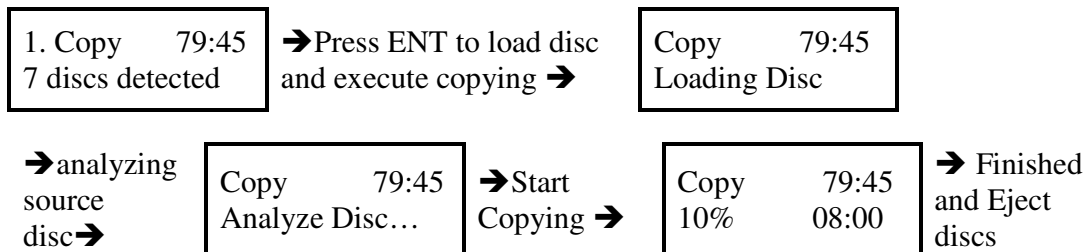

- Note 2: If your duplicator has an HDD installed and you would like to make Hard Drive-to-Disc copies, refer to 12.1.1 HDD Image Manger for more information*

2. TEST

 
- This function is a simulation of the COPY process, with the exception of the writing on the recordable discs.
- Press **▲** or **▼** to navigate the function menu to 2. Test and press **ENT**
- The system will auto detect the numbers of blank disc and start to simulate the COPY process. However, there will be no data written onto the blank disc.
- The purpose of this process is to ensure an error free duplication.

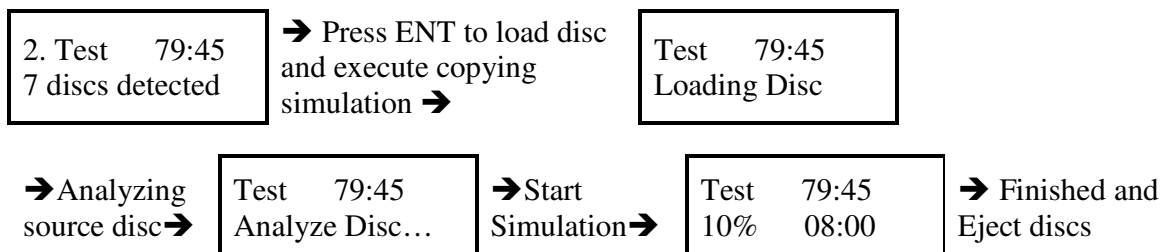

3. COPY&VERIFY

This operation will start the copying process and will be followed by a verification process to ensure data's correctness. Therefore, the duplicator will not eject discs until verification is complete.

 - This operation will copy the Master Source onto Blank CD/DVD discs. Before the use of this function, make sure the correct reading source and blank discs have been set.
- The system will automatically display how many discs were detected.
- When the system is ready to copy, press **ENT** to execute CD/DVD copying.
- When the system starts the copying process, it will start loading the disk. It will then analyze the disks, then start copying. During the copying process, the LCD screen will display the Master Source Disc's data size and copying progress.
- When finished, the system will continue a verification to make a disc Readability check.
- When the verification is complete, the Writer Trays will automatically eject the completed discs.

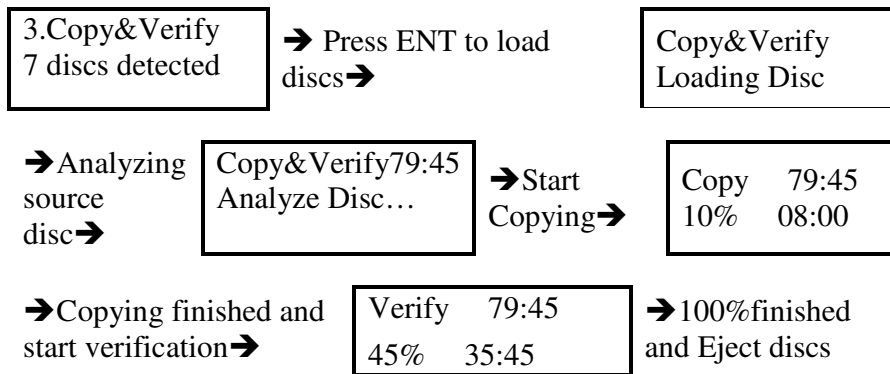


- The verification process will perform a **Disc Readability Check**. This operation will check the master disc and the copied discs' readability.

4. COPY&COMPARE

This operation will start the copying process, and will continue with a Comparison process to ensure data correctness. Therefore, the duplicator will not eject discs until a disc Comparison is complete.

 - This operation will directly copy the Master Source onto a blank CD/DVD disc. Before the use of this menu, make sure you have put the correct reading source and blank discs.
- The system will automatically display how many blank discs are detected.
- When the system is ready to copy press **ENT** to execute CD/DVD copies.
- When the system starts the copying process it will start loading the disk. It will then analyze the disks, and then start copying. During the copying process, the LCD screen will display the Master Source Disc's data size and copying progress.
- When finished, the system will continue with the Comparison process to ensure that the discs have the same information as the master source.
- When the Comparison is finished, the Writer Trays will eject the discs.



→ Analyzing
source disc →

Copy&Compare 79:45
Analyze Disc...

→ Start
copying →

Copy 79:45
10% 08:00

→ Copying finished
and start
Comparison →

Compare 79:45
45% 35:45

→ 100% finished
and Eject discs

- *The Compare Disc function serves as a **bit-by-bit Comparison** between Master Reading Source and the copied discs inside the writer trays. This operation ensures that all of the copies are identical to the Master Reading Source.*

5. VERIFY

This function will check the master disc and the copied discs' readability to ensure that all of the copies are readable.

- Place master source disc and all copied discs into the duplicator.
- Press **ENT**. The duplicator will automatically start loading the disc, analyze the source disc then begin Verification.
- When verification is complete the duplicator writer trays will automatically eject.

5.Verify
7 disc detected

→ Press ENT to load
discs →

Verify 79:45
Loading Disc

→ Analyzing
source disc →

Verify 79:45
Analyze Disc...

→ Start
verification →

Verify 79:45
45% 35:45

→ 100% Finished
and eject discs

6. COMPARE DISC

Use this function to make a **bit-by-bit Comparison** between Master Reading Source and the copied discs inside the writer tray. This operation is used to make sure all the copies have the same information as the Master Reading Source.

- Put master source disc and all copied discs into the duplicator.
- Press **ENT**. The duplicator will automatically start loading the disc, analyze the source disc then begin the Comparison function.
- When the Comparison is complete, the duplicator writer trays will automatically eject.

6.Compare
7 discs detected

→ Press ENT to load
discs →

Compare 79:45
Loading Disc

→ Analyzing
source disc →

Compare 79:45
Analyze Disc...

→ Start
Comparison →

Compare 79:45
45% 35:45

 
→ 100% Finished
and eject disc

- *Note : You can **ONLY** use the compare function when duplicating DATA discs*

7. SELECT SPEED

This operation allows you to adjust and **select the Duplication Speed** for the three different disc types: CD, Audio CD, and DVD.


- Press , to navigate the menu. 7. SELECT SPEED, and press
- You will see three disc types: CD, Audio CD, and DVD. Press , to select a disc type.
- Press to confirm your selection.
- Press , to select the burning speed.

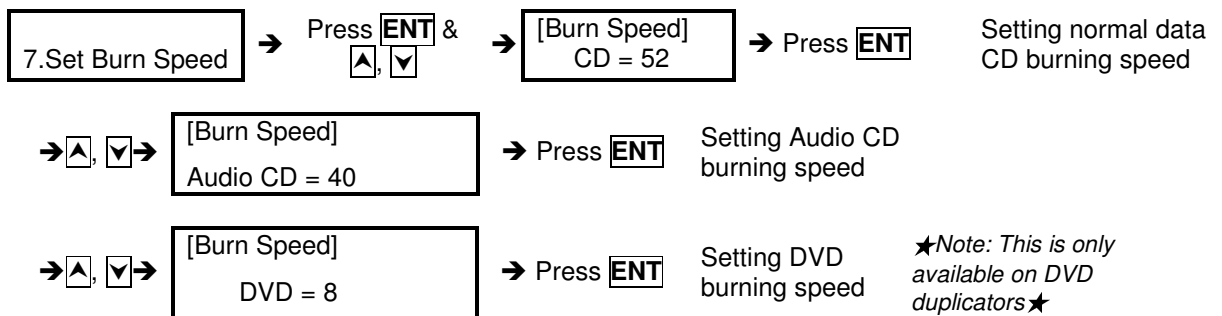

8. SELECT SOURCE

Use this function to set an **Optical Drive or Hard Drive Disk** as the Master Reading Source.

 - Move to 8. Select Source and press
- Press , to select either HDD or an Optical Drive with assigned number as the reading source.

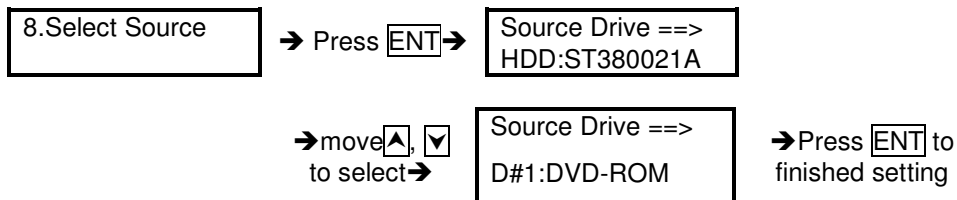

- Note: If HDD was selected as Source, follow 12.1 Select Image's instructions to be familiar with how to select image files as your reading source
- Note: Each Optical Drive will be assigned Drive # according to their installation sequence. If there is no HDD installed, then Drive#1 is automatically set as the Reading Source

9. AUDIO TRACK EDIT

 
 
This process will guide you on how to select audio tracks from various audio CD's and combine them into one customized Audio CD.

9.1 Select and Copy Track:


- Move , to 9.Audio Track Edit menu.

9.Track Edit

- b. Insert an Audio CD with music tracks in the Reading drive and Insert ONLY ONE Blank CD-R disc into one of the writers.
- c. As soon as both audio CD and blank CD-R are recognized, the following message will appear “ready to press ENT” on duplicator LCD screen.
- d. Navigate the menu by pressing , to find the desired track number then press to confirm the selection. Repeat the process to choose the tracks that will be copied to the disk. The letter “a, b, c, d...” will appear on top of each selected track.



 - e. Once the tracks have been selected, press to move cursor to the end of the “OK” display. And press to confirm and submit your selection.
- f. Once you submit selection, “Copying Audio Tracks...” will appear on your LCD screen. It will display the track number, number of the current track and the position that is copying.



- g. Once the Copying Audio Track process is complete, copied CD will be displayed. It will show the total tracks on the CD, total time used and the total time remaining.



- h. You will need to finalize before playing back, as indicated on 9.2. If you choose NOT to finalize, you can go back to the first step to continue the process. If you choose to finalize, use “9.2 Close Disc”.

- *Note: Once you finished copy Audio Track, you will NEED to perform “9.2 Close Disc” function for your audio CD. If you do not, your audio CD will NOT play*

9.2 Close Disc

Use this process to make a CD-R/CD-RW disc become a playable Audio CD.

- a. Select 9. Track Edit and press



- b. Move to select 2. Close Disc and press to start close disc process.

 
- c. When Close Disc is processing, you will see “o”, “O” blinking on the screen.
 d. When the process is done, writer will automatically eject the disc, and you will see “_” on the screen.



9.3 Disc Info.

This feature allows to check disc status, such as available capacity.

- a. Move to 9. Track Edit, and press **ENT**
 b. Select 3. Disc Info, and press **ENT**




10. UTILITY

This function group includes several Disc related functions. You can press ENT and the up or down button to select the desired function.


10.1 Prescan

This feature will check whether or not the Master Source Disc can be duplicated.

 - a. Select Utility and press **ENT**



 
- b. Select 1. Pre-scan and press **ENT**



10.2 Quick Erase

This operation will erase re-writable discs in the Writer Tray. When finished, the tray will automatically eject.

 
The duplicator can erase different types of re-writable discs simultaneously. You can place the re-writable disc you wish to erase in any tray.



- *Note: If you see “O” “o” blinking, Erasing is in process.
 If you see “F” “f” blinking, DVD+RW Disc formatting is in process*

10.3 Full Erase

 This operation will erase re-writable discs in the Writer Tray. It is timelier than Quick Erase function. When finished, the writer will automatically eject the trays.




10.4 Eject All Discs

Ejects disks, including master source disc and discs in writer trays.



10.5 Disc Info

 This feature checks the disc's basic information, such as the disc type, data length, and available capacity.



10.6 Drive Info

 
This feature checks the duplicator's major component information, such as its manufacturer, Writer or Reader model number and version.

- Press ENT then up or down to check each Drive's model number and information.
- The duplicator will assign each drive a number from 1 to 8. #1 is Reader. #2~#8 is the writers.



10.7 System Info

This feature provides information about the duplicator, such as the controller model number, RAM capacity, and Firmware version.




10.8 Update BIOS

When manufacturer's certified update CD is inserted, this operation will automatically update your duplicator's software.

- Turn on the duplicator select 10. Utility, and press [ENT]

 - b. Insert an updated CD to any Drive.
- c. Select 8. Update BIOS and press **ENT**
- d. The system will then start executing the firmware update. When finished, the updated CD will automatically eject.
- e. In 2 sec, the system will re-boot. The new firmware update is complete.

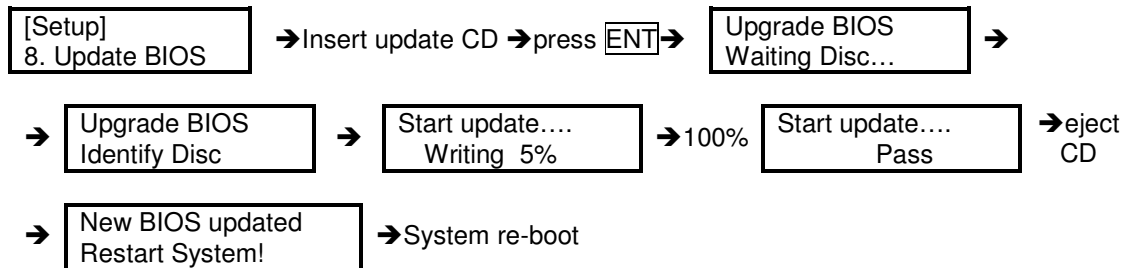


11. SETUP

Use this function group to change the manufacturer's default setting.

11.1 *Power On Time*


You can set the system warm up time from 5 sec to 255 sec after system power on.

 - a. Select 11. Set Up and press **ENT**
- b. Select 1. Power On Time and press **ENT**
- c. Press **▲**, **▼** to increase or decrease the seconds.



11.2 *Auto Start*

 This operation allows the duplicator to **automatically execute copying once source disc is placed in the master source drive and recordable discs in any of the writer trays**. You can disable or turn on the auto start function with the time (1-99 seconds) it would take to activate this feature. To execute this function, you must set the operation mode from COPY, TEST, VERIFY, COMPARE, COPY & VERIFY, COPY&COMPARE to auto start copying.



- *Note: If you set the function off, the LCD screen will not show how many blank discs are detected in writer trays*

 
11.3 *Startup Menu*

You can select which function in the menu to see first when the duplicator is turned on.



11.4 Write Method

You can select which mode to duplicate **CD** among “DAO”, “SAO”, and “TAO”. The default mode is “DAO”, Disc at Once. Unless you clearly understand what such terms represent, we strongly advise you to set it as “Disc at Once”.




11.5 Setup Button Beep

Choose whether or not to hear a beep when you press a button.




11.6 Read Error skip

 Choose to stop the duplicating process when error has occurred.




11.7 Eject on Start

 You can choose whether or not to eject the disc when powering up the system.

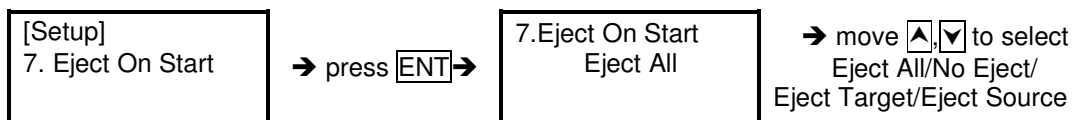


11.8 Boot Password

  You can setup the boot password to prevent anyone from using the duplicating system.






If you selected Disable, you will go back to:




If you selected Enable, you will need to choose your password:

Boot Password
==> _

Use ,  to select the character you want.

Press  will go to the next position.



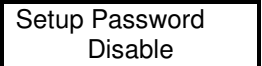


There are a total of 6 positions for the password. To enable the password set all 6 positions.
An empty space is also ENT.

Press  to cancel the process.

The duplicating system will ask for password when the unit is restarted.

11.9 Setup Password

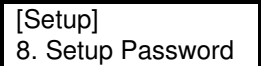You can setup the password to prevent anyone from changing the setting of the duplicating system.



 → press  →  → move ,  to select Disable/Enable


If you selected Disable, you will go back to:

[Setup]
5. Boot Password


If you selected Enable, you will need to choose your password:

Boot Password
==> _

Use ,  to select the character you want.

Press  will go to the next position.



There are total of 6 positions for the password. To enable the password set all 6 positions.
An empty space is ENT.

Press  to cancel the process.

The duplicating system will ask for password when 11. Setup is entered.

11.10 Clear All

Reset the operations back to manufacturer's **default** settings.

 → press , clear all setting you have done and return back to manufacturer's default setting

12. IMAGE MANAGER (For Duplicator with HDD Installed)

This function shows how to perform various Hard Drive related operations. The system menu will not show this function if your duplicator does not have an HDD installed. **Please refer to 7. ABOUT HDD MANAGER for more information about the special functions and advantages of this feature.**

12.1 Select Image

This function shows how to select an Image file as a Source that can be copied to discs. This function is required when a copy is made from your HDD to blank discs. Please refer to 12.1.1 for instructions on how to make Hard Drive-to-Disc Copies.



Make Hard Drive-to-Disc Copies

 
- Make sure Hard Drive is set to Master Reading Source. When it is finished select the image, then HDD will automatically be set as the Reading Source.
- Return to the main menu and press the up or down buttons to select 1. Copy function.
- Insert blank discs into writer trays. (If there is a disc in the Reader tray, it will not be read).
- Press [ENT] to start copying. If 11.2 Auto Start is selected when a blank disc is placed in any of the writer trays, the duplicator will automatically begin the copying process.
- When completed, trays will eject.

- Note: Once you have selected a HDD Image, the HDD will automatically be set as the Reading Source. If you would like to make Disc -to- Disc Copies, you must go back to 8. Select Source to select the CD/DVD-ROM as your Reading Source.*

12.2 Disc => Image

This function will show you how to load your master source disc onto the Hard Drive and save it as an image file.

- Place Master Source Disc into **any Drive**.
- Select 12.2 Disc -> Image and press [ENT]

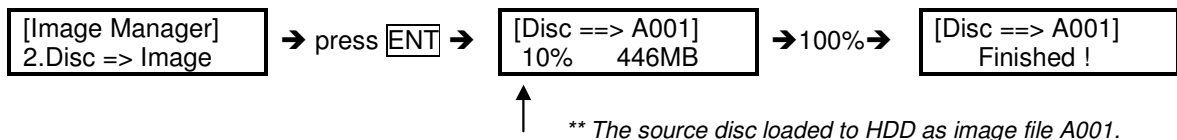

- Note: The source disc can be placed in any Reader or any one of Writer Drive.*

12.3 Reader Speed

When you wish to perform this function, 12.2 Disc -> Image, set the Reading Speed from the reading master source disc.

[Image Manager]
3.Reader Speed

- Note: this function is ONLY available when loading the Source Disc to a HDD

12.4 Image Info

This function checks all image file information such as the Image file number, Disc type, and its file size.

[Image Manager]
4.Image Info. → press **ENT** → [Image Info.]
A001 DVD 4469MB

[Image Info]
A001 DVD 3875MB → 3.875GB DVD disc image
file A001

[image info]
A003 CD → CD disc image with 65 min
28 sec, file name A003

12.5 Rename Image

This function allows you to rename an image file in HDD. This will help organize the image.

[Image Manager]
6.Delete Image → press **ENT** → 001 [A001] → Select the image file you
DVD 4469M would like to rename →

→ press **ENT** → [Edit Image Name]
[A001]

Use **▲**, **▼** to select the character you want.

Press **ENT** to go to the next position.

There are total of 8 characters for the image name.
Empty Space will confirm the name change.

[Edit Name Change]
[NewName] OK ? → press **ENT** → [A001]
=>[NewName]

Press **ESC** to cancel the whole process.

12.6 Delete Image

This function allows you to delete an image file in HDD. If the file is selected as source file, you will not be able to delete it unless you go back to 12.1 to re-select another image as source.



 
12.7 HDD Info.

This function checks all information of HDD, such as how many discs are stored and the HDD's available space.



12.8 Format HDD

This feature formats the HDD. However, you will be unable to format the HDD if the HDD image was selected as Reading Source. You must go to [8. Select Source](#) to select the Optical Drive as Reading Source.

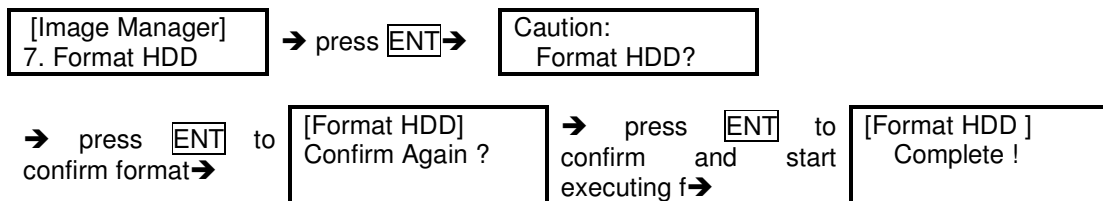


7. ABOUT HDD MANAGER

Our duplicator uses rational and dynamic HDD management technology. The traditional method of formatting an HDD requires you to choose the number of partitions designated for DVD's and CD's before formatting your hard drive. The problem is that you might not be able to predict how many DVD's or CD's you will load onto your hard drive. Many incomplete partitions can be created, mainly with new DVD disks constantly coming out, such as the double-layer DVD. **You need an intelligent and more dynamic way to manage your HDD and our HDD manager can do that for you!**

Our Dynamic HDD Manager consists of the following special features:

I. Auto Detect Disc Capacity and Dynamically Assign Partitions

 
1. When you first format the built-in HDD, our duplicator will **automatically divide the HDD into 1GB partitions**. A DVD or CD partition does not have to be selected in the beginning.
2. You can check HDD information in function [12.6 HDD Info](#). The Hard Drive's **capacity is presented in terms of how many DVD or CD discs** you can load. For example, if your built-in HDD is 40GB, then the system will show the HDD available capacity:

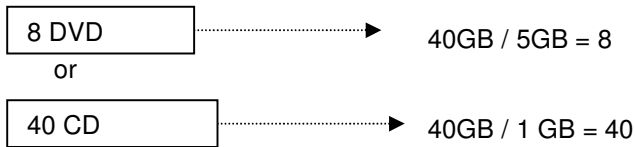


• Note: DVD is calculated by 5GB, and CD is calculated by 1GB

- Every time a source disc is loaded, **the duplicator will auto detect the disc capacity and assign correct partitions for it.** For example, if you load a 4GB double-layer DVD disc into HDD as a disc image, the system will automatically detect and assign 4 partitions for it.
- Dynamic calculated and display HDD capacity.** The duplicator will present built-in HDD capacity information dynamically depending on your loaded source disc's capacity. For instance, before loading a 4GB DVD disc as source disc image, the HDD information shows the HDD capacity that is available for loading 5 DVD's or 26 CDs. However, after loading a 4GB DVD, the system will **re-calculate** the total available partitions and display how many DVD or CD discs you can load as disc image the next time.

 Before load 4GB DVD HDD info:




After load 4GB DVD HDD info:

 

II. Smart Image File Management:

 
- When Discs are loaded into HDD as stored disc images, the system will assign a file name to the image file beginning from A001~.
 - Note: Each time a new disc image is loaded, **the system will automatically search and assign the lowest number as the file name.** For example, if there are no deleted files, the file name will be assigned in sequence beginning from A001. However, if there is a deleted file, such as A003, then the file name will be held. The next time there is a new disc image stored, the lowest number of A003 will be assigned as this new disc image's file name
- You are allowed to delete an image file by executing 12.5 delete image. Once an image file is deleted, the name of the file will be left empty and held for a future loaded image file. The existing file name will not be changed or moved ahead due to the deletion.
- Use 12. 4 Image Info function to check image file information. The image information will display the image file name, Disc type and file size.

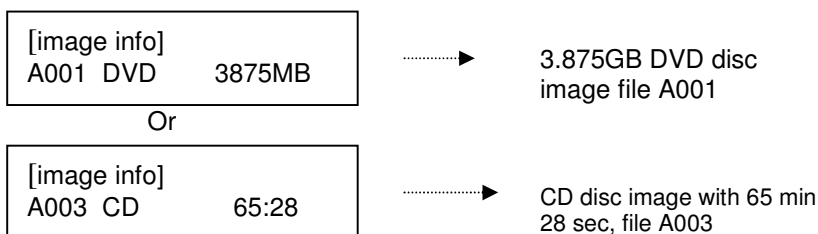

8. USB or USB/Firewire Instruction

If your duplicator is equipped with USB or USB/Firewire external connector, you can use your first CD/DVD target drive as an external CD/DVD burner to create your master from your computer.

 USB or USB/Firewire connection can be enabled or disabled by the switch located on the back of the duplicator. A USB (A to B cable) or Firewire Cable (6 pin connector) is required to establish the connection between the computer and duplicator.

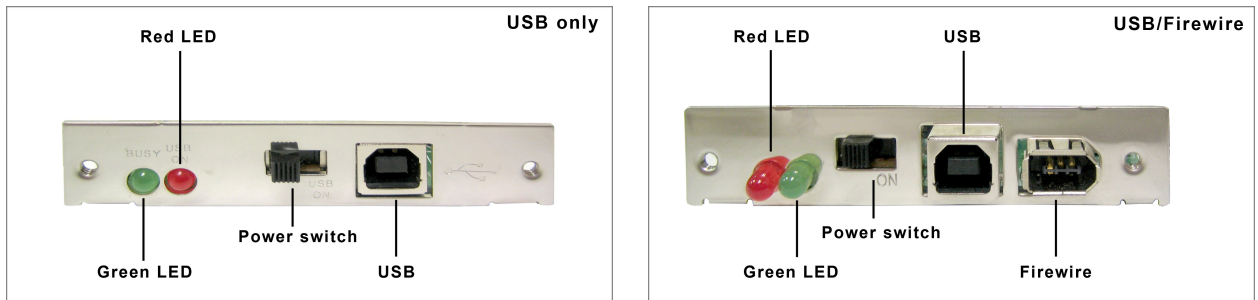

ON: USB enable. Computer control the 1st Target drive. 1st Target will no longer be available on duplicator.

OFF: USB Disable. Duplicator will utilize all drive for duplication. (Note: If switch was toggled OFF while duplication tower is ON, restarting the duplication tower is required).

Red LED-----USB Power Indicator.

Green LED-----Access LED. Status Indicator.

System Requirements:

- Windows ME/2000/XP, Mac OS X (Native software is not supported)
- Available USB 2.0 Port for USB, 1394A Firewire port for Firewire
- USB Cable or Firewire Cable (Not Included)
- CD/DVD burning software (Not Included)
 - Software updated may be required to detect the latest CD/DVD drive
 - Please check compatibility for your choice of software