

WB-LINK


AnchorLink Beltpack Transmitter Contains Transmitter Module FCC: Y82-SC14S / IC: 9578A-SC14S

The WB-LINK is a wireless Beltpack transmitter with a 3.5 mm connector jack Mic/Line input. It operates on the DECT 1.9 GHz frequency. The WB-LINK is powered by two AA batteries and operates approximately 6- 8 hours with fresh batteries. Use the Beltpack with the AnchorLink series HBM-LINK, LM-LINK, EM-LINK and CM-LINK.

SPECIFICATIONS:

- Operating Voltage: 3V DC (2 AA non-rechargeable alkaline batteries)
- Mic Bias Voltage: 2V DC
- Frequency Range: 1920~1930 MHz USA/CAN ; 1880~1900 MHz Europe
- Modulation: DECT GFSK
- Antenna: Embedded
- Dimensions (HWD): 4" x 2.7" x 1"


OPERATION INSTRUCTIONS:

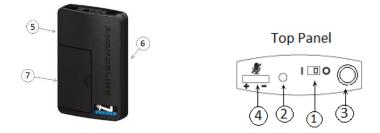

- 1. On/Off Switch: Turns transmitter power on and off.
- 2. Pairing LED: Solid GREEN LED indicates paired. Red LED will flash when battery is low. Flashing GREEN indicates mute.
- 3. Connector Jack: 1/8" (3.5mm) Stereo Locking.
- 4. Volume/Mute Wheel Switch: The rotary control adjusts the transmitter's audio level. Also serves as a MUTE when push down.
- 5. Mic/Line Selector: The switch sets the audio input either to Microphone level or Line level
- 6. Belt Clip: Black Spring Wire
- 7. Battery Compartment: Insert two AA non-rechargeable alkaline batteries into the compartment making sure the polarity of the batteries is correct.



WB-LINK pin-out

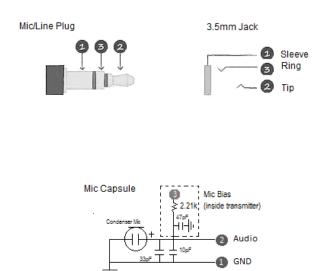

MODEL NUMBERS:

WB-LINK DECT 6.0 USA/Canada WB-LINKEU DECT Europe

ENVIRONMENTAL SPECIFICATIONS:

- Maximum operating temperature up to 40°C
- Maximum operating altitude up to 2000 m
- Pollution degree 2

CAUTION: SAFE BATTERY HANDLING AND DISPOSAL

- > Do not replace the battery with an incorrect type which can defeat a safeguard.
- Do not dispose of a battery into fire or a hot oven, or mechanically crushing or cutting of a battery, which can result in an explosion.
- Do not leave a battery in an extremely high temperature surrounding environment that can result in an explosion or the leakage of flammable liquid or gas.
- > Do not mix batteries of different types and brands.
- > Do not mix new and used batteries.
- During battery replacement, batteries shall be kept out of reach of children and used batteries shall be disposed of as soon as possible.