



4 Channel HDBaseT Receiver HBT-50T

Instruction Manual

Table of Contents

FCC COMPLIANCE STATEMENT	3
WARNINGS AND PRECAUTIONS	3
WARRANTY	4
STANDARD WARRANTY	
Three Year Warranty	4
DISPOSAL	5
1. PRODUCT OVERVIEW	6
FeaturesSystem Diagram	
2. CONNECTIONS	8
FRONT PANEL	8
REAR PANEL	8
3. RS-232/RS-422 PINOUT	11
RS-232 RS-422	
4. FIRMWARE UPDATE	12
FIRMWARE UPGRADE REQUIREMENTS	12
Upgrade Procedure	12
5. FREQUENTLY-ASKED QUESTIONS	13
6. DIMENSIONS	14
7. SPECIFICATIONS	15
SERVICE AND SUPPORT	16

Disclaimer of Product & Services

The information offered in this instruction manual is intended as a guide only. At all times, Datavideo Technologies will try to give correct, complete and suitable information. However, Datavideo Technologies cannot exclude that some information in this manual, from time to time, may not be correct or may be incomplete. This manual may contain typing errors, omissions or incorrect information. Datavideo Technologies always recommend that you double check the information in this document for accuracy before making any purchase decision or using the product. Datavideo Technologies is not responsible for any omissions or errors, or for any subsequent loss or damage caused by using the information contained within this manual. Further advice on the content of this manual or on the product can be obtained by contacting your local Datavideo Office or dealer.

FCC Compliance Statement

This device complies with part 15 of the FCC rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) This device must accept any interference received, including interference that may cause undesired operation.

Warnings and Precautions

1. Read all of these warnings and save them for later reference.



- 2. Follow all warnings and instructions marked on this unit.
- Unplug this unit from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- 4. Do not use this unit in or near water.
- 5. Do not place this unit on an unstable cart, stand, or table. The unit may fall, causing serious damage.
- 6. Slots and openings on the cabinet top, back, and bottom are provided for ventilation. To ensure safe and reliable operation of this unit, and to protect it from overheating, do not block or cover these openings. Do not place this unit on a bed, sofa, rug, or similar surface, as the ventilation openings on the bottom of the cabinet will be blocked. This unit should never be placed near or over a heat register or radiator. This unit should not be placed in a built-in installation unless proper ventilation is provided.
- 7. This product should only be operated from the type of power source indicated on the marking label of the AC adapter. If you are not sure of the type of power available, consult your Datavideo dealer or your local power company.
- 8. Do not allow anything to rest on the power cord. Do not locate this unit where the power cord will be walked on, rolled over, or otherwise stressed.
- 9. If an extension cord must be used with this unit, make sure that the total of the ampere ratings on the products plugged into the extension cord do not exceed the extension cord rating.
- 10. Make sure that the total amperes of all the units that are plugged into a single wall outlet do not exceed 15 amperes.
- 11. Never push objects of any kind into this unit through the cabinet ventilation slots, as they may touch dangerous voltage points or short out parts that could result in risk of fire or electric shock. Never spill liquid of any kind onto or into this unit.
- 12. Except as specifically explained elsewhere in this manual, do not attempt to service this product yourself. Opening or removing covers that are marked "Do Not Remove" may expose you to dangerous voltage points or other risks, and will void your warranty. Refer all service issues to qualified service personnel.

- 13. Unplug this product from the wall outlet and refer to qualified service personnel under the following conditions:
 - a. When the power cord is damaged or frayed;
 - b. When liquid has spilled into the unit;
 - c. When the product has been exposed to rain or water;
 - d. When the product does not operate normally under normal operating conditions. Adjust only those controls that are covered by the operating instructions in this manual; improper adjustment of other controls may result in damage to the unit and may often require extensive work by a qualified technician to restore the unit to normal operation;
 - e. When the product has been dropped or the cabinet has been damaged;
 - f. When the product exhibits a distinct change in performance, indicating a need for service.

Warranty

Standard Warranty

- Datavideo equipment is guaranteed against any manufacturing defects for one year from the date of purchase.
- The original purchase invoice or other documentary evidence should be supplied at the time of any request for repair under warranty.
- The product warranty period beings on the purchase date. If the purchase date is unknown, the product warranty period begins on the thirtieth day after shipment from a Datavideo office.
- All non-Datavideo manufactured products (product without Datavideo logo) have only one year warranty from the date of purchase.
- Damage caused by accident, misuse, unauthorized repairs, sand, grit or water is not covered under warranty.
- Viruses and malware infections on the computer systems are not covered under warranty.
- Any errors that are caused by unauthorized third-party software installations, which are not required by our computer systems, are not covered under warranty.
- All mail or transportation costs including insurance are at the expense of the owner.
- All other claims of any nature are not covered.
- All accessories including headphones, cables, batteries, metal parts, housing, cable reel and consumable parts are not covered under warranty.
- Warranty only valid in the country or region of purchase.
- Your statutory rights are not affected.

Three Year Warranty

 All Datavideo products purchased after July 1st, 2017 qualify for a free two years extension to the standard warranty, providing the product is registered with Datavideo within 30 days of purchase.



 Certain parts with limited lifetime expectancy such as LCD panels, DVD drives, Hard Drive, Solid State Drive, SD Card, USB Thumb Drive, Lighting, Non-PCIe Card and third party provided PC components are covered for 1 year. • The three-year warranty must be registered on Datavideo's official website or with your local Datavideo office or one of its authorized distributors within 30 days of purchase.

Disposal



For EU Customers only - WEEE Marking

This symbol on the product or on its packaging indicates that this product must not be disposed of with your other household waste. Instead, it is your responsibility to dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. The separate collection and recycling of your waste equipment at the time of disposal will help to

conserve natural resources and ensure that it is recycled in a manner that protects human health and the environment. For more information about where you can drop off your waste equipment for recycling, please contact your local city office, your household waste disposal service or the shop where you purchased the product.



CE Marking is the symbol as shown on the left of this page. The letters "**CE**" are the abbreviation of French phrase "Conformité Européene" which literally means "European Conformity". The term initially used was "EC Mark" and it was officially replaced by "CE Marking" in the Directive 93/68/EEC in 1993. "CE Marking" is now

used in all EU official documents.

1. Product Overview


The HBT-50, an HDBaseT 4-channel receiver, is a critical part of a live production chain as it powers the connected PTZ cameras using PoE, delivers video and audio over an Ethernet cable, and acts as an RS-232/422 interface between the connected PTZ cameras and the camera controller to allow configuration of camera parameters such as iris, focus, presets, etc. from a remote location.

The HBT-50 sends camera images to devices such as streaming servers or video switchers via SDI and HDMI interfaces (up to 1080p60). With the HBT-50, you can easily integrate the camera controller, the video switcher, ISO recorders, etc. into your video production system.

Features

- Allows remote control of camera functions via RS-232 or RS-422.
- Connects up to 4 cameras
- Simultaneous SDI and HDMI outputs.
 - Highest video resolution supported is 1080p50/60
- Power over Ethernet
- HDBaseT transmission distance of up to 100m@1080p50/59.94/60 over Cat.6 cables.


System Diagram

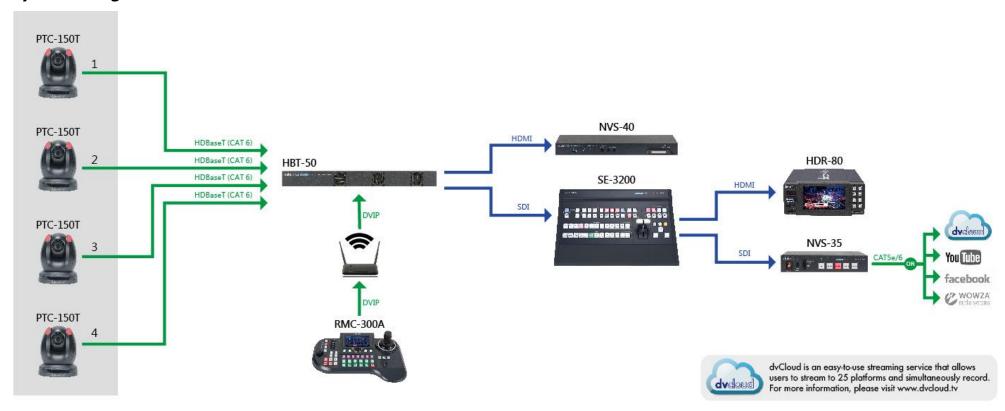


2. Connections

Various connections are discussed in this section.

Front Panel

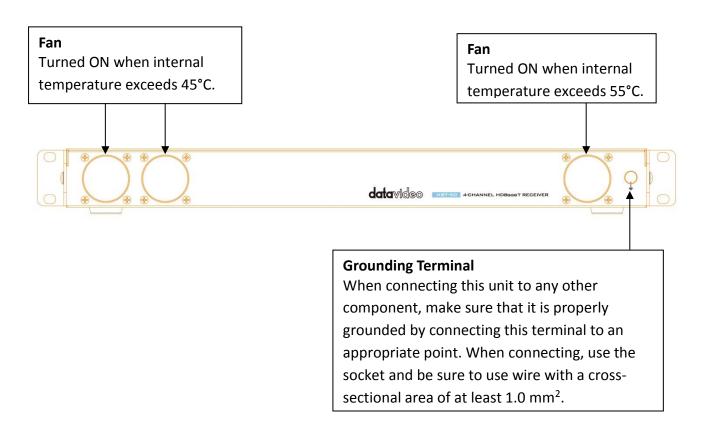

Rear Panel

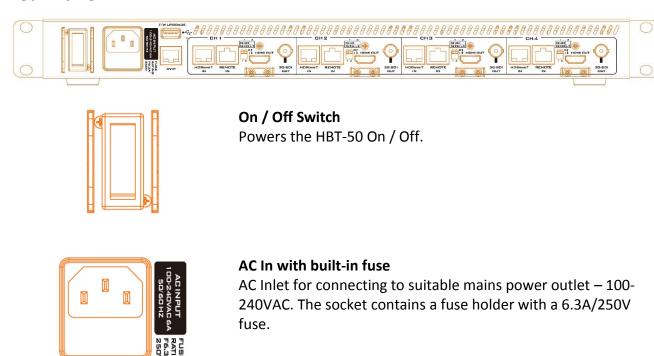

F/W UPGRADE



USB FW Upgrade Port

Connect the USB drive containing the HBT-50's latest firmware files to this port for firmware upgrade.

Note: See Firmware Update for details.



DVIP Port

Connects to Ethernet switch or router, serving as a communication port between the network and the HBT-50 4 Channel HDBaseT Receiver.

Note: The DVIP port can also be used for Firmware Upgrade. See <u>Firmware Update</u> for details.



HDBaseT IN

A PTZ camera is usually connected directly to the HDBaseT IN with an Ethernet cable carrying video, audio, DVIP control protocol, RS-232/422 commands and power (PoE) back and forth the camera and the HBT-50.



3G-SDI OUT

An SDI output port for video output to devices such as a video switcher (SE-3200).



HDMI OUT

An HDMI output port for video output to devices such as a streaming server (NVS-40) or a video switcher (SE-3200).



RS-232/RS-422 Interface

The RS-232/RS-422 port connects the HBT-50 directly to Datavideo's camera controllers such as RMC-180, RMC-300A or RMC-300C. Use the RS-232 or RS-422 custom cable to connect. See <u>RS-232/RS-422 pinout</u> for more information about the respective cabling.


Use the DIP switch to select between RS-422 and RS-232 interfaces. Set bit 1 of the DIP switch to 0 to select RS-422 and 1 to select RS-232 then depending on the range of the connection, set bit 2 of the DIP switch to select the long reach (0) mode to enjoy longer cable reach of up to 120 meters.




3. RS-232/RS-422 Pinout

The camera controller can be connected to the HBT-50 4 Channel HDBaseT Receiver through the RS-232 or RS-422 interface using a custom Ethernet cable. The corresponding connection wiring schemes are shown below.

RS-232

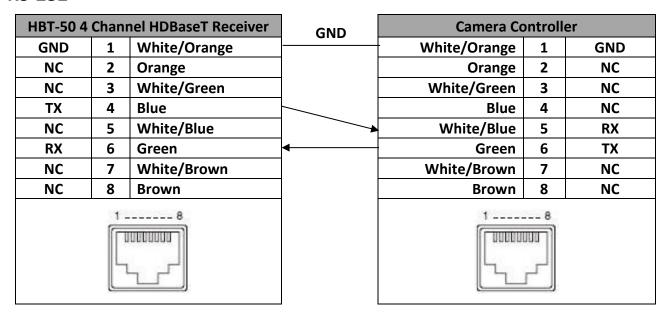

RS-422

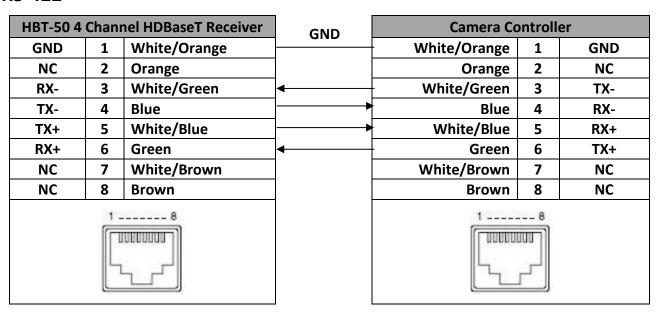

4. Firmware Update

Datavideo usually releases new firmware containing new features or reported bug fixes from time to time. Customers can either download the firmware as they wish or contact their local dealer or reseller for assistance.

This section outlines the firmware upgrade process which should take *approximately few minutes to complete*.

The existing settings should persist through the *firmware upgrade process, which should not be interrupted once started* as this could result in a non-responsive unit.

Firmware Upgrade Requirements

- USB disk (FAT32)
- Latest firmware file
- HBT-50 unit

Upgrade Procedure


- 1. Download the latest firmware file (zip) from the product page.
- 2. Uncompress the zip file.
- 3. Save the unzipped file to an empty USB disk.
- 4. Insert the USB disk containing the latest firmware file into the USB FW Upgrade port while the HBT-50 is OFF.
- 5. Power ON the HBT-50 to start the firmware upgrade.
- 6. The firmware upgrade is complete when the USB disk's Read/Write LED stops flashing.

5. Frequently-Asked Questions

This section describes problems that you may encounter while using HBT-50. If you have any questions, please refer to related sections and follow all suggested solutions. If problem still exists, please contact your distributor or the service center.

No.	Problems	Solutions
1.	PTC-150T does not respond to the	The PTC-150T's connection mode is DHCP by
	control commands sent via DVIP.	default, as a result, communication may not
		be established while the HBT-50 is still
		booting. It is recommended to power ON the
		HBT-50 first then after approximately 20
		seconds, connect the HDBaseT OUT port of
		the PTC-150T to the HDBaseT IN port of the
		HBT-50.

6. Dimensions

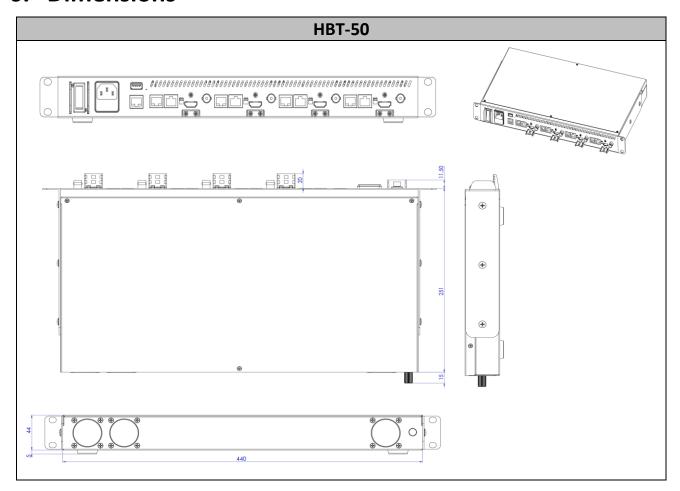

All measurements in millimeters (mm)

7. Specifications

Product Name	4 Channel HDBaseT Receiver	
Model Number	HBT-50	
Video/Audio Input	HDBaseT x 4 (with PoE and IEEE 802.3at)	
Video Output	HDMI x 4 (up to 1080p50/59.94/60) SDI x 4 (up to 1080p50/59.94/60)	
Supported Video Format	1080p60/59.94/50/30/29.97/25/24/23.98 1080i60/59.94/50 720p60/59.94/50	
DVIP	RJ-45 x 1 (Input)	
RS-422/RS-232	RJ-45 x 4 (RS-232/RS-422)	
Power	AC IN	
PoE Output	65W per channel	
HDBaseT Distance	1080p50/59.94/60 up to 100m by CAT. 6 cables	
Operating Temperature	0 – 40°C (32 – 122°F)	
Storage Temperature	-20 – 60°C (-4 – 140°F)	
Humidity	10% – 80% (non-condensing)	
Chassis	1U rack mount	
Weight	4.2 kg	
Dimensions	440 (W) x 286 (D) x 49 (H)	

Service & Support

It is our goal to make owning and using Datavideo products a satisfying experience. Our support staff is available to assist you to set up and operate your system. Contact your local office for specific support requests. Plus, please visit www.datavideo.com to access our FAQ section.

Please visit our website for latest manual update. www.datavideo.com/product/HBT-50





@DatavideoUSA @DatavideoIndia2016 @DatavideoEMEA @Datavideojapan

@DatavideoTaiwan @DatavideoLatam @DatavideoAsia @DatavideoBrasil



@Datavideo @Datavideo_EMEA @Datavideo Taiwan





@DatavideoUSA @DatavideoEurope