


Hardware Overview



Front Panel

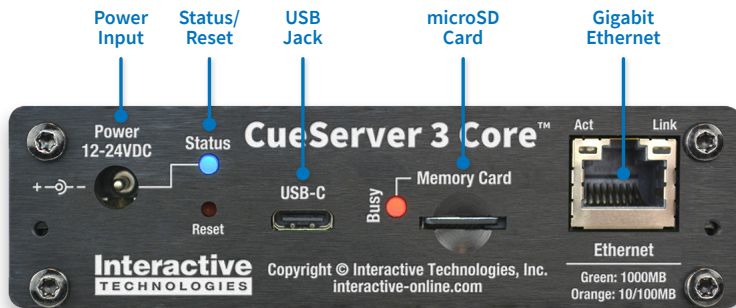

Rear Panel

What's in the Box

- CS-3120 CueServer 3 Core D Processor
- Power Supply

Startup Procedure



• Connect CueServer to the Network

Use an Ethernet patch cable to connect CueServer to your Ethernet Switch or directly to your computer.



• Connect CueServer to Power

Use the included Power Supply with CueServer.



• Open **CueServer Studio** on your Computer

You can download CueServer Studio from cueserver.com.



• CueServer should appear in the Navigator Window

CueServer Studio's main Navigator Window searches for and displays all CueServers found on the network.

What's Next

• Visit our Website for More

Our website contains more information, including User's Manual, Downloads, Guides, Examples, Training and more. You can start your CueServer journey at:

cueserver.com

Interactive Technologies, Inc.

5295 Lake Pointe Center Drive
Cumming, GA 30041 USA
1-678-455-9019
interactive-online.com