

Sound Column Speakers

User Manual

SC-20T (20 Watt RMS)

SC-40T (40 Watt RMS)

ESI / SPECO

Introduction

Please read the instructions in detail to ensure proper installation. After installation, please keep this instruction manual for your reference.

Check with the product's specifications before making installation.

Warnings

1. Install sound columns only as specified.
2. Keep sound columns out of direct moisture.
3. Do not clean the sound columns with cleaning solvent.
4. Contact a professional or CSI/SPECO for servicing needs.


Installation

1. Be sure that the installation surface is sturdy enough to support the weight of the sound column. Failure to do so may result in damage to sound column installation surface and / or cause personal injury.
2. Only use the supplied mounting hardware for installation.

Installation Diagram


Rotating Left & Right

(included)

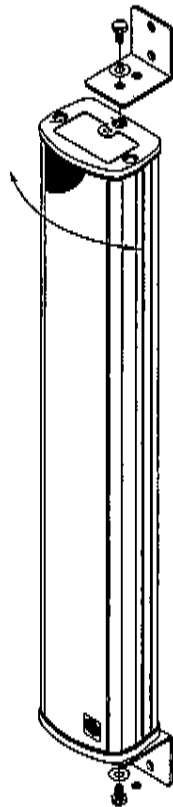

CSI / SPECO
200 NEW HIGHWAY
AMITYVILLE NY 11701
1-800-645-5516

3. Be sure that the output connection is rated at 70V or 25V. Use the color code below to identify cable connections.
4. To adjust the output power, use the wattage tap selector switch for SC-20T (see below).

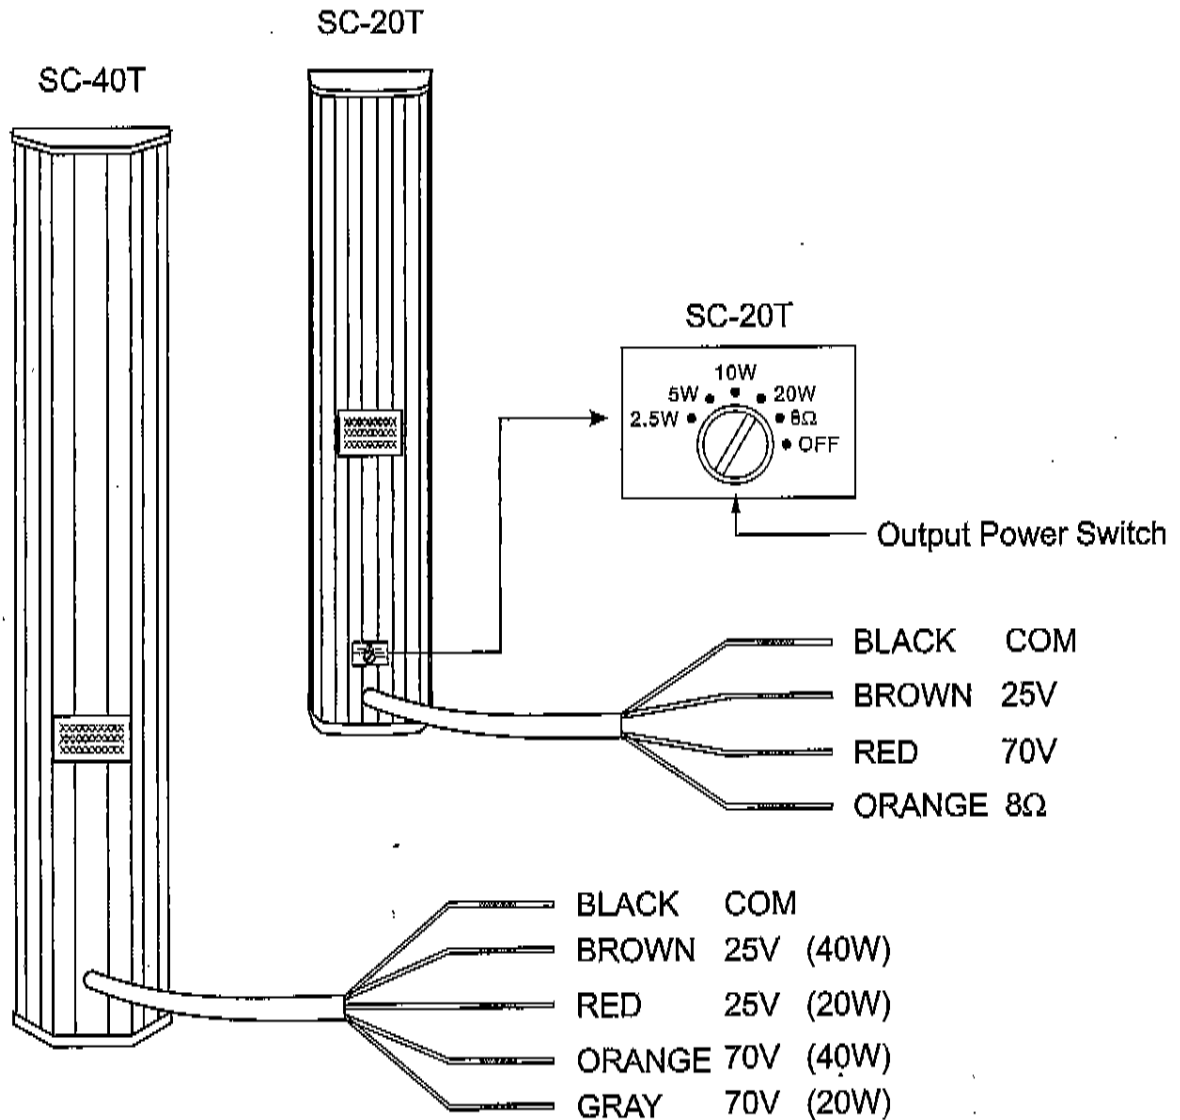

Model Number	SC-20T	SC-40T
Interior Speakers	2.5" Wide Band Speakers	6.5" Wide Band Speakers.
Input Power	Rated 20W / 40W Max.	Rated 40W / 60W Max.
Output Power	2.5W / 5W / 10W / 20W	20W / 40W
Input Impedance		
	(70V) : 2KΩ / 1KΩ / 500Ω / 280Ω	(70V) : 250Ω (GRAY) / 122.5Ω (ORANGE)
	(25V) : 250Ω / 125Ω / 62Ω / 31Ω	(25V) : 31.21 (RED) / 15.6Ω (BROWN)
Input Voltage	25V / 70V	25V / 70V
Frequency Response	250~16,000Hz	125~12,000Hz
Sound Pressure Level	94dB(1W / M)	100dB(1W / M)
Size	2 3/8"(H) × 4 1/8"(W) × 3"(D)	7 3/8"(H) × 8 7/8"(W) × 4 7/8"(D)
Weight	7.94 lbs.	19.1 lbs.