


Before using this unit, carefully read the sections entitled: "USING THE UNIT SAFELY" and "IMPORTANT NOTES" (supplied on a separate sheet). After reading, keep the document(s) where it will be available for immediate reference.

**Main Features**

- High Brightness mode enhances meter visibility outdoors.
- Accu-Pitch Sign function uses the motion of the meter's lights to show when tuning is completed.
- Guitar/Bass mode lets you tune by string number, with support for 7-string guitars and 6-string basses.
- Flat tuning is supported with Guitar Flat mode, which allows for "down" tunings up to six semitones below standard pitch.

**How to Use the Tuner**

- 1. Connect the AC adaptor (sold separately).**  
This switches on the power and the CHECK indicator lights.
- 2. Connect the guitar or bass you want to tune to the INPUT jack.**
- 3. Play a single note on your guitar or bass, and tune it.**  
The note name or string number closest to the tone being played appears in the display. Tune the instrument so that both Tuning Guide indicators are lit and the center of the meter is lit green. (Cent display)  
The meter will light farther toward the left as the pitch gets flatter, or farther toward the right as the pitch gets sharper.

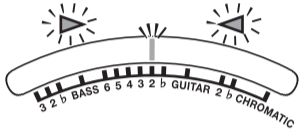

- \* When the Accu-Pitch Sign function is on, the meter lights stream toward the center of the display when stable tuning at the correct pitch is reached.
- \* The meter behavior described here is when the CENT display is selected (the factory setting). The behavior is different when you've selected the STREAM display.

**Convenient Functions**

**Having the Meter Indicate Completion of Tuning (Accu-Pitch Sign function)**

When the Accu-Pitch Sign function is on, the meter lights stream toward the center of the display when stable tuning at the correct pitch is reached.

- 1. While holding down the STREAM/CENT button, turn on the power (connect the AC adaptor).**
  - 2. Press the STREAM/CENT button again to toggle the Accu-Pitch Sign function on/off.**  
On: The meter lights stream to the center from the left and right.  
Off: The meter lights up at the left and right.
- \* This setting remains stored even after the power is turned off.

**Changing the Reference Pitch**

 
You can adjust the reference pitch over a range of 436-445 Hz. (440 Hz is the factory default.)

- 1. Press the MODE button and STREAM/CENT button simultaneously.**  
The lowest digit of the current reference pitch (e.g., "0" when set to 440 Hz) blinks in the Note Name/String indicator.
  - 2. Press the MODE button or STREAM/CENT button to change the reference pitch.**  
**MODE button:** Raises the reference pitch by 1 Hz.  
**STREAM/CENT button:** Lowers the reference pitch by 1 Hz.
- \* If you allow several seconds to elapse without pressing the MODE button or STREAM/CENT button, the TU-3S will return to normal operation.
  - \* When you turn on the power, the current reference pitch will be displayed for several seconds.
  - \* This setting remains stored even after the power is turned off.

**Changing the Meter's Brightness (High Brightness mode)**

By switching the meter to High Brightness mode, you can increase its visibility when performing outdoors.  
To switch to High Brightness mode, hold down the STREAM/CENT button for two seconds or longer. To return to normal brightness, hold down the STREAM/CENT for two seconds or longer once again.

**Panel Descriptions**

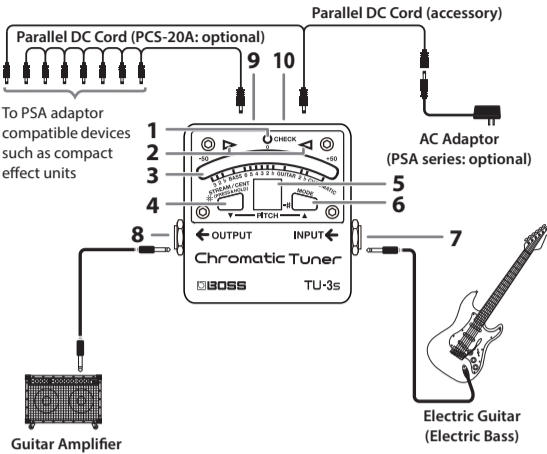

To PSA adaptor compatible devices such as compact effect units

- \* If you connect other effect units, you must connect them after the TU-3S. If the TU-3S is connected after other effect units, you won't be able to tune correctly.
- 1. CHECK Indicator**  
This indicator lights when the TU-3S is active.
  - 2. Tuning Guide Indicator**  
Indicates when the proper tuning is reached.
- |               |                  |                |
|---------------|------------------|----------------|
| Pitch is flat | Pitch is in tune | Pitch is sharp |
|               |                  |                |
- 3. Meter**  
Indicates the tuning of the input sound's pitch.
  - 4. STREAM/CENT button**  
Switches the meter's display pattern.  
\* This setting remains stored even after the power is turned off.

**CENT display**

The meter lights farther toward the left as the pitch gets flatter, or farther toward the right as the pitch gets sharper. When the pitch is correct, the center of the meter lights green.  
\* The center of the meter and the tuning guide indicator remain lit for several seconds after you've selected this setting.

**STREAM display**


The meter lights stream toward the left if the input pitch is flat, or toward the right if the input pitch is sharp. The lights flow more slowly as the pitch discrepancy decreases, and stop flowing when the pitch is exact.  
\* The meter lights stream toward the left for several seconds after you've selected this setting.

- 5. Note Name/String Number Indicator**  
Indicates the note name, string number, or reference pitch.

**Note indicator**



- 6. MODE Button**  
The tuning mode changes each time you press the MODE button. The meter lights at the position of the currently selected mode.  
\* When you turn on the power, the current tuning mode will be displayed for several seconds.  
\* This setting remains stored even after the power is turned off.  
\* In this example, the Tuning mode is set to GUITAR.

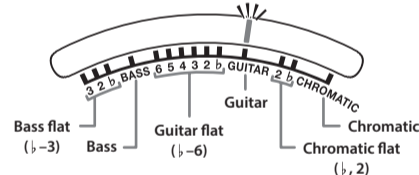

Mode	Explanation	Indicator Status
Chromatic	Lets you tune all twelve chromatic steps of the octave.	The note name is displayed.
Chromatic flat	Lets you tune one semitone lower (b) or two semitones lower (2).	
Guitar	Lets you tune by guitar string numbers.	The guitar string number is displayed. (7th string is displayed as "7.")
Guitar flat	Lets you tune one semitone lower (b) or anywhere from two to six semitones lower (2-6).	
Bass	Lets you tune by bass string numbers.	The bass string number is displayed. (Hi-C string is displayed as "C," Lo-B string is displayed as "b.")
Bass flat	Lets you tune one semitone lower (b) two semitones lower (2), or three semitones lower (3).	


- 7. INPUT Jack**  
Connect the guitar or bass guitar to be tuned here.
- 8. OUTPUT Jack**  
Connect an effects processor, guitar amp, or other such device here.  
\* The tuner is always on while the AC adaptor is connected. The sound from the OUTPUT jack will not be muted.
- 9. DC OUT Jack**  
When an AC adaptor is used, you can connect a PCS-20A parallel DC cord (optional) to supply power to effects processors and other PSA adaptor-compatible gear.
- 10. DC IN Jack**  
Accepts connection of an AC Adaptor (PSA series: optional).  
\* Use only the specified AC adaptor (PSA series), and connect it to an AC outlet of the correct voltage. Do not use any other AC adaptor, since this may cause malfunction.

**Precautions When Connecting**

- To prevent malfunction and/or damage to speakers or other devices, always turn down the volume, and turn off the power on all devices before making any connections.
- Do not use connection cables that contain a built-in resistor.
- Once the connections have been completed, turn on power to your various devices in the order specified. By turning on devices in the wrong order, you risk causing malfunction and/or damage to speakers and other devices.  
When powering up: Turn on the power to your guitar amp last.  
When powering down: Turn off the power to your guitar amp first.
- This unit is equipped with a protection circuit. A brief interval (a few seconds) after power up is required before the unit will operate normally.

**Attaching the Rubber Foot**

You can attach the rubber foot (included) if necessary.

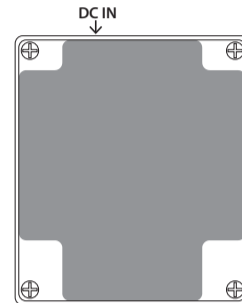

- \* When turning the unit over, be careful so as to protect the buttons and switches from damage.

**Specifications**

Tuning Range	C0 (16.35 Hz)–C8 (4,186 Hz)
Reference Pitch	A4 = 436–445 Hz (1 Hz step)
Tuning Accuracy	±1 cent
Nominal Input Level	-20 dBu
Input Impedance	1 MΩ
Nominal Output Level	-20 dBu
Output Impedance	1 kΩ
Recommended Load Impedance	10 kΩ or greater
Power Supply	AC Adaptor (sold separately)
Current Draw	30 mA (DC 9 V) 85 mA (DC 9 V, when High Brightness mode is on)
Dimensions	73 (W) x 84 (D) x 56 (H) mm 2-7/8 (W) x 3-5/16 (D) x 2-1/4 (H) inches
Weight	220 g 8 oz
Accessories	Leaflet ("USING THE UNIT SAFELY," "IMPORTANT NOTE," and "Information") Parallel DC cord Rubber foot
Options	AC adaptor: PSA series Parallel DC cord: PCS-20A

\* This document explains the specifications of the product at the time that the document was issued. For the latest information, refer to the Roland website.