


INSTALLATION INSTRUCTIONS

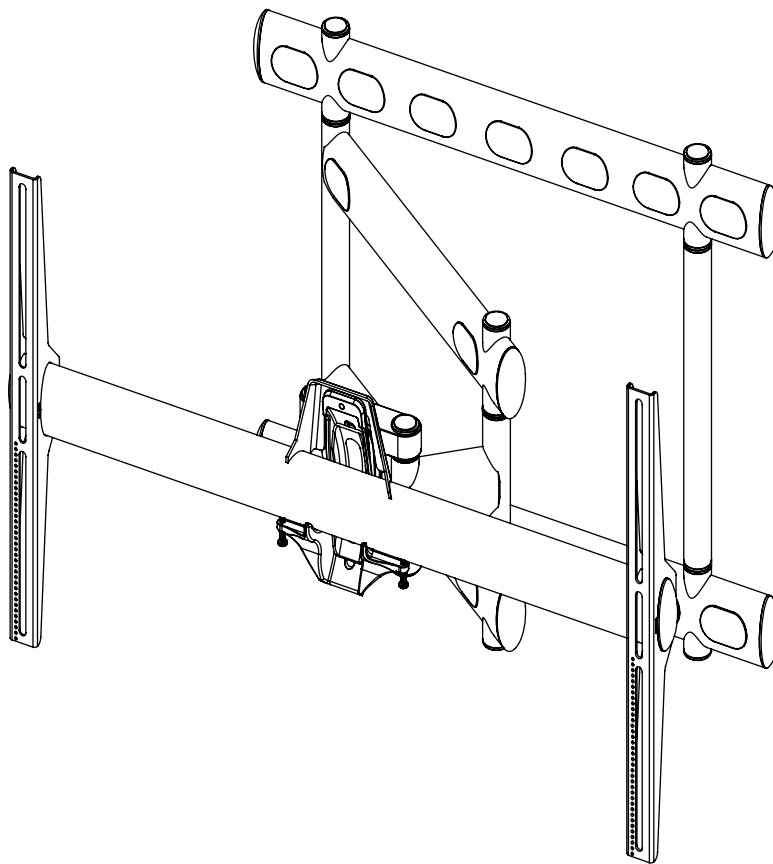

AM3/AM3-B
Universal Swingout Arm

NORTH AMERICA

3130 East Miraloma Avenue
Anaheim, CA 92806 USA
USA and Canada –
Phone: 800-368-9700
Fax: 800-832-4888

EUROPE

Swallow House,
Shilton Industrial Estate,
Shilton, Coventry, England CV79JY
Phone: +44 (0) 2476 614700
Fax: +44 (0) 2476 614710

AUSTRALIA, NEW ZEALAND, OCEANIA (DISTRIBUTOR)

P.O. Box 295
Mordialloc Victoria 3195
Australia
Phone: 039586 6330
www.premiermounts.com.au



Table of Contents

Warning Statements..... 2

Parts List..... 3

Installation Tools..... 3

Thread Depth Indicator 6

Mount Orientation..... 7

Mount Installation..... 8

Concrete Installation 8

Nose Piece Orientation 9

Universal Mounting Bracket Assembly..... 10

Attaching the Display 11

Securing the Display..... 12

Tilt Positioning..... 13

Cable Access Holes..... 13

Technical Specifications..... 14

Warranty..... 15

Warning Statements



PRIOR TO THE INSTALLATION OF THIS PRODUCT, THE INSTALLATION INSTRUCTIONS SHOULD BE READ AND COMPLETELY UNDERSTOOD. THE INSTALLATION INSTRUCTIONS MUST BE READ TO PREVENT PERSONAL INJURY AND PROPERTY DAMAGE. KEEP THESE INSTALLATION INSTRUCTIONS IN AN EASILY ACCESSIBLE LOCATION FOR FUTURE REFERENCE.



PREMIER MOUNTS DOES NOT WARRANT AGAINST DAMAGE CAUSED BY THE USE OF ANY PREMIER MOUNTS PRODUCT FOR PURPOSES OTHER THAN THOSE FOR WHICH IT WAS DESIGNED OR DAMAGE CAUSED BY UNAUTHORIZED ATTACHMENTS OR MODIFICATIONS, AND IS NOT RESPONSIBLE FOR ANY DAMAGES, CLAIMS, DEMANDS, SUITS, ACTIONS OR CAUSES OF ACTION OF WHATEVER KIND RESULTING FROM, ARISING OUT OF OR IN ANY MANNER RELATING TO ANY SUCH USE, ATTACHMENTS OR MODIFICATIONS.



THE WALL STRUCTURE MUST BE CAPABLE OF SUPPORTING 160 LBS. IF NOT, THE WALL STRUCTURE MUST BE REINFORCED. PROPER INSTALLATION PROCEDURE BY A QUALIFIED SERVICE TECHNICIAN, AS OUTLINED IN THE INSTALLATION INSTRUCTIONS, MUST BE ADHERED TO. FAILURE TO DO SO COULD RESULT IN SERIOUS PERSONAL INJURY, OR EVEN DEATH.



SAFETY MEASURES MUST BE PRACTICED AT ALL TIMES DURING THE INSTALLATION OF THIS PRODUCT. USE PROPER SAFETY GEAR AND TOOLS FOR THE INSTALLATION PROCEDURE TO PREVENT PERSONAL INJURY.



Indicates that the power plug is to be disconnected from the power outlet.



Contact Premier Mounts with any questions - (800) 368-9700.



Safety precautions must be taken at all times.



Warning and Caution statements.



It is recommended that a maximum of 5/8" plaster board be used when mounting to wooden studs.



Do not install on a structure that is prone to vibration, movement or chance of impact. Failure to do so could result in damage to the flat panel display and/or damage to the mounting surface.



Do not install near heater, fireplace, direct sunlight, air conditioning or any other source of direct heat energy. Failure to do so may result in damage to the flat panel display and could increase the risk of fire.



At least two qualified people should perform the installation procedure. Injury and/or damage can result from dropping or mishandling the flat panel display.








Parts List



Note

This wall mount is shipped with all proper installation hardware and components. Make sure that none of these parts are missing and/or damaged before beginning installation. If there are parts missing and/or damaged, please stop the installation and contact Premier Mounts (800-368-9700).

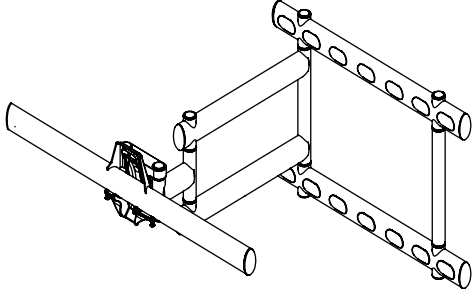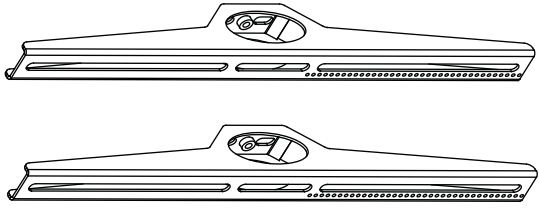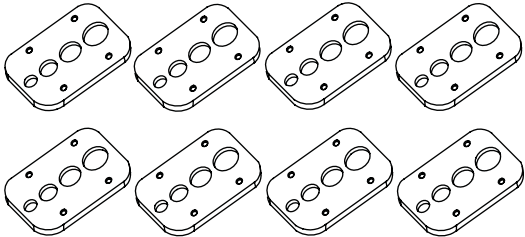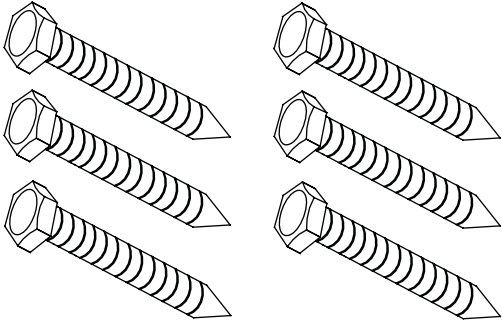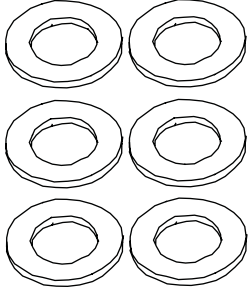 <p>AM3 Swingout Arm (Qty 1)</p>	
 <p>AM3 Universal Bracket Arms (Qty 2)</p>	 <p>Griplate™ (Qty 8)</p>
 <p>5/16" x 3" Lag Bolts - wooden studs only (Qty 6)</p>	 <p>5/16" Flat Washers (Qty 6)</p>

 
Installation Tools

 
Pencil
 Template
 Tape Measure
 Soft Material/Blanket

1/4" Drill Bit (pilot holes)
 1/2" Socket
 Socket Wrench
 Drill

 
5/32" Allen Wrench (Supplied)
 14mm Socket (Supplied)
 Thread Depth Indicator (Supplied)
 Level (Supplied)

 



M4 x 16  (Qty 8)

 
M6 x 30  (Qty 8)


M4 x 25  (Qty 8)

 
M6 x 45  (Qty 8)


M5 x 12  (Qty 8)

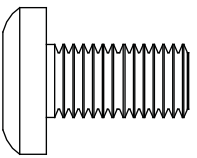
M8 x 20  (Qty 8)


M5 x 16  (Qty 8)

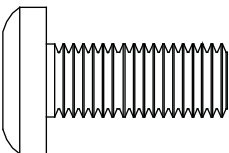
M8 x 25  (Qty 8)

 
M5 x 20  (Qty 8)


M5 x 25  (Qty 8)

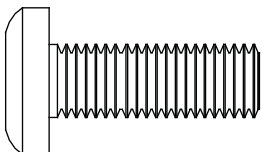
M8 x 30  (Qty 8)

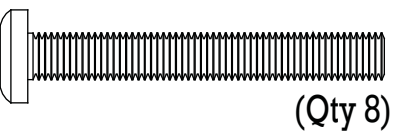
M5 x 50  (Qty 8)

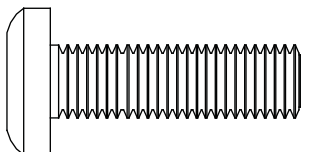M8 x 35  (Qty 8)

M6 x 16  (Qty 8)

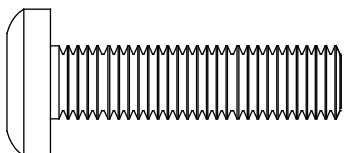M8 x 45  (Qty 8)


M6 x 20  (Qty 8)

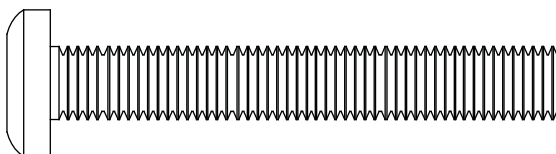M8 x 70  (Qty 4)

 
 


Note



The nylon spacers may be stacked to achieve proper spacing.

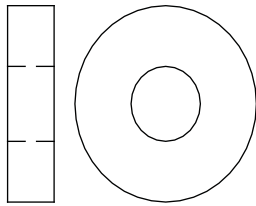

 
 
**1/4" Nylon spacers
(large)
(Qty 8)**




**9/16" Nylon spacers
(Qty 8)**

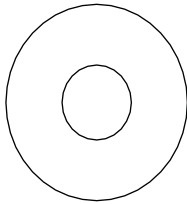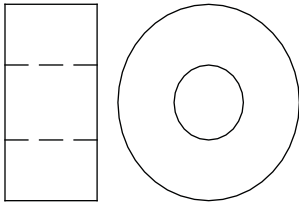


**1/2" Nylon spacers
(large)
(Qty 12)**




**Nylon sleeves
(Qty 8)**

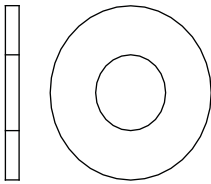

**5/16" Flat washers
(metal)
(Qty 8)**

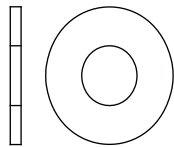

**1" Nylon Spacers
(Qty 8)**



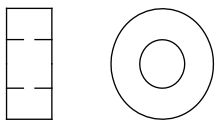


**1/4" Nylon spacers
(small)
(Qty 8)**



Thread Depth Indicator

1. Insert the thread depth indicator (supplied) through the thread inserts found on the back of the flat panel to make sure the inserts measure the same full depth and mark it (Figure 1).
2. Locate the correct diameter screw for the thread insert. Compare your marking to the screws (supplied).
3. If your selected screw is longer than the marking on the thread depth indicator, **DO NOT USE** this screw.
4. The screw length must not bypass the marking. Select another screw size (Figure 2 and 3), until you find one that comes closest to your mark without going past.

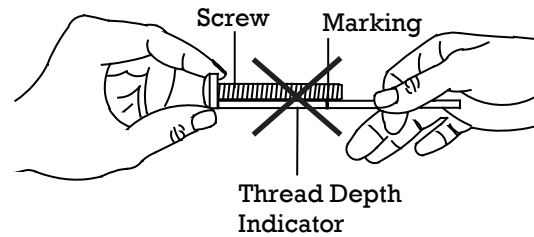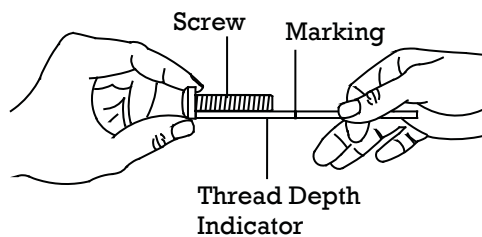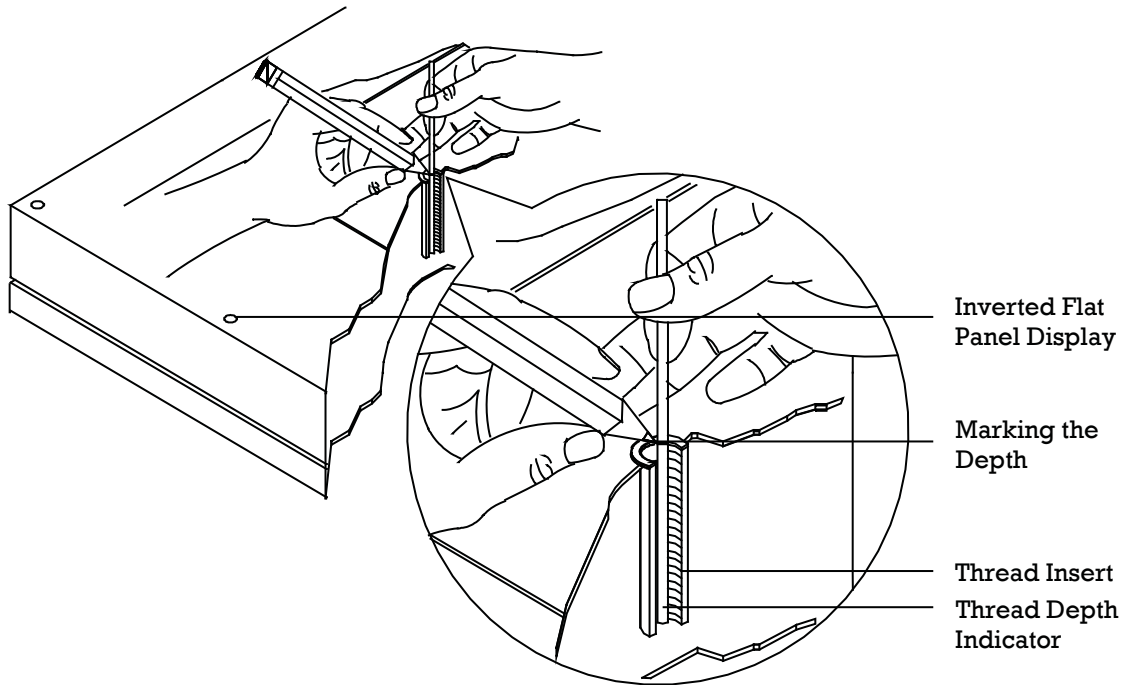



Mount Orientation

The AM3/AM3-B Plasma Mount has the built-in capability of mounting with the swingout arm on either the left or right-hand side.



WHEN MOUNTING THE AM3, THE SIDE THAT THE SWINGOUT ARM IS LOCATED ON MUST HAVE A LAG BOLT MOUNTED ON AT LEAST ONE SIDE (SEE FIGURE 1), TOP AND BOTTOM.

- Step 1.** To change the mount orientation, choose the desired side that the mount will open to, left or right.
Step 2. Once the side has been determined, attach the mount to the wall.

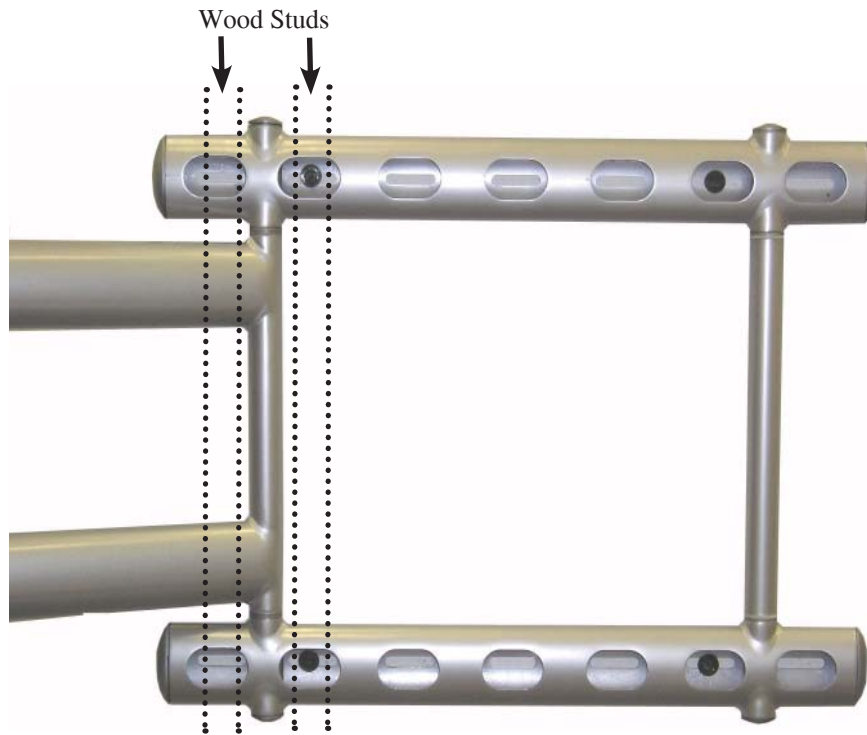


Figure 4

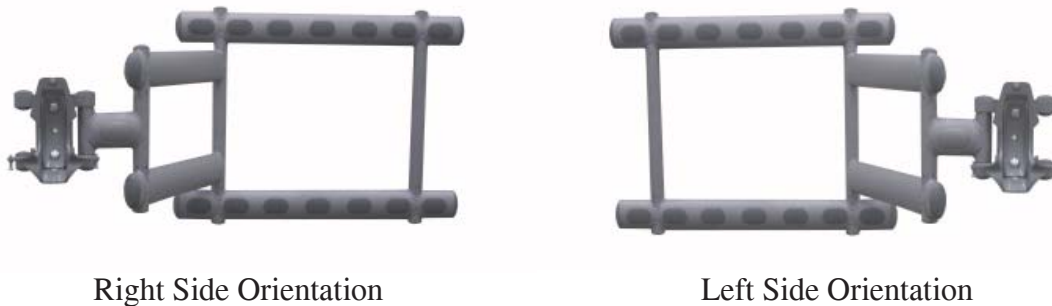


Figure 5



Mount Installation



Note Before proceeding with the mount installation, you should already have the mounting holes pre-drilled. Please use the template (supplied) and follow the instructions.



Note For ease of installation, it is recommended that two people perform the installation.



WHEN MOUNTING THE AM3, THE SIDE THAT THE SWINGOUT ARM IS LOCATED ON MUST HAVE A LAG BOLT MOUNTED ON AT LEAST ONE SIDE (FIGURE 4, PAGE 8), TOP AND BOTTOM.



DO NOT OVERTIGHTEN THE LAG BOLTS WHEN ATTACHING THE MOUNT TO THE WALL. IMPROPER INSTALLATION MAY RESULT IN PERSONAL INJURY OR DAMAGE TO PROPERTY

- Step 1.** After the holes have been pre-drilled, line up the mounting slot openings with the pre-drilled holes.
- Step 2.** Insert four (4) 5/16" x 3" lag bolts (or six (6), depending on your mount location) and washers into the mounting holes and tighten (Figure 6).
- Step 3.** Before tightening down the lag bolts, place a level (supplied) on the top rail and make sure that the mount is level. Once the mount is level, tighten all of the lag bolts using a 1/2" deep set socket.

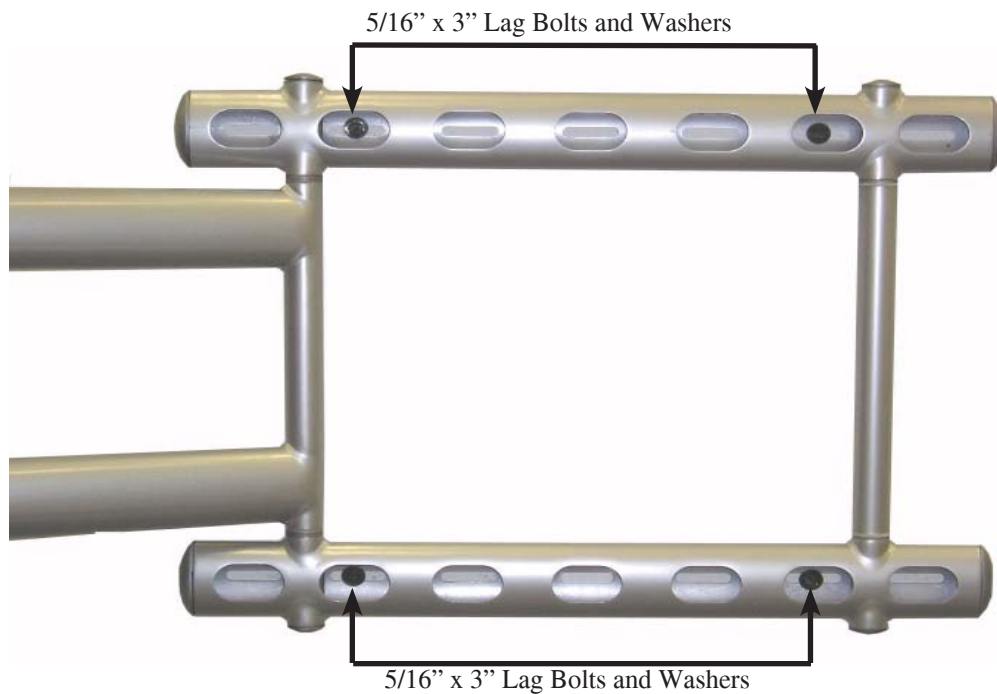


Figure 6

Concrete Mount Installation




Note The concrete anchors must be used for concrete installation. They can be purchased at your local hardware store.

- Step 1.** Begin by placing the wall plate into position against the wall, keeping it level.
- Step 2.** Mark off four holes to be used for securing the mount and place the wall plate aside.
- Step 3.** Next, drill holes using an electric drill and 5/16" masonry bit.
- Step 4.** Insert a concrete anchor into each hole.
- Step 5.** If necessary, a hammer can be used to lightly tap each anchor into place so that they are flush with the wall.
- Step 6.** Once all of the anchors are in place, move the wall plate back into position.
- Step 7.** Attach the nut onto the threaded shaft that is protruding from the wall.
- Step 8.** Do not tighten until all nuts are in place.



Nose Piece Orientation

Rotate Nose
180°

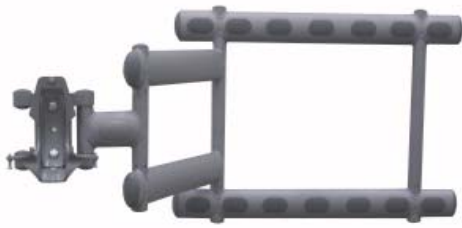


Right Side Orientation



Figure 7



Left Side Orientation

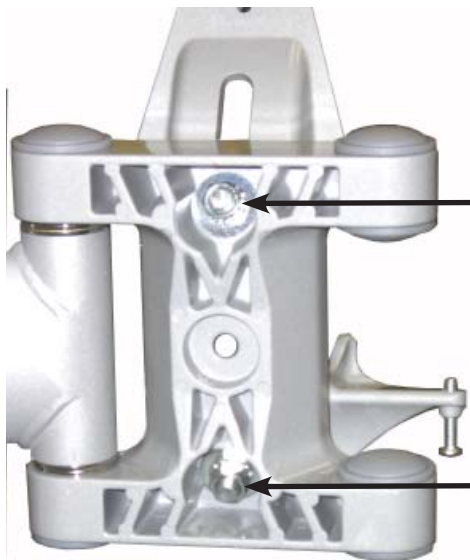

Back Side of Nose Piece

Tension Bolts

Tension Bolts



Front Side of Nose Piece

Figure 8

Step 1. Once the mount has been oriented and mounted to the wall, remove the nose piece by removing the tensions bolts.



Note After loosening the tension bolts, be sure that the nose piece is held together tightly before rotating.

Step 2. Detach the nose piece assembly, rotate 180°, and place back onto the mount (Figure 7).

Step 3. Slide the tension bolt back into the holes and attach the nuts from the backside of the nose assembly. Tighten the tension bolts (Figure 8).



Universal Mounting Bracket Assembly

- Step 1.** Place the universal bracket bar and the universal brackets on a flat surface.
- Step 2.** Slide the universal brackets onto the universal bracket bar (as shown in Figure 9) with the set screws facing up. At this time, do not tighten the set screws that are located on the universal bracket.
- Step 3.** Place the display on a soft, flat surface, face-down. Next, place the universal bracket assembly on the back of the display, with the universal brackets resting directly over the display mounting points.
- Step 4.** Once the desired position has been determined, place the griplates over each mounting point (dimples facing up) and secure them using the appropriate hardware (see Page 5).
- Step 5.** At this time, center the universal bracket bar and tighten the set screws that are located on the universal brackets.



Note For the two upper mounting points, the dimples (griplates) must be facing up. For the two lower mounting points, the dimples (griplates) must be facing down.


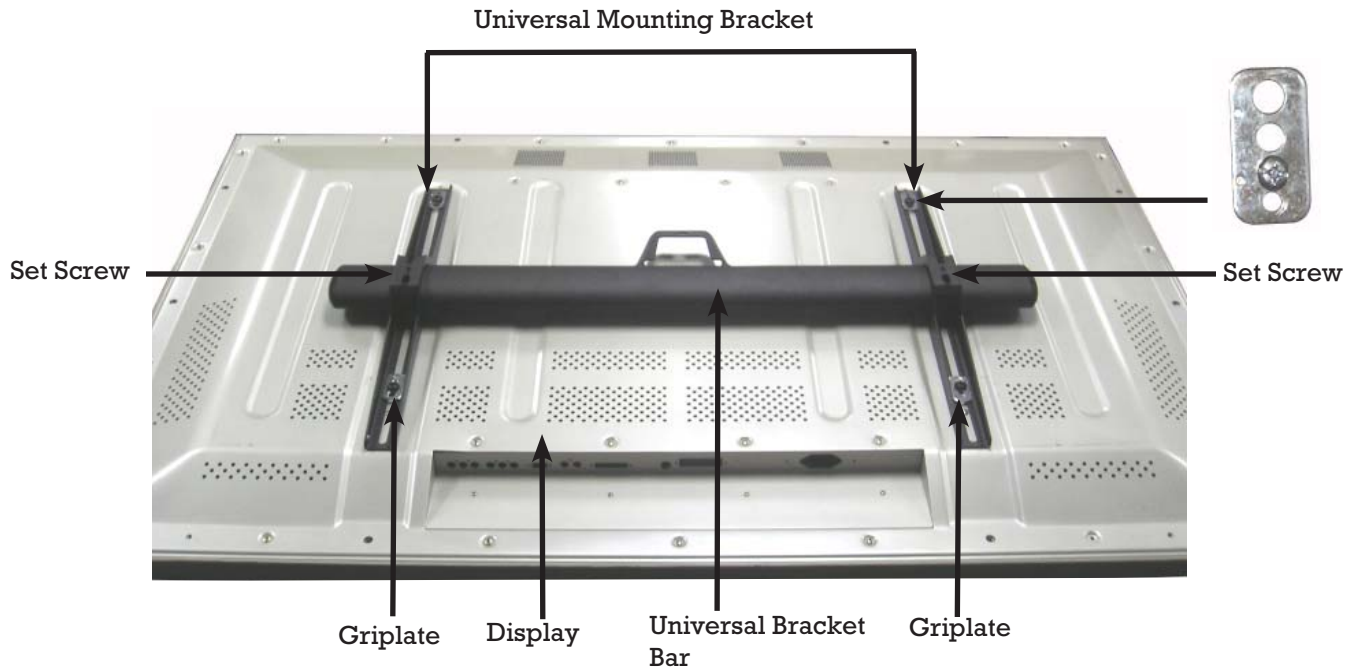


Figure 9



Attaching the Display

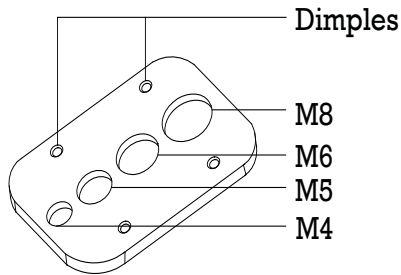

ONCE THE UNIVERSAL BRACKET BAR ASSEMBLY HAS BEEN ATTACHED TO THE DISPLAY, IT IS RECOMMENDED THAT TWO PEOPLE MOUNT THE DISPLAY, AS THE UNIT IS HEAVY AND, IF DROPPED, WILL DAMAGE THE MOUNT, THE DISPLAY, AND/OR PERSONNEL.

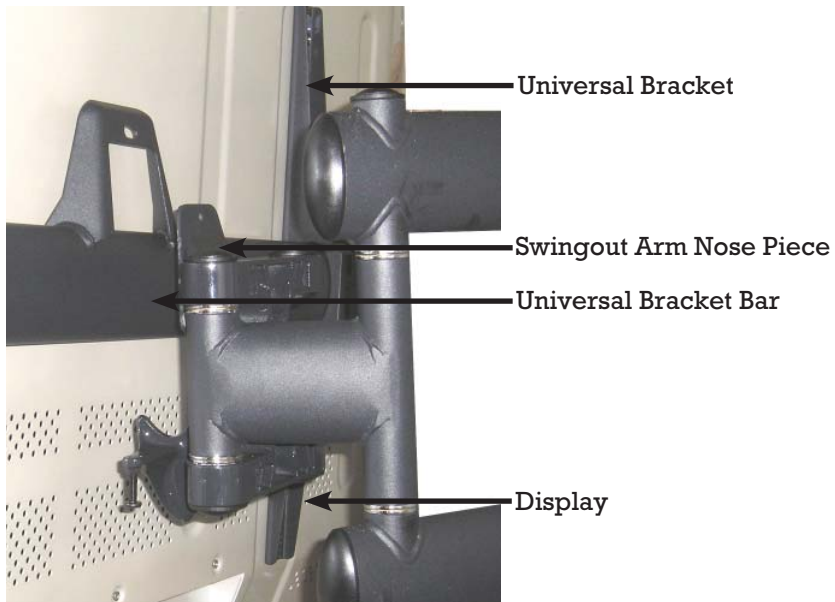


Figure 10



Figure 11

Step 1. Slide the display assembly onto the nose piece of the swingout arm.



Figure 12

Step 2. This is how the units will look when properly fitted together.



Figure 13

Step 3. Use the M6 x 12mm Phillips Head screw to lock the two units together. Tighten the screws.



Securing the Display

Once the two units have been secured together, the two (2) M6 x 30mm Phillips Head locking screws must be installed in the noted location (Figure 14) to prevent any movement.

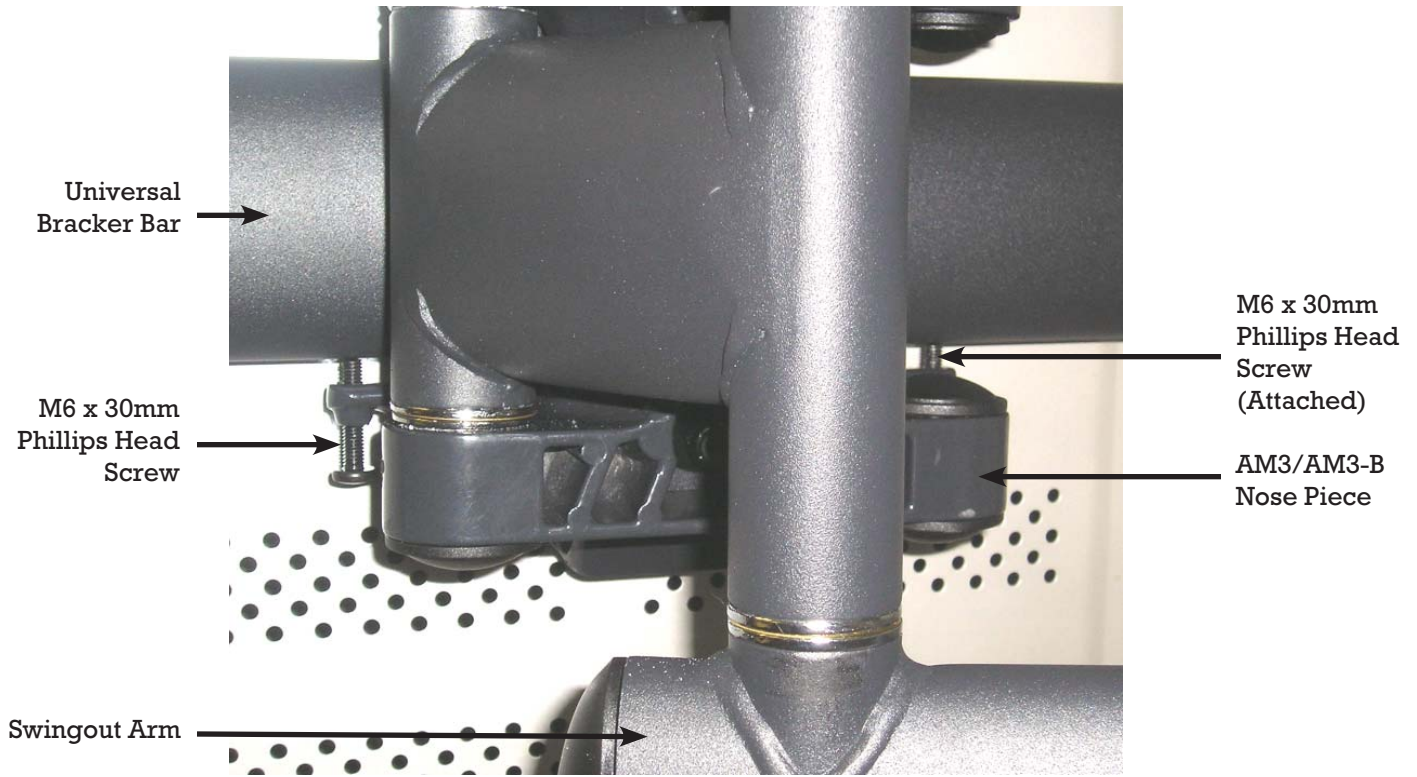


Figure 14



Tilt Positioning



Note To adjust the display, loosen the tension bolts no more than ½ turn, make the adjustments and then tighten the tension bolts.

When tilt positioning is needed to adjust the display, place a hand at the top corner of the display and the other hand at the bottom of the display (Figure 15).

To Tilt the Display

Gently push both hands inward. This motion will cause the display to tilt forward.

To Tilt the Display Back

Gently push both hands outward. This motion will cause the display to tilt forward.



Figure 15

Cable Access Holes

Once the display has been mounted and adjusted, route the cables through the cable access holes and to their respective locations (Figure 16).


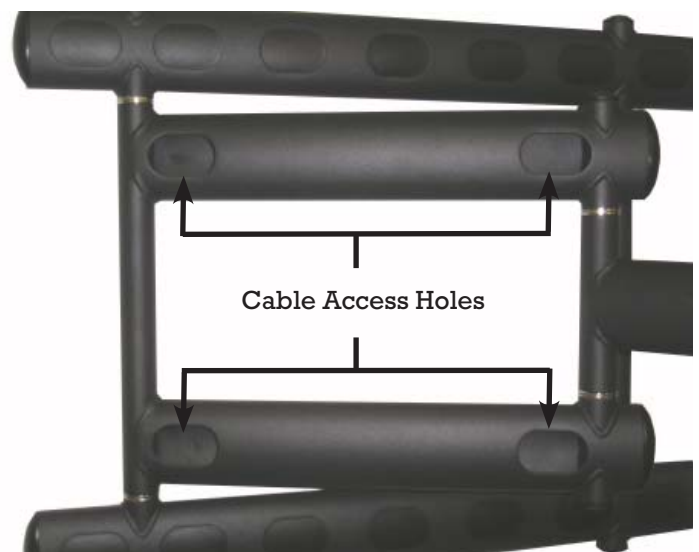


Figure 16



Technical Specification

All measurements are in inches(mm).

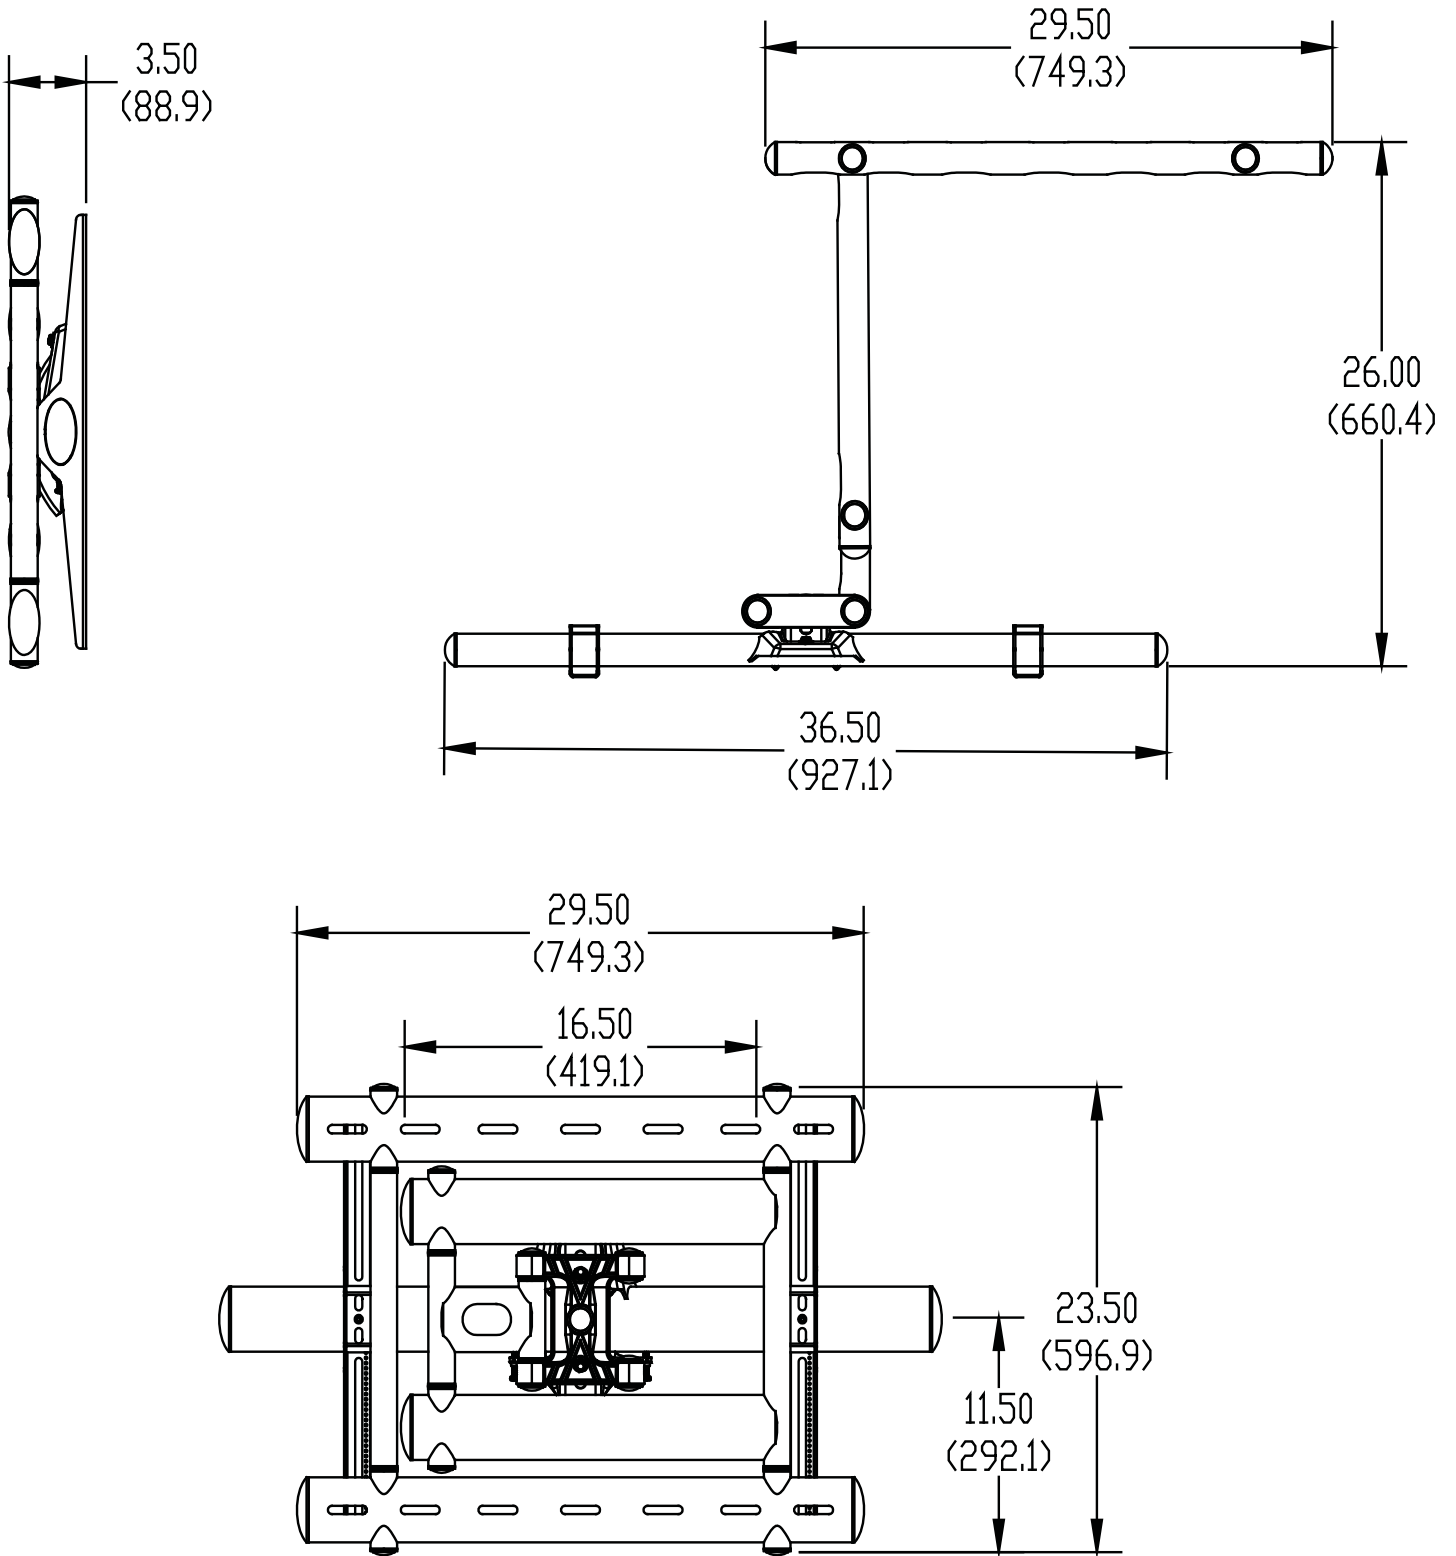



Warranty

PREMIER MOUNTS LIMITED LIFETIME WARRANTY

What and Who is Covered by this Limited Warranty and for How Long

Premier Mounts warrants this product to be free from defects in material and workmanship for the lifetime of the original owner of this product. The limited warranty is valid only for the original purchaser of the product.

What Premier Mounts Will Do

At the sole option of Premier Mounts, Premier Mounts will repair or replace any product or product part that is defective. If Premier Mounts chooses to replace a defective product or part, a replacement product or part will be shipped to you at no charge, but you must pay any labor costs.

What is Not Covered; Limitations

PREMIER MOUNTS DISCLAIMS ANY LIABILITY FOR DAMAGE TO MOUNTS, ADAPTERS, DISPLAYS, PROJECTORS, OTHER PROPERTY, OR PERSONAL INJURY RESULTING, IN WHOLE OR IN PART, FROM IMPROPER INSTALLATION, MODIFICATION, USE OR MISUSE OF ITS PRODUCTS.

PREMIER MOUNTS DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. PREMIER MOUNTS IS NOT RESPONSIBLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES, INCLUDING BUT NOT LIMITED TO, INABILITY TO USE ITS PRODUCTS OR LABOR COSTS FOR REMOVING AND REPLACING DEFECTIVE PRODUCTS OR PARTS. SOME STATES DO NOT ALLOW THE EXCLUSION OR LIMITATION OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, SO THE ABOVE LIMITATION OR EXCLUSION MAY NOT APPLY TO YOU.

What Customers Must Do for Limited Warranty Service

If you discover a problem that you think may be covered by the warranty you **MUST REPORT** it in writing to the address below within thirty (30) days. Proof of purchase (an original sales receipt) from the original consumer purchaser must accompany all warranty claims. Warranty claims must also include a description of the problem, the purchaser's name, address, and telephone number. General inquiries can be addressed to Premier Mounts Customer Service at 1-800-776-5768. Warranty claims will not be accepted over the phone or by fax.

Premier Mounts
Attn: Warranty Claim
3130 East Miraloma Ave.
Anaheim, CA 92806

How State Law Applies

THIS WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.