

# **MA/E6/S2/T8**

## **INSTALLATION INSTRUCTIONS**

### **Preparation**

- A) Upward-firing Operation: Use as shipped. (Figure 1)
- B) Downward-firing Operation: Relocate hangers to bottom of assembly. (Figure 2)
- C) Side-firing Operation: Relocate one hanger to bottom of assembly. (Figure 3)


### **Installation**


- A) Determine structurally sound hang point for enclosure.
- B) Install to desired height using hanger wire.

**NOTE!** AHJ/ local codes may require secondary <u>tie-off to structure.</u>

#### **Termination**

- A) Feed supply cable through whip (if requried) to connector.
- B) Make connections to speaker wires (Red-Positive, Black-Negative) with with approved termination devices.
- C) Feed connection points through clamp into box and tighten clamp screws.
- D) Rotate switch to desired power setting.

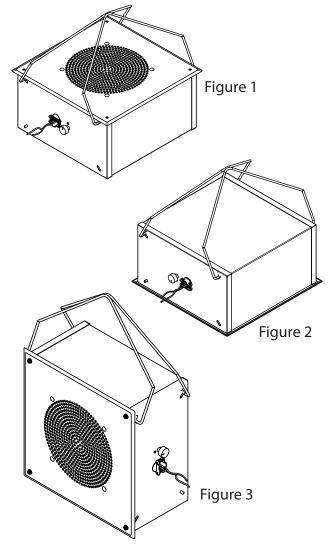

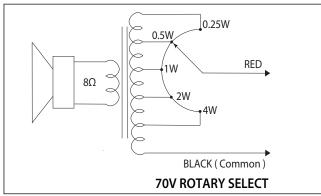

Recommended construction sequences, installation instructions, and A&E Specifications are available in various formats in the QUAM Architects' and Engineers' Resources section on the web at:

www.QuamSpeakers.com



