



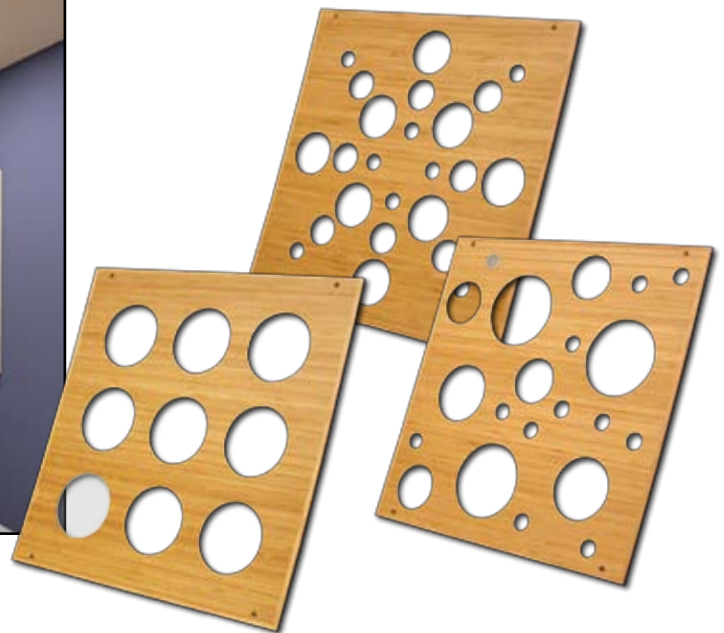


KeyPacs™ Installation Guidelines

The following instructions are provided to assist you in installing the KeyPacs panels over an ELiTE ProPanel.

(4) KeyPacs	(16) Mounting Screws	(16) Wall Anchors	(16) Cork Plugs
			

Additional items you may need for this install (not included): level, pencil, drill, drywall screws.



Congratulations on purchasing KeyPacs Diffusors! Acoustic sound diffusion keeps sound waves from grouping by scattering the sound more evenly throughout the room. Make your room sound larger and more live by adding diffusion to your space.

Most rooms are not dedicated to one particular application. Sometimes you want the room to have a more controlled, “dry” character, while other times you would like the room to open up and breathe. The Perforated Absorption Covers allow you to have the best of both worlds in your listening environment. These specially designed panels will tune your absorption treatment to be more effective in the low and mid range while not killing off the higher frequencies – yielding a room that is well balanced across the frequency range. With an easy installation method, the Perforated Absorption Covers can be put into place within seconds allowing you to experiment with various placement options, thus tailoring your sound to your needs.

KeyPacs™ Installation Guidelines



Wall installation

1. Using a level, locate where panels will hang.
2. Nail panel in place. Rotate each panel 90 degrees from the previous to add variation to the pattern.
3. Button covers conceal screws after installation.