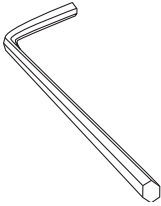





## Wave6™ Installation Guidelines for Cloud Configuration




The following instructions are provided to assist you in configuring the **Wave6 System** in an overhead 'cloud configuration'. This configuration allows the **Wave6** to be hung above a mix or any other critical listening position.

If the **Wave6 System** is to be mounted to the sidewalls, **Auralex Mounting Blocks** (included in *WaveLens* packaging) should be used.

### Hanging Hardware






(2) Hex Wrenches	(12) Connector Bolts	(12) Connector Nuts	(4) Cable Assemblies
			

### Wall Mount Hardware

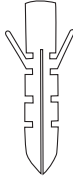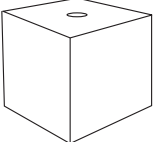(8) Mounting Screws	(8) Wall Anchors	(24) Mounting Blocks
		

Additional items you may need for this install (not included): level, pencil, drill, ladder, drywall screws, cable, chain, aircraft wire, nylon line etc.




- 1 CHOOSE LAYOUT:** Arrange **WaveLens** on floor to achieve desired pattern. See below for layout ideas. Ensure the side to be viewed from below is face down on floor.

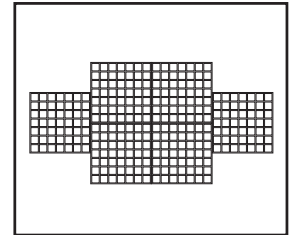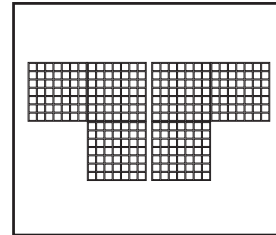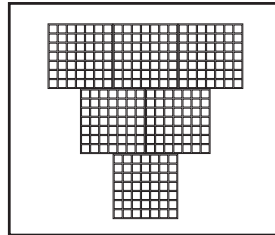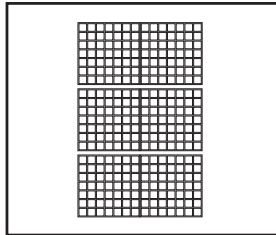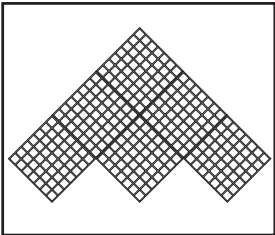

- 2 MARK & DRILL HOLES:** Drill using 1/4" drill bit

**Side-By-Side Mounting:** Each attached **WaveLens** should contain a minimum of 2 connector bolt pairs. Mark the drill hole position from each end of the **WaveLens** using the template on the following page.

**Staggered-Mounting:** For staggered connections, mark **WaveLens** (A) with the template. Drill holes. Position along side **WaveLens** (B) according to desired pattern. Mark drill hole position for **WaveLens** (B) through existing drill hole on **WaveLens** (A).

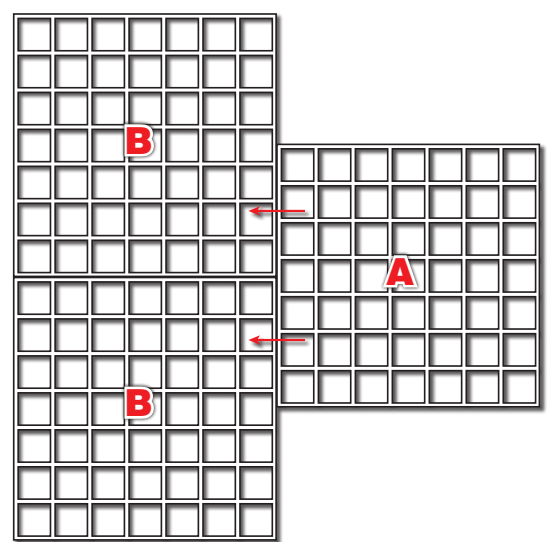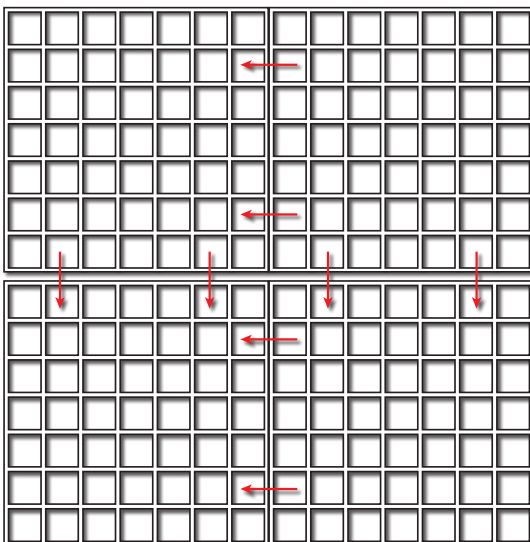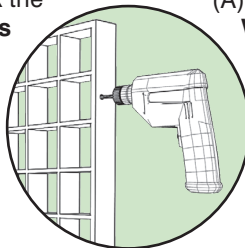





**TIP**

Do not force connector nut through the WaveLens. If needed, drill a little bit bigger hole to avoid splitting the bamboo.

**3 BOLT TOGETHER:** Prior to assembly, determine which connector bolt pairs will include the suspension cables. Assemble these in step 4 below. Insert connector nut into hole from inside of **WaveLens**. Line up holes of opposite **WaveLens** and thread the connector bolt in to the connector nut. Secure on both sides with the supplied hex wrenches. Do not over tighten to avoid splitting the bamboo. Repeat for each connection.

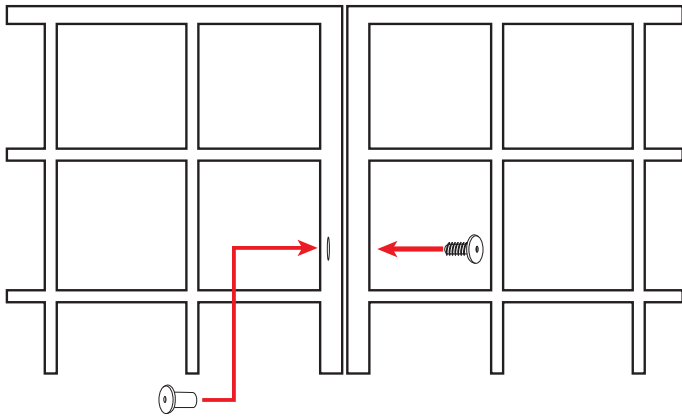

**4 HANGING POSITIONS:** Thread the connector nut through the eyelet of the cable assembly and then through the hole in the WaveLens. Insert the connector bolt into the matching hole in the adjacent WaveLens. Secure on both sides with the supplied hex wrenches.

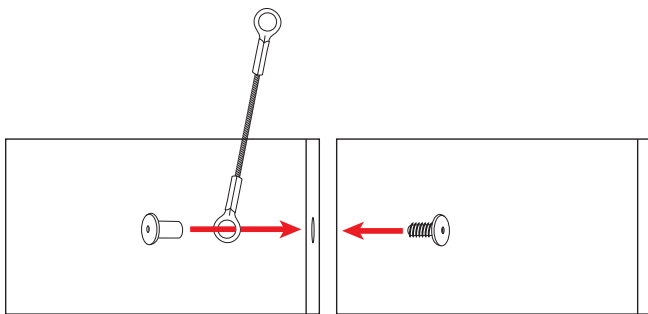

*Disclaimer: Auralex Acoustics, Inc. has provided these instructions as a general installation guide. Auralex is not responsible for installation of products.*

