



50Ω RG8/U BNC Connector

3 piece BNC

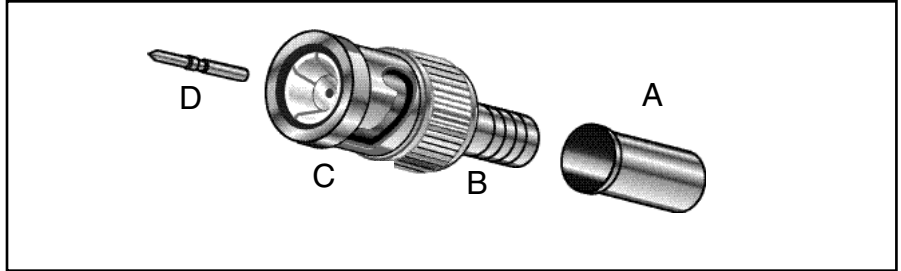

PART NO.	CABLE TYPE	A CRIMP FERRULE HEX SIZE	B FERRULE I.D.	C CONNECTOR BODY	D CONTACT I.D.	JACKET O.D.	WPW CABLES
CN-BM53-8	RG8/U	.445"	.410"	.290"	.062"	.405" (10.29mm)	810

Assembly Instructions:

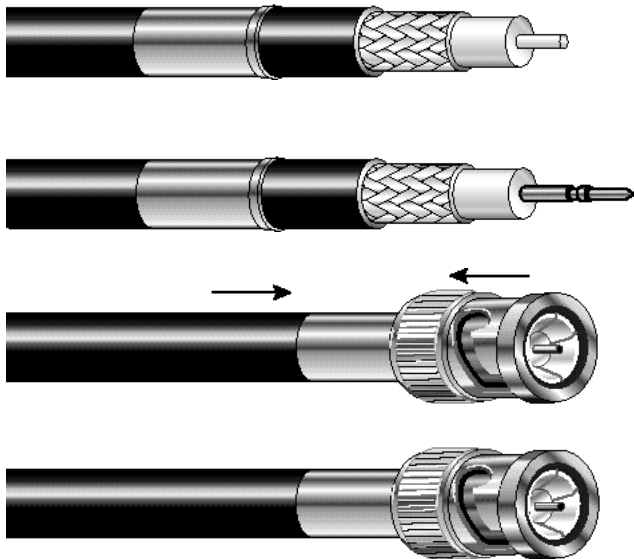

1. Trim Cables as shown, taking care not to nick the inner Conductor or braid.
2. Slip crimp sleeve over cable. Place inner conductor into contact, take care that inner dielectric is square and touching center contact. Crimp with the appropriate Crimp tool.
3. Flair outer braid, slip the dielectric sleeve over the dielectric. Push the contact or center pin into the connector body until a gentle snap is felt, indicating the contact is in place. Slide the crimp sleeve in place being sure it butts against rear of connector body. Crimp with the appropriate tool. Crimp only once to the back of the crimp sleeve using the appropriate Crimp.

WEST PENN WIRE

PART NO.	CABLE	CRIMP BRAID HEX	Center Pin Crimp	CRIMP TOOL	STRIP TOOL
CN-BM53-8	RG8/U	.445"	.068"	TL-113	TL-124

2833 West Chestnut Street
Washington, PA 15301

724-222-7060
FAX: 724-222-6420