


SW 1: STRONG WALL SLATWALL RAIL INSTALLATION INSTRUCTIONS

(For use with 3" slatwall fixtures)

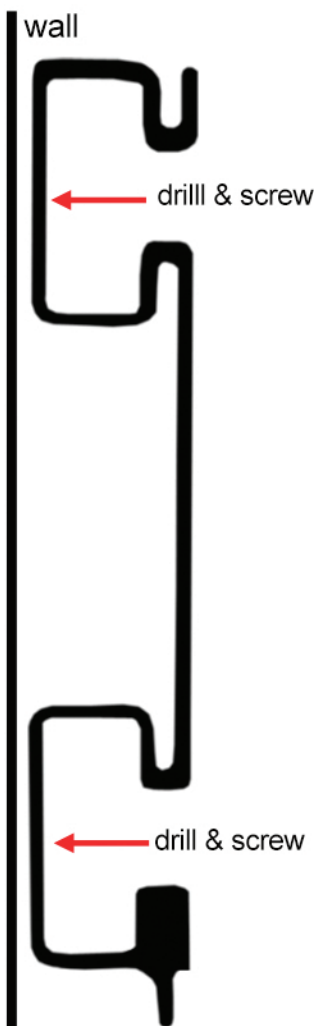

1. Place the Strong Wall on the wall and level it with a 4ft. level.
2. Draw a line along the entire length of the top of the rail.
3. Locate the studs along this line.
Be sure to locate EVERY available stud!
4. Transfer these stud marks to the inside channels of the Strong Wall.
5. Drill holes through the aluminum Strong Wall at these stud locations.
6. Match the top of the Strong Wall to the line drawn on the wall.
7. Mount with the provided screws into the drilled holes. ***Be sure to anchor to the wall at EVERY available stud!***

Tools/Supplies Needed:

- Drill
- 3/16" drill bit
- 4ft. level
- Phillips driver

Provided screws are #10x2 (16 for 8 ft. or 8 for 4 ft.)

SW 1 EC: END CAPS (OPTIONAL) INSTALLATION INSTRUCTIONS:

Slide over the end of the Strong Wall (as shown) and allow friction to hold in place.
(Double-sided tape can be used if adhesive is required.)

End Caps are sold separately.

