



NT1 & AI 1 Quickstart Guide

NT1


1 Put Shock Mount on Mic Stand

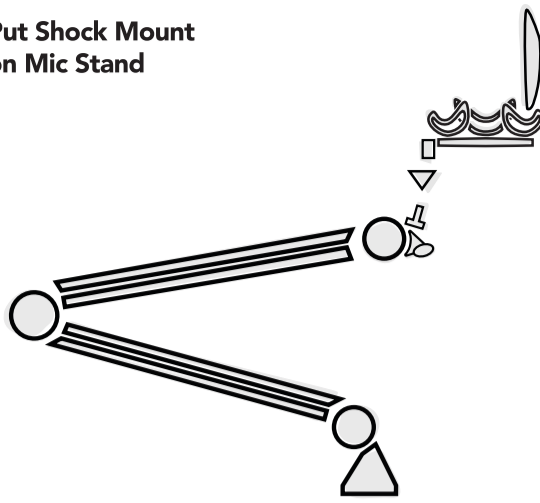

2 Mount NT1 in SMR Shock Mount

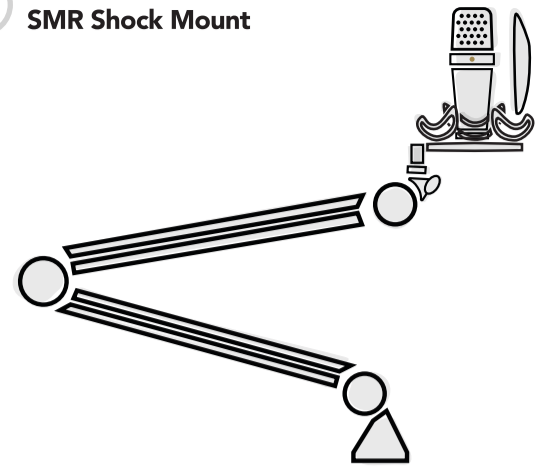


3 Connect XLR Cable to NT1

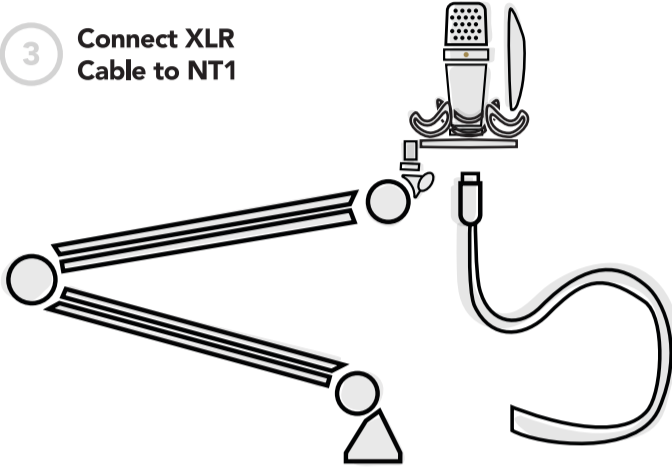


AI-1 INTERFACE

4 Connect AI-1 Interface to computer

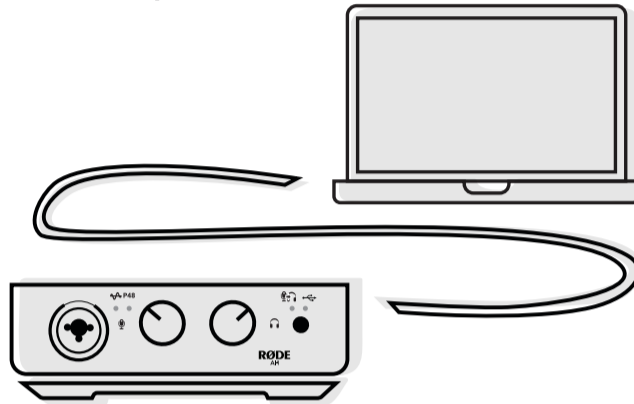


5 Connect NT1 to AI-1 Interface

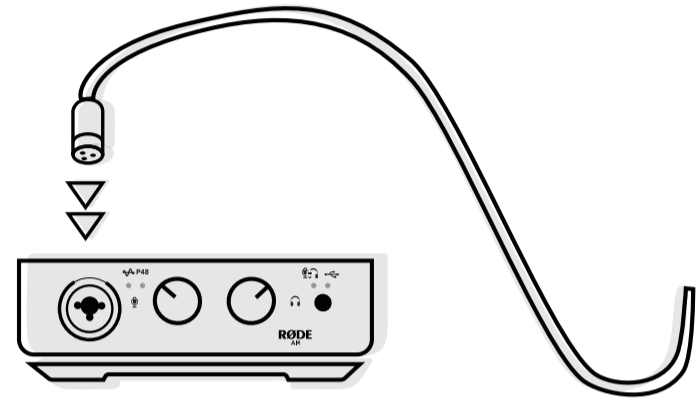


6 Enable Phantom Power (P48)
This is required for condenser microphones

A Enable P48 for NT1
Press left knob to enable,
P48 light illuminates red

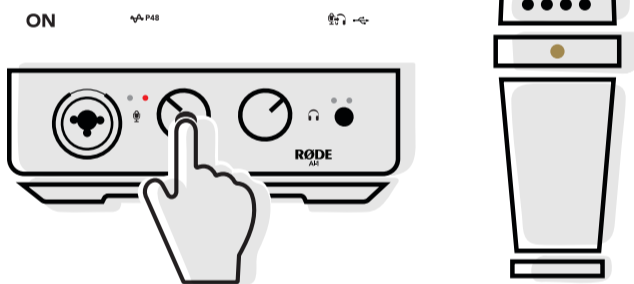


B Disable P48 for dynamic microphones
Press left knob to disable,
P48 light darkens

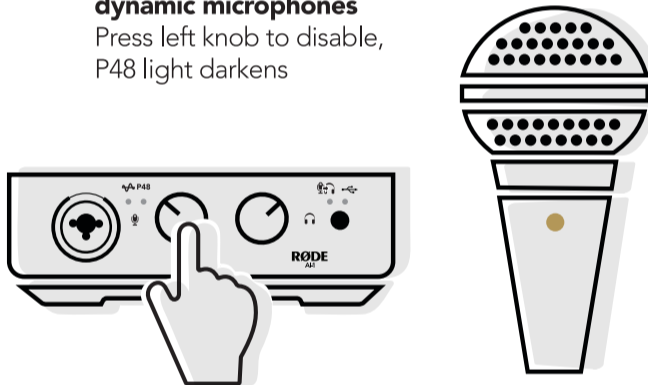


7 Set Input Level


A Green is good

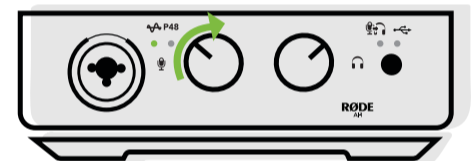


B Turn down when Red

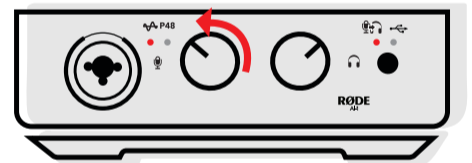


8 Connect headphones, adjust volume
*headphones not included

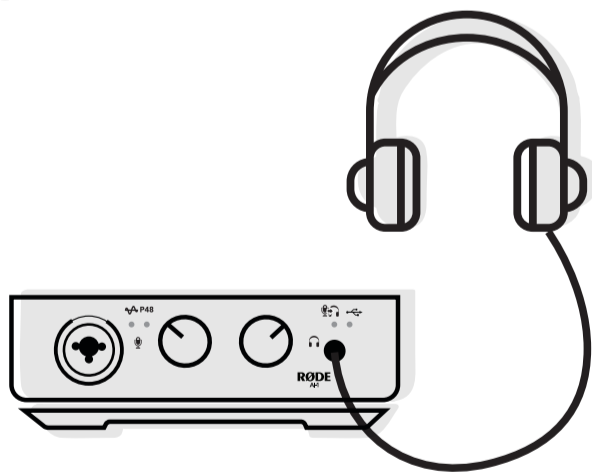

9 Enable Direct Monitor by pressing right knob

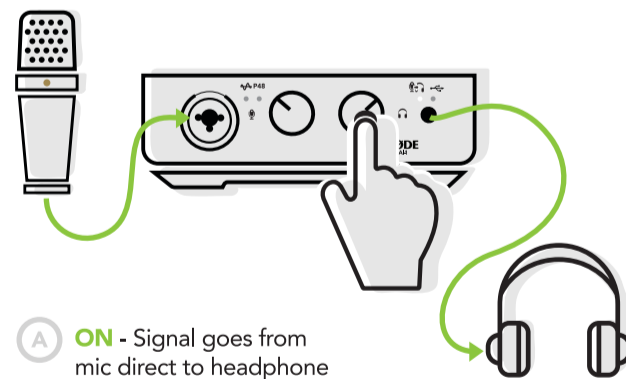


A ON - Signal goes from mic direct to headphone output

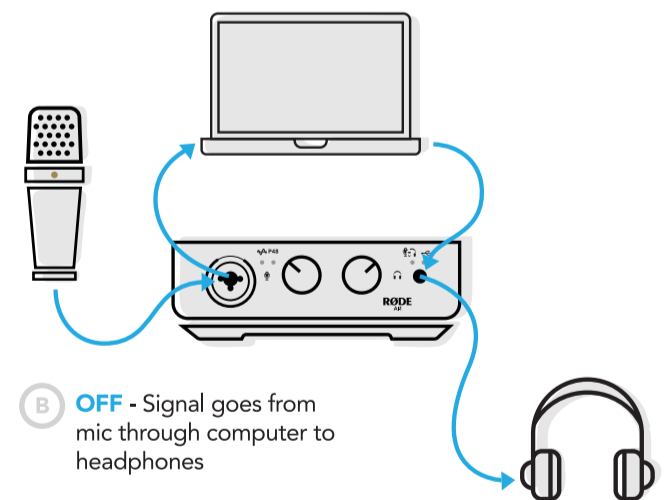

B OFF - Signal goes from mic through computer to headphones

10 If desired, connect powered speakers
*disconnect headphones to activate speaker output

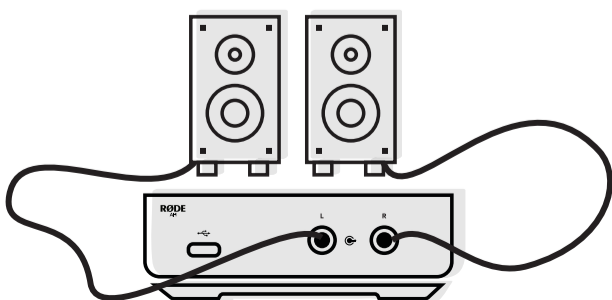

You're now
ready to create!

Love your new product?
Share with us #rodeai1

@rodemic
@rodemics
rodemic



Scan the
QR code
to find
out more

www.rodemic.com