


# Komply™ Ribbon Flex

How to Cut Komply™ LED Ribbon Flex Strips




blizzard  
LIGHTING

## Step 1: Select the Cut Point

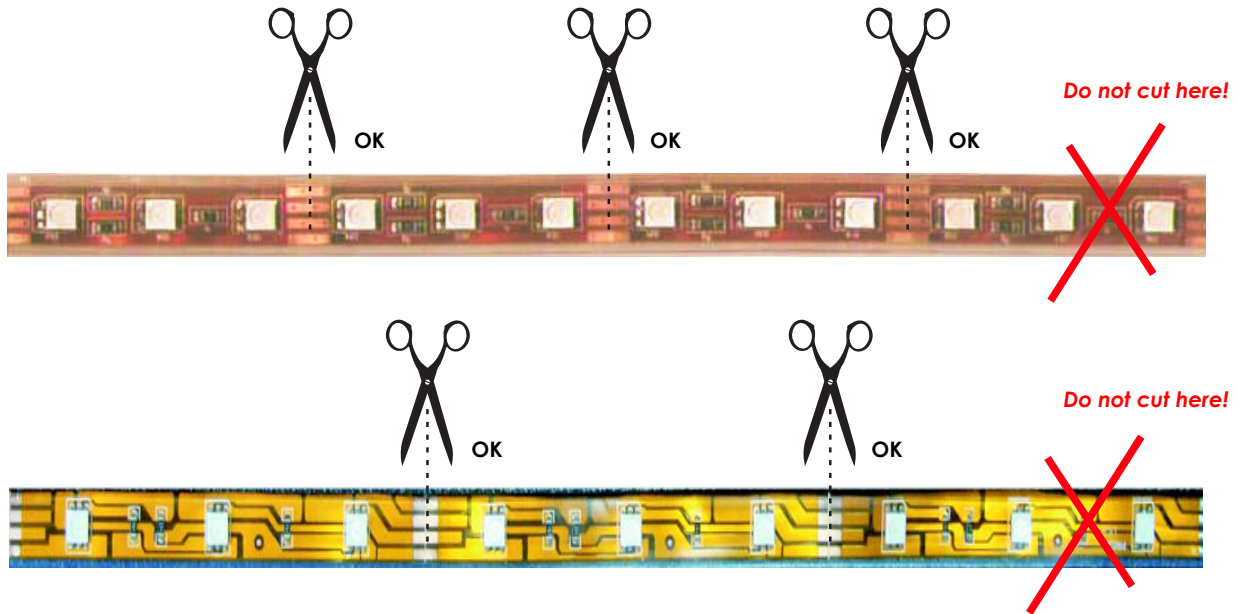


## Step 2: Ribbon Connector

If you don't need a ribbon connector, skip to step 3.

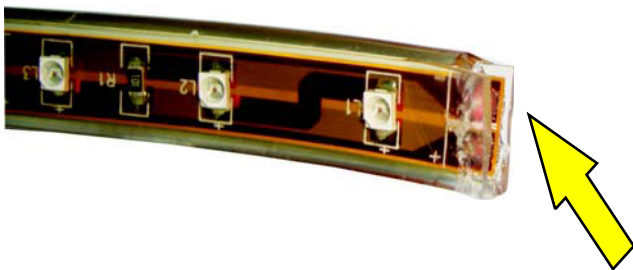



After the strip is cut, carefully cut and clear here to assure that there is enough space for soldering ribbon connector wires.

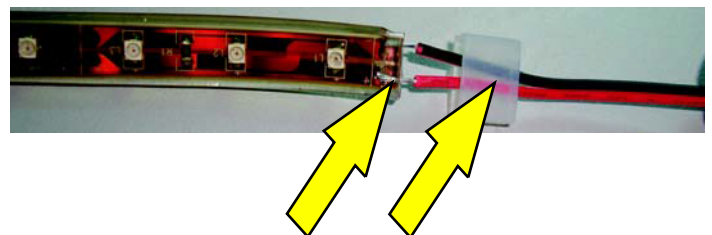

Insert the connector wires through the end cap, and solder the wires to the pads.

## Step 3: Secure the End Cap

The final step is to simply glue the end cap back on to the end of the strip.

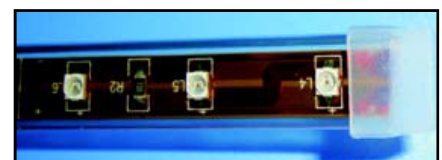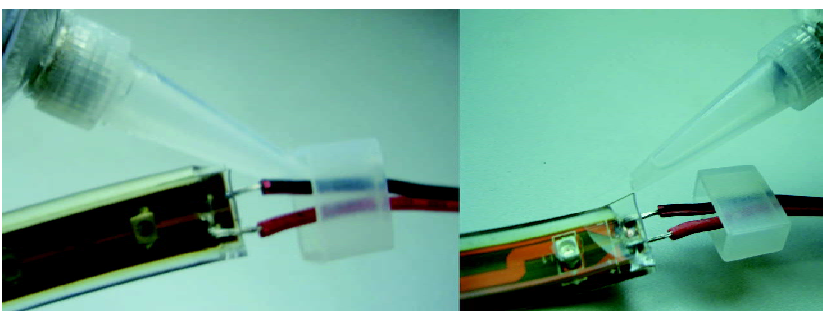

WWW.BLIZZARDLIGHTING.COM