


### WA503 SINGLE RACK, FRONT-MOUNT ANTENNA CONVERSION KIT


#### Bracket Installation

1. Remove the screws from each side of the receiver. See Figure 1.

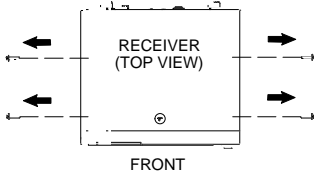

**FIGURE 1**

2. Secure the brackets (not supplied with the WA503 kit) to the sides of the receiver with the screws removed in Step 1. See Figure 2.

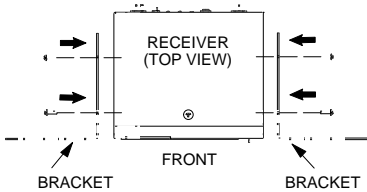


**FIGURE 2**

**NOTE:** There are four holes in each bracket. Use the rear holes if the receiver is to be recessed; use the front holes to mount it flush to the rack.


#### WA503 Adapter & Cable Installation

1. Insert the WA503 adapters through the holes in each bracket, and secure them from each side, using the attaching hardware. See Figure 3.

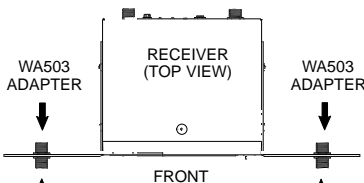


**FIGURE 3**

2. Connect the supplied antenna cables to the receiver antenna inputs and WA503 adapters. See Figure 4.

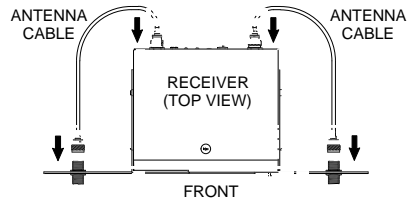


**FIGURE 4**

3. Screw the antennas into the bulk-head adaptors protruding through the front panel. See Figure 5.

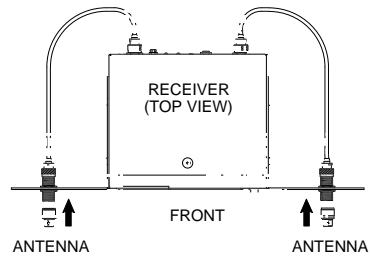

**FIGURE 5**

4. Insert the receiver into the equipment rack and secure the brackets to the rack with the supplied screws. See Figure 6.

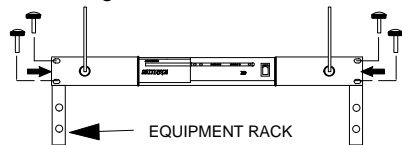

**FIGURE 6**

**NOTE:** For more information, call Shure Customer Service at 1-800-25-SHURE. Outside the U.S.A., call 847-866-2553.